



HIRSCHMANN

A **BELDEN** BRAND

Reference Manual

Command Line Interface

Industrial ETHERNET (Gigabit) Switch

RS20/RS30/RS40, MS20/MS30

L2E Rel. 8.0

The naming of copyrighted trademarks in this manual, even when not specially indicated, should not be taken to mean that these names may be considered as free in the sense of the trademark and tradename protection law and hence that they may be freely used by anyone.

© 2013 Hirschmann Automation and Control GmbH

Manuals and software are protected by copyright. All rights reserved. The copying, reproduction, translation, conversion into any electronic medium or machine scannable form is not permitted, either in whole or in part. An exception is the preparation of a backup copy of the software for your own use. For devices with embedded software, the end-user license agreement on the enclosed CD applies

The performance features described here are binding only if they have been expressly guaranteed in the contract. This publication has been created by Hirschmann Automation and Control GmbH according to the best of our knowledge. Hirschmann reserves the right to change the contents of this manual without prior notice. Hirschmann can give no guarantee in respect of the correctness or accuracy of the details in this publication.

Hirschmann can accept no responsibility for damages, resulting from the use of the network components or the associated operating software. In addition, we refer to the conditions of use specified in the license contract.

Printed in Germany 4/30/13

Hirschmann Automation and Control GmbH
Stuttgarter Str. 45-51
72654 Neckartenzlingen
Germany
Tel.: +49 1805 141538

05-05/2013

Content

About this Manual	15
Maintenance	16
1 Command Structure	17
1.1 Format	18
1.1.1 Command	19
1.1.2 Parameters	19
1.1.3 Values	19
1.1.4 Conventions	21
1.1.5 Annotations	22
1.1.6 Special keys	23
1.1.7 Secrets in scripts	24
2 Quick Start up	25
2.1 Quick Starting the Switch	26
2.2 System Info and System Setup	27
3 Mode-based CLI	33
3.1 Mode-based Topology	34
3.2 Mode-based Command Hierarchy	35
3.3 Flow of Operation	37
3.4 “No” Form of a Command	39
3.4.1 Support for “No” Form	39
3.4.2 Behavior of Command Help (“?”)	39
4 CLI Commands: Base	41
4.1 System Information and Statistics	42
4.1.1 show	42
4.1.2 show address-conflict	42
4.1.3 show arp switch	43
4.1.4 show bridge address-learning	43
4.1.5 show bridge address-relearn-detect	44
4.1.6 show bridge aging-time	44

4.1.7	show bridge duplex-mismatch-detect	45
4.1.8	show bridge framesize	45
4.1.9	show bridge vlan-learning	45
4.1.10	bridge framesize	46
4.1.11	show config-watchdog	46
4.1.12	show device-status	47
4.1.13	show authentication	48
4.1.14	show eventlog	48
4.1.15	show interface	49
4.1.16	show interface ethernet	51
4.1.17	show interface switchport	58
4.1.18	show interface utilization	59
4.1.19	show logging	60
4.1.20	show mac-addr-table	61
4.1.21	show signal-contact	62
4.1.22	show slot	64
4.1.23	show running-config	65
4.1.24	show sysinfo	66
4.1.25	show temperature	68
4.1.26	utilization alarm-threshold	69
4.2	Management VLAN Commands	70
4.2.1	network mgmt_vlan	70
4.3	Class of Service (CoS) Commands	71
4.3.1	classofservice dot1p-mapping	72
4.3.2	classofservice ip-dscp-mapping	73
4.3.3	classofservice trust	74
4.3.4	show classofservice dot1p-mapping	75
4.3.5	show classofservice ip-dscp-mapping	76
4.3.6	show classofservice trust	77
4.3.7	vlan port priority all	77
4.3.8	vlan priority	78
4.4	Management Commands	79
4.4.1	transport input telnet	79
4.4.2	bridge address-learning	80
4.4.3	bridge address-relearn detect operation	80
4.4.4	bridge address-relearn detect threshold	81
4.4.5	bridge aging-time	82
4.4.6	bridge fast-link-detection	83
4.4.7	bridge duplex-mismatch-detect operation	83

4.4.8	bridge vlan-learning	84
4.4.9	ethernet-ip	84
4.4.10	network javascriptmode	85
4.4.11	network mgmt-access add	86
4.4.12	network mgmt-access delete	86
4.4.13	network mgmt-access modify	87
4.4.14	network mgmt-access operation	88
4.4.15	network mgmt-access status	88
4.4.16	network parms	89
4.4.17	network protocol	89
4.4.18	network priority	90
4.4.19	profinetio	91
4.4.20	serial timeout	92
4.4.21	set prompt	92
4.4.22	show ethernet-ip	93
4.4.23	show network	93
4.4.24	show network mgmt-access	95
4.4.25	show profinetio	96
4.4.26	show serial	96
4.4.27	show snmp-access	97
4.4.28	show snmpcommunity	98
4.4.29	show snmptrap	99
4.4.30	show telnet	100
4.4.31	show telnetcon	101
4.4.32	show trapflags	102
4.4.33	snmp-access global	103
4.4.34	snmp-access version	104
4.4.35	snmp-access version v3-encryption	105
4.4.36	snmp-server	106
4.4.37	snmp-server community	107
4.4.38	snmp-server contact	108
4.4.39	snmp-server community ipaddr	109
4.4.40	snmp-server community ipmask	110
4.4.41	snmp-server community mode	111
4.4.42	snmp-server community ro	112
4.4.43	snmp-server community rw	112
4.4.44	snmp-server location	112
4.4.45	snmp-server sysname	113
4.4.46	snmp-server enable traps	113
4.4.47	snmp-server enable traps chassis	114
4.4.48	snmp-server enable traps l2redundancy	115

4.4.49	snmp-server enable traps linkmode	116
4.4.50	snmp-server enable traps multiusers	117
4.4.51	snmp-server enable traps port-sec	118
4.4.52	snmp-server enable traps stpmode	119
4.4.53	snmptrap	120
4.4.54	snmptrap ipaddr	121
4.4.55	snmptrap mode	122
4.4.56	snmptrap snmpversion	123
4.4.57	telnetcon maxsessions	124
4.4.58	telnetcon timeout	125
4.5	Syslog Commands	126
4.5.1	logging buffered	126
4.5.2	logging buffered wrap	127
4.5.3	logging cli-command	128
4.5.4	logging console	129
4.5.5	logging host	130
4.5.6	logging host reconfigure	131
4.5.7	logging host remove	131
4.5.8	logging snmp-requests get operation	131
4.5.9	logging snmp-requests set operation	132
4.5.10	logging snmp-requests get severity	132
4.5.11	logging snmp-requests set severity	133
4.5.12	logging syslog	133
4.5.13	logging syslog port	134
4.6	Device Configuration Commands	135
4.6.1	auto-disable reason	135
4.6.2	auto-disable timer	137
4.6.3	auto-negotiate	138
4.6.4	auto-negotiate all	139
4.6.5	cable-crossing	140
4.6.6	media-module	141
4.6.7	dip-switch operation	142
4.6.8	macfilter	143
4.6.9	macfilter adddest	144
4.6.10	macfilter adddest all	145
4.6.11	monitor session	146
4.6.12	monitor session mode	148
4.6.13	monitor session <session-id> source/destination	149
4.6.14	set igmp	150
4.6.15	set igmp	151

4.6.16	set igmp aging-time-unknown	151
4.6.17	set igmp automatic-mode	152
4.6.18	set igmp forward-all	153
4.6.19	set igmp forward-unknown	154
4.6.20	set igmp static-query-port	155
4.6.21	set igmp groupmembershipinterval	156
4.6.22	set igmp interfacemode	157
4.6.23	set igmp lookup-interval-unknown	157
4.6.24	set igmp lookup-resp-time-unknown	158
4.6.25	set igmp maxresponse	159
4.6.26	set igmp querier max-response-time	160
4.6.27	set igmp querier protocol-version	160
4.6.28	set igmp querier status	161
4.6.29	set igmp querier tx-interval	161
4.6.30	set igmp query-ports-to-filter	162
4.6.31	set pre-login-banner text	163
4.6.32	selftest ramtest	163
4.6.33	selftest reboot-on-hdxerror	164
4.6.34	selftest reboot-on-error	165
4.6.35	show auto-disable brief	166
4.6.36	show auto-disable reasons	167
4.6.37	show dip-switch	168
4.6.38	show igmpsnooping	169
4.6.39	show mac-filter-table igmpsnooping	170
4.6.40	show mac-filter-table multicast	171
4.6.41	show mac-filter-table static	172
4.6.42	show mac-filter-table staticfiltering	173
4.6.43	show mac-filter-table stats	174
4.6.44	show monitor session	175
4.6.45	show port	176
4.6.46	show rmon-alarm	177
4.6.47	show selftest	178
4.6.48	show storm-control	179
4.6.49	show storm-control limiters port	179
4.6.50	show vlan	180
4.6.51	show vlan brief	182
4.6.52	show vlan port	183
4.6.53	shutdown	184
4.6.54	shutdown all	185
4.6.55	snmp trap link-status	186
4.6.56	snmp trap link-status all	187

4.6.57	spanning-tree bpdumigrationcheck	188
4.6.58	speed	189
4.6.59	storm-control broadcast	190
4.6.60	storm-control egress-limiting	190
4.6.61	storm-control ingress-limiting	191
4.6.62	storm-control ingress-mode	191
4.6.63	storm-control broadcast (port-related)	192
4.6.64	storm-control egress-limit	192
4.6.65	storm-control ingress-limit	193
4.6.66	storm-control ingress-mode	193
4.6.67	storm-control flowcontrol	194
4.6.68	storm-control flowcontrol per port	195
4.6.69	vlan	196
4.6.70	vlan0-transparent-mode	197
4.6.71	vlan acceptframe	198
4.6.72	vlan database	199
4.6.73	vlan ingressfilter	200
4.6.74	vlan name	201
4.6.75	vlan participation	202
4.6.76	vlan participation all	203
4.6.77	vlan port acceptframe all	204
4.6.78	vlan port ingressfilter all	205
4.6.79	vlan port pvid all	206
4.6.80	vlan port tagging all	207
4.6.81	vlan pvid	208
4.6.82	vlan tagging	209
4.7	User Account Management Commands	210
4.7.1	disconnect	210
4.7.2	show loginsession	211
4.7.3	show users	212
4.7.4	users defaultlogin	213
4.7.5	users login <user>	213
4.7.6	users access	214
4.7.7	users name	215
4.7.8	users passwd	216
4.7.9	users snmpv3 accessmode	217
4.7.10	users snmpv3 authentication	218
4.7.11	users snmpv3 encryption	219
4.8	System Utilities	220
4.8.1	address-conflict	220

4.8.2	boot skip-aca-on-boot	221
4.8.3	show boot skip-aca-on-boot	221
4.8.4	clear eventlog	222
4.8.5	traceroute	222
4.8.6	clear arp-table-switch	223
4.8.7	clear config	223
4.8.8	clear config factory	223
4.8.9	clear counters	224
4.8.10	clear hiper-ring	224
4.8.11	clear igmpsnooping	224
4.8.12	clear mac-addr-table	225
4.8.13	clear pass	225
4.8.14	clear signal-contact	226
4.8.15	clear traplog	226
4.8.16	clear ring-coupling	227
4.8.17	clear vlan	227
4.8.18	config-watchdog	228
4.8.19	copy	228
4.8.20	device-status connection-error	234
4.8.21	device-status monitor	235
4.8.22	logout	236
4.8.23	ping	236
4.8.24	signal-contact connection-error	237
4.8.25	signal-contact	237
4.8.26	temperature	239
4.8.27	reboot	240
4.8.28	show reboot	241
4.8.29	reload	242
4.8.30	show reload	243
4.9	LLDP - Link Layer Discovery Protocol	244
4.9.1	show lldp	244
4.9.2	show lldp config	244
4.9.3	show lldp config chassis	245
4.9.4	show lldp config chassis admin-state	245
4.9.5	show lldp config chassis notification-interval	245
4.9.6	show lldp config chassis re-init-delay	246
4.9.7	show lldp config chassis tx-delay	246
4.9.8	show lldp config chassis tx-hold-mult	246
4.9.9	show lldp config chassis tx-interval	247
4.9.10	show lldp config port	248

4.9.11	show lldp config port tlv	249
4.9.12	show lldp remote-data	250
4.9.13	lldp	252
4.9.14	lldp config chassis admin-state	253
4.9.15	lldp config chassis notification-interval	253
4.9.16	lldp config chassis re-init-delay	254
4.9.17	lldp config chassis tx-delay	254
4.9.18	lldp config chassis tx-hold-mult	255
4.9.19	lldp chassis tx-interval	255
4.9.20	clear lldp config all	256
4.9.21	lldp admin-state	256
4.9.22	lldp fdb-mode	257
4.9.23	lldp hm-mode	257
4.9.24	lldp max-neighbors	258
4.9.25	lldp notification	258
4.9.26	lldp tlv link-aggregation	258
4.9.27	lldp tlv mac-phy-config-state	259
4.9.28	lldp tlv max-frame-size	259
4.9.29	lldp tlv mgmt-addr	259
4.9.30	lldp tlv pnio	260
4.9.31	lldp tlv pnio-alias	260
4.9.32	lldp tlv pnio-mrp	260
4.9.33	lldp tlv port-desc	261
4.9.34	lldp tlv port-vlan	261
4.9.35	lldp tlv gmrp	261
4.9.36	lldp tlv igmp	262
4.9.37	lldp tlv portsec	262
4.9.38	lldp tlv ptp	262
4.9.39	lldp tlv protocol	263
4.9.40	lldp tlv sys-cap	263
4.9.41	lldp tlv sys-desc	263
4.9.42	lldp tlv sys-name	264
4.9.43	lldp tlv vlan-name	264
4.9.44	name	265
4.10	SNTP - Simple Network Time Protocol	266
4.10.1	show sntp	266
4.10.2	show sntp anycast	268
4.10.3	show sntp client	268
4.10.4	show sntp operation	269
4.10.5	show sntp server	270

4.10.6	show sntp status	270
4.10.7	show sntp time	271
4.10.8	no sntp	271
4.10.9	sntp anycast address	272
4.10.10	sntp anycast transmit-interval	272
4.10.11	sntp anycast vlan	273
4.10.12	sntp client accept-broadcast	273
4.10.13	sntp client disable-after-sync	274
4.10.14	sntp client offset	274
4.10.15	sntp client request-interval	275
4.10.16	no sntp client server	275
4.10.17	sntp client server primary	276
4.10.18	sntp client server secondary	277
4.10.19	sntp client threshold	278
4.10.20	sntp operation	279
4.10.21	sntp server disable-if-local	280
4.10.22	sntp time system	280
4.11	PoE - Power over Ethernet	281
4.11.1	show inlinepower	281
4.11.2	show inlinepower port	281
4.11.3	inlinepower (Global Config)	282
4.11.4	inlinepower (Interface Config)	283
4.11.5	clear inlinepower	283
5	CLI Commands: Switching	285
5.1	Spanning Tree Commands	287
5.1.1	show spanning-tree	287
5.1.2	show spanning-tree interface	290
5.1.3	show spanning-tree mst detailed	291
5.1.4	show spanning-tree mst port detailed	292
5.1.5	show spanning-tree mst port summary	295
5.1.6	show spanning-tree mst summary	296
5.1.7	show spanning-tree summary	297
5.1.8	show spanning-tree vlan	298
5.1.9	spanning-tree	299
5.1.10	spanning-tree auto-edgeport	300
5.1.11	spanning-tree bpduguard	301
5.1.12	spanning-tree configuration name	302
5.1.13	spanning-tree configuration revision	303
5.1.14	spanning-tree edgeport	304

5.1.15	spanning-tree forceversion	305
5.1.16	spanning-tree forward-time	306
5.1.17	spanning-tree guard loop	307
5.1.18	spanning-tree guard none	308
5.1.19	spanning-tree guard root	309
5.1.20	spanning-tree hello-time	310
5.1.21	spanning-tree hold-count	311
5.1.22	spanning-tree max-age	312
5.1.23	spanning-tree max-hops	313
5.1.24	spanning-tree mst	314
5.1.25	spanning-tree mst priority	316
5.1.26	spanning-tree mst vlan	317
5.1.27	spanning-tree mst instance	318
5.1.28	spanning-tree port mode	319
5.1.29	spanning-tree port mode all	320
5.1.30	spanning-tree stp-mrp-mode	321
5.1.31	spanning-tree tcnguard	322
5.2	MRP	323
5.2.1	show mrp	323
5.2.2	show mrp current-domain	324
5.2.3	mrp current-domain	325
5.2.4	mrp delete-domain	327
5.2.5	mrp new-domain	327
5.3	HIPER-Ring	328
5.3.1	show hiper-ring	329
5.3.2	hiper-ring	330
5.3.3	hiper-ring mode	330
5.3.4	hiper-ring port primary	331
5.3.5	hiper-ring port secondary	331
5.3.6	hiper-ring recovery-delay	332
5.4	Fast-HIPER-Ring	333
5.4.1	fast-hiper-ring	336
5.5	Redundant Coupling	338
5.5.1	show ring-coupling	339
5.5.2	ring-coupling	341
5.5.3	ring-coupling config	342
5.5.4	ring-coupling net-coupling	343
5.5.5	ring-coupling operation	343
5.5.6	ring-coupling port	344

5.5.7	ring-coupling redundancy-mode	344
5.6	Port Security	345
5.6.1	show port-sec mode	345
5.6.2	show port-sec port	345
5.6.3	port-sec mode	346
5.6.4	port-sec action	347
5.6.5	port-sec allowed-ip	348
5.6.6	port-sec allowed-ip add	348
5.6.7	port-sec allowed-ip remove	349
5.6.8	port-sec allowed-mac	349
5.6.9	port-sec allowed-mac add	350
5.6.10	port-sec allowed-mac remove	350
5.6.11	clear port-sec	351
5.7	DHCP Relay Commands	352
5.7.1	dhcp-relay	353
5.7.2	dhcp-relay	354
5.7.3	show dhcp-relay	355
6	CLI Commands: Security	357
6.1	Security Commands	359
6.1.1	users login	359
6.2	HTTP Commands	360
6.2.1	ip http secure-port	360
6.2.2	ip http secure-protocol	361
6.2.3	ip http server	362
6.2.4	show ip http	363
6.2.5	ip https server	364
6.2.6	ip https port	365
6.2.7	ip https certgen	365
6.2.8	show ip https	366
7	Appendix- VLAN Example	367
7.1	SOLUTION 1	369
7.2	SOLUTION 2	371

8	Glossary	373
9	Index	389
10	Further support	395

About this Manual

The "GUI" reference manual contains detailed information on using the graphical user interface (web-based interface) to operate the individual functions of the device.

The "Command Line Interface" reference manual contains detailed information on using the Command Line Interface to operate the individual functions of the device.

The "Installation" user manual contains a device description, safety instructions, a description of the display, and the other information that you need to install the device.

The "Basic Configuration" user manual contains the information you need to start operating the device. It takes you step by step from the first startup operation through to the basic settings for operation in your environment.

The "Redundancy Configuration" user manual contains the information you need to select a suitable redundancy procedure and configure that procedure.

The "Industry Protocols" user manual describes how the device is connected by means of a communication protocol commonly used in the industry, such as EtherNet/IP or PROFINET IO.

The HiVision Network Management Software provides you with additional options for smooth configuration and monitoring:

- ▶ Simultaneous configuration of multiple devices
- ▶ Graphic interface with network layout
- ▶ Auto-topology recognition
- ▶ Event log
- ▶ Event handling
- ▶ Client/server structure
- ▶ Browser interface
- ▶ ActiveX control for SCADA integration
- ▶ SNMP/OPC gateway.

Maintenance

Hirschmann are continually working on improving and developing their software. You should regularly check whether there is a new version of the software that provides you with additional benefits. You will find software information and downloads on the product pages of the Hirschmann website.

1 Command Structure

The Command Line Interface (CLI) syntax, conventions and terminology are described in this section. Each CLI command is illustrated using the structure outlined below.

1.1 Format

Commands are followed by values, parameters, or both.

■ Example 1

```
network parms <ipaddr> <netmask> [gateway]
```

- ▶ network parms
is the command name.
- ▶ <ipaddr> <netmask>
are the required values for the command.
- ▶ [gateway]
is the optional value for the command.

■ Example 2

```
snmp-server location <loc>
```

- ▶ snmp-server location
is the command name.
- ▶ <loc>
is the required parameter for the command.

■ Example 3

```
clear vlan
```

- ▶ clear vlan
is the command name.

1.1.1 Command

The text in courier font is to be typed exactly as shown.

1.1.2 Parameters

Parameters are order dependent.

Parameters may be mandatory values, optional values, choices, or a combination.

- ▶ `<parameter>`. The `<>` angle brackets indicate that a mandatory parameter is to be entered in place of the brackets and text inside them.
- ▶ `[parameter]`. The `[]` square brackets indicate that an optional parameter may be entered in place of the brackets and text inside them.
- ▶ `choice1 | choice2`. The `|` indicates that only one of the parameters should be entered.
- ▶ The `{ }` curly braces indicate that a parameter must be chosen from the list of choices.

1.1.3 Values

macaddr

The MAC address format is six hexadecimal numbers separated by colons, for example 00:06:29:32:81:40.

areaid

Area IDs may be entered in dotted-decimal notation (for example, 0.0.0.1). An area ID of 0.0.0.0 is reserved for the backbone. Area IDs have the same form as IP addresses, but are distinct from IP addresses. The IP network address of the

sub-netted network may be used for the area ID.

slot/port

Valid slot and port number separated by forward slashes. For example, 1/1 represents slot number 1 and port number 1.

logical slot/port

Logical slot and port number. This is applicable in the case of a link-aggregation (LAG) and vlan router interfaces (9/x). The operator can use the logical slot/port to configure the link-aggregation.

1.1.4 Conventions

Network addresses are used to define a link to a remote host, workstation or network. Network addresses are shown using the following syntax:

Address Type	Format	Range
ipaddr	192.168.11.110	0.0.0.0 to 255.255.255.255 (decimal)
macaddr	A7:C9:89:DD:A9:B3	hexadecimal digit pairs

Table 1: Network Address Syntax

Double quotation marks such as "System Name with Spaces" set off user defined strings. If the operator wishes to use spaces as part of a name parameter then it must be enclosed in double quotation marks.

Empty strings ("") are not valid user defined strings.

Command completion finishes spelling the command when enough letters of a command are typed to uniquely identify the command word. The command may be executed by typing <enter> (command abbreviation) or the command word may be completed by typing the <tab> or <space bar> (command completion).

The value 'Err' designates that the requested value was not internally accessible.

The value of '-----' designates that the value is unknown.

1.1.5 Annotations

The CLI allows the user to type single-line annotations at the command prompt for use when writing test or configuration scripts and for better readability. The exclamation point (!) character flags the beginning of a comment. The comment flag character can begin a word anywhere on the command line and all input following this character is ignored. Any command line that begins with the character ! is recognized as a comment line and ignored by the parser.

Some examples are provided below:

```
! Script file for setting the CLI prompt
set prompt example-switch
! End of the script file
```

1.1.6 Special keys

The following list of special keys may be helpful to enter command lines.

BS	delete previous character
Ctrl-A	go to beginning of line
Ctrl-E	go to end of line
Ctrl-F	go forward one character
Ctrl-B	go backward one character
Ctrl-D	delete current character
Ctrl-H	display command history or retrieve a command
Ctrl-U, X	delete to beginning of line
Ctrl-K	delete to end of line
Ctrl-W	delete previous word
Ctrl-T	transpose previous character
Ctrl-P	go to previous line in history buffer
Ctrl-R	rewrites or pastes the line
Ctrl-N	go to next line in history buffer
Ctrl-Y	print last deleted character
Ctrl-Q	enables serial flow
Ctrl-S	disables serial flow
Ctrl-Z	return to root command prompt
Tab, <SPACE>	command-line completion
Exit	go to next lower command prompt
?	list choices

1.1.7 Secrets in scripts

A configuration may include secrets (e. g., passwords). When creating a script, these secrets are written to it in a scrambled form, not in clear text. These secrets may be up to 31 characters long. The format for a scrambled secret is: ":v1:<scrambled secret>:" (without the quotes (")), they were added for readability). v1 denotes the scrambling method (v1 in this case), the value of the scrambled secret is a 64-digit hex string.

The following commands produce scrambled secrets (if necessary):

Command	Note
radius server key acct <ip> <password>	
radius server key auth <ip> <password>	
users passwd <username> <password>	
users snmpv3 encryption <username> des <password>	

Tab. 2: Commands in Global Config mode

Applying or validating a script requires the following conditions for a scrambled secret, else it will be considered invalid (usually only relevant if a script is edited manually):

- ▶ string must not be longer than 64 hex digits
- ▶ string must only contain the digits 0-9 and the characters A-F (or a-f)
- ▶ string length must be even

2 Quick Start up

The CLI Quick Start up details procedures to quickly become acquainted with the software.

2.1 Quick Starting the Switch

- ▶ Read the device Installation Guide for the connectivity procedure. In-band connectivity allows access to the software locally or from a remote workstation. The device must be configured with IP information (IP address, subnet mask, and default gateway).
- ▶ Turn the Power on.
- ▶ Allow the device to load the software until the login prompt appears. The device's initial state is called the default mode.
- ▶ When the prompt asks for operator login, execute the following steps:
 - ▶ Type the word `admin` in the login area. Since a number of the Quick Setup commands require administrator account rights, we recommend logging into an administrator account. Press the enter key.
 - ▶ Enter the state on delivery password `private`.
 - ▶ Press the enter key
 - ▶ The CLI User EXEC prompt will be displayed.
User EXEC prompt:
`(Hirschmann Product) >`
 - ▶ Use “enable” to switch to the Privileged EXEC mode from User EXEC.
Privileged EXEC prompt:
`(Hirschmann Product) #`
 - ▶ Use “configure” to switch to the Global Config mode from Privileged EXEC.
Global Config prompt:
`(Hirschmann Product) (Config) #`
 - ▶ Use “exit” to return to the previous mode.

2.2 System Info and System Setup

This chapter informs you about:

- ▶ Quick Start up Software Version Information
- ▶ Quick Start up Physical Port Data
- ▶ Quick Start up User Account Management
- ▶ Quick Start up IP Address
- ▶ Quick Start up Uploading from Switch to Out-of-Band PC (Only XMODEM)
- ▶ Quick Start up Downloading from Out-of-Band PC to Switch (Only XMODEM)
- ▶ Quick Start up Downloading from TFTP Server
- ▶ Quick Start up Factory Defaults

■ Quick Start up Physical Port Data

Command	Details
<code>show port all</code> (in Privileged EXEC)	Displays the Ports slot/port Type - Indicates if the port is a special type of port Admin Mode - Selects the Port Control Administration State Physical Mode - Selects the desired port speed and duplex mode Physical Status - Indicates the port speed and duplex mode Link Status - Indicates whether the link is up or down Link Trap - Determines whether or not to send a trap when link status changes LACP Mode - Displays whether LACP is enabled or disabled on this port.

Table 3: Quick Start up Physical Port Data

■ Quick Start up User Account Management

Command	Details
<code>show users</code> (in Privileged EXEC)	Displays all of the users that are allowed to access the switch Access Mode - Shows whether the user is able to change parameters on the switch(Read/Write) or is only able to view them (Read Only). As a factory default, the 'admin' user has Read/Write access and the 'user' user has Read Only access. There can only be one Read/Write user and up to five Read Only users.
<code>show login session</code> (in User EXEC)	Displays all of the login session information

Table 4: Quick Start up User Account Management

Command	Details
<pre>users passwd <user- name></pre> (in Global Config)	<p>Allows the user to set passwords or change passwords needed to login</p> <p>A prompt will appear after the command is entered requesting the users old password. In the absence of an old password leave the area blank. The operator must press enter to execute the command.</p> <p>The system then prompts the user for a new password then a prompt to confirm the new password. If the new password and the confirmed password match a message will be displayed.</p> <p>User password should not be more than eight characters in length.</p> <p>Make sure, that the passwords of the users differ from each other. If two or more users try to choose the same password, the CLI will display an error message.</p>
<pre>copy system:running- config nvram:startup-config</pre> (in Privileged EXEC)	<p>This will save passwords and all other changes to the device.</p> <p>If you do not save the configuration by doing this command, all configurations will be lost when a power cycle is performed on the switch or when the switch is reset.</p>
<pre>logout</pre> (in User EXEC and Privileged EXEC)	<p>Logs the user out of the switch</p>

Table 4: Quick Start up User Account Management

■ Quick Start up IP Address

To view the network parameters the operator can access the device by the following three methods.

- ▶ Simple Network Management Protocol - SNMP
- ▶ Telnet
- ▶ Web Browser

Note: After configuring the network parameters it is advisable to execute the command `'copy system:running-config nvram:startup-config'` to ensure that the configurations are not lost.

Command	Details
<pre>show network (in User EXEC)</pre>	<p>Displays the Network Configurations</p> <p>IP Address - IP Address of the switch Default IP is 0.0.0.0</p> <p>Subnet Mask - IP Subnet Mask for the switch Default is 0.0.0.0</p> <p>Default Gateway - The default Gateway for this switch Default value is 0.0.0.0</p> <p>Burned in MAC Address - The Burned in MAC Address used for in-band connectivity</p> <p>Network Configurations Protocol (BOOTP/DHCP) - Indicates which network protocol is being used Default is DHCP</p> <p>Network Configurations Protocol HiDiscovery - Indicates the status of the HiDiscovery protocol. Default is read-write</p> <p>Management VLAN Id - Specifies VLAN id</p> <p>Web Mode - Indicates whether HTTP/Web is enabled.</p> <p>JavaScript Mode - Indicates whether java mode is enabled. When the user accesses the switch's graphical user interface (web interface) and JavaScript Mode is enabled, the switch's web server will deliver a HTML page that contains JavaScript. Some browsers do not support JavaScript. In this case, a HTML page without JavaScript is necessary. In this case, set JavaScript Mode to disabled. Default: enabled.</p>
<pre>network parms <ipaddr> <net- mask> [gateway] (in Privileged EXEC)</pre>	<p>Sets the IP Address, subnet mask and gateway of the router. The IP Address and the gateway must be on the same subnet.</p> <p>IP Address range from 0.0.0.0 to 255.255.255.255</p>

Table 5: Quick Start up IP Address

Command	Details
	Subnet Mask range from 0.0.0.0 to 255.255.255.255
	Gateway Address range from 0.0.0.0 to 255.255.255.255

Table 5: Quick Start up IP Address

■ Quick Start up Downloading from TFTP Server

Before starting a TFTP server download, the operator must complete the Quick Start up for the IP Address.

Command	Details
<code>copy <url> {nvram:startup-config system:image}</code>	Sets the destination (download) datatype to be an image (system:image) or a configuration file (nvram:startup-config). The URL must be specified as: <code>ftp://ipAddr/filepath/fileName</code> . The nvram:startup-config option downloads the configuration file using tftp and system:image option downloads the code file.

Table 6: Quick Start up Downloading from TFTP Server

■ Quick Start up Factory Defaults

Command	Details
<code>clear config</code> (in Privileged EXEC Mode)	Enter yes when the prompt pops up to clear all the configurations made to the switch.
<code>copy system:running-config nvram:startup-config</code>	Enter yes when the prompt pops up that asks if you want to save the configurations made to the switch.
<code>reboot</code> (or cold boot the switch) (in Privileged EXEC Mode)	Enter yes when the prompt pops up that asks if you want to reset the system. This is the users choice either reset the switch or cold boot the switch, both work effectively.

Table 7: Quick Start up Factory Defaults

3 Mode-based CLI

The CLI groups all the commands in appropriate modes according to the nature of the command. A sample of the CLI command modes are described below. Each of the command modes support specific software commands.

- ▶ User Exec Mode
- ▶ Privileged Exec Mode
- ▶ Global Config Mode
- ▶ Vlan Mode
- ▶ Interface Config Mode
- ▶ Line Config Mode

The Command Mode table captures the command modes, the prompts visible in that mode and the exit method from that mode.

Command Mode	Access Method	Prompt	Exit or Access Next Mode
User Exec Mode	This is the first level of access. Perform basic tasks and list system information	(Hirschmann Product)>	Enter Logout command
Privileged Exec Mode	From the User Exec Mode, enter the enable command	(Hirschmann Product)#	To exit to the User Exec mode, enter exit or press Ctrl-Z.
VLAN Mode	From the Privileged User Exec mode, enter the vlan database command	(Hirschmann Product) (Vlan) #	To exit to the Privileged Exec mode, enter the exit command, or press Ctrl-Z to switch to User Exec mode.
Global Config Mode	From the Privileged Exec mode, enter the configure command	(Hirschmann Product) (Config) #	To exit to the Privileged Exec mode, enter the exit command, or press Ctrl-Z to switch to user exec mode.
Interface Config Mode	From the Global Configuration mode, enter the interface <slot/port> command	(Hirschmann Product) (Interface- "if number") #	To exit to the Global Config mode enter exit. To return to user EXEC mode enter ctrl-Z.
Line Config Mode	From the Global Configuration mode, enter the lineconfig command	(Hirschmann Product) (line) #	To exit to the Global Config mode enter exit. To return to User Exec mode enter ctrl-Z.

Table 8: Command Mode

3.1 Mode-based Topology

The CLI tree is built on a mode concept where the commands are available according to the interface. Some of the modes are depicted in the following figure.

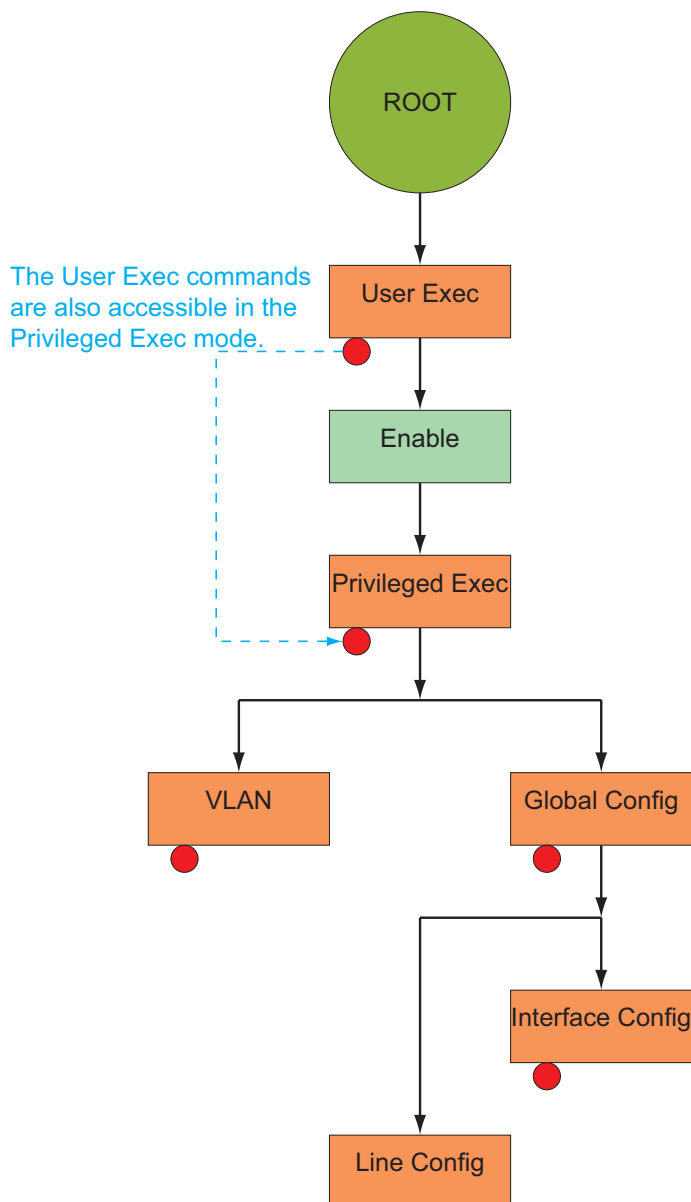


Fig. 1: Mode-based CLI

3.2 Mode-based Command Hierarchy

The CLI is divided into various modes. The Commands in one mode are not available until the operator switches to that particular mode, with the exception of the User Exec mode commands. The User Exec mode commands may also be executed in the Privileged Exec mode.

The commands available to the operator at any point in time depend upon the mode. Entering a question mark (?) at the CLI prompt, displays a list of the available commands and descriptions of the commands.

The CLI provides the following modes:

User Exec Mode

When the operator logs into the CLI, the User Exec mode is the initial mode. The User Exec mode contains a limited set of commands. The command prompt shown at this level is:

```
Command Prompt: (Hirschmann Product)>
```

Privileged Exec Mode

To have access to the full suite of commands, the operator must enter the Privileged Exec mode. Privileged users authenticated by login are able to enter the Privileged EXEC mode. From Privileged Exec mode, the operator can issue any Exec command, enter the VLAN mode or enter the Global Configuration mode . The command prompt shown at this level is:

```
Command Prompt: (Hirschmann Product)#
```

VLAN Mode

This mode groups all the commands pertaining to VLANs. The command prompt shown at this level is:

```
Command Prompt: (Hirschmann Product) (VLAN) #
```

Global Config Mode

This mode permits the operator to make modifications to the running configuration. General setup commands are grouped in this mode. From the Global Configuration mode, the operator can enter the System Configuration mode, the Physical Port Configuration mode, the

Interface Configuration mode, or the Protocol Specific modes specified below. The command prompt at this level is:

```
Command Prompt: (Hirschmann Product) (Config) #
```

From the Global Config mode, the operator may enter the following configuration modes:

Interface Config Mode

Many features are enabled for a particular interface. The Interface commands enable or modify the operation of an interface.

In this mode, a physical port is set up for a specific logical connection operation. The Interface Config mode provides access to the router interface configuration commands. The command prompt at this level is:

```
Command Prompt: (Hirschmann Product) (Interface  
<slot/port>) #
```

The resulting prompt for the interface configuration command entered in the Global Configuration mode is shown below:

```
(Hirschmann Product) (Config) # interface 2/1  
(Hirschmann Product) (Interface 2/1) #
```

Line Config Mode

This mode allows the operator to configure the console interface. The operator may configure the interface from the directly connected console or the virtual terminal used with Telnet. The command prompt at this level is:

```
Command Prompt: (Hirschmann Product) (Line) #
```

MAC Access-List Config Mode

Use the MAC Access-List Config mode to create a MAC Access-List and to enter the mode containing Mac Access-List configuration commands.

```
(Hirschmann Product) (Config) # mac-access-list  
extended <name>
```

```
Command Prompt: (Hirschmann Product) (Config mac-  
access-list) #
```

3.3 Flow of Operation

This section captures the flow of operation for the CLI:

- ▶ The operator logs into the CLI session and enters the User Exec mode. In the User Exec mode the `(Hirschmann Product) (exec)>` prompt is displayed on the screen.

The parsing process is initiated whenever the operator types a command and presses <ENTER>. The command tree is searched for the command of interest. If the command is not found, the output message indicates where the offending entry begins. For instance, command node A has the command "show spanning-tree" but the operator attempts to execute the command "show arpp brief" then the output message would be
`(Hirschmann Product) (exec)> show sspanning-tree^.`
`(Hirschmann Product)%Invalid input detected at '^' marker.` If the operator has given an invalid input parameter in the command, then the message conveys to the operator an invalid input was detected. The layout of the output is depicted below:

```
(Hirschmann Product) (exec) #show sspanning-tree
                               ^
(Hirschmann Product) Invalid input detected at '^' marker.
```

Fig. 2: Syntax Error Message

After all the mandatory parameters are entered, any additional parameters entered are treated as optional parameters. If any of the parameters are not recognized a syntax error message will be displayed.

- ▶ After the command is successfully parsed and validated, the control of execution goes to the corresponding CLI callback function.

- ▶ For mandatory parameters, the command tree extends till the mandatory parameters make the leaf of the branch. The callback function is only invoked when all the mandatory parameters are provided. For optional parameters, the command tree extends till the mandatory parameters and the optional parameters make the leaf of the branch. However, the call back function is associated with the node where the mandatory parameters are fetched. The call back function then takes care of the optional parameters.
- ▶ Once the control has reached the callback function, the callback function has complete information about the parameters entered by the operator.

3.4 “No” Form of a Command

“No” is a specific form of an existing command and does not represent a new or distinct command. Only the configuration commands are available in the “no” form. The behavior and the support details of the “no” form is captured as part of the mapping sheets.

3.4.1 Support for “No” Form

Almost every configuration command has a “no” form. In general, use the no form to reverse the action of a command or reset a value back to the default. For example, the `no shutdown interface` configuration command reverses the shutdown of an interface. Use the command without the keyword “no” to re-enable a disabled feature or to enable a feature that is disabled by default.

3.4.2 Behavior of Command Help (“?”)

The “no” form is treated as a specific form of an existing command and does not represent a new or distinct command. However, the behavior of the “?” and help text differ for the “no” form (the help message shows only options that apply to the “no” form).

- ▶ The help message is the same for all forms of the command. The help string may be augmented with details about the “no” form behavior.
- ▶ For the `(no interface?)` and `(no inte?)` cases of the “?”, the options displayed are identical to the case when the “no” token is not specified as in `(interface)` and `(inte?)`.

4 CLI Commands: Base

This chapter provides detailed explanation of the Switching commands. The commands are divided into five functional groups:

- ▶ Show commands display switch settings, statistics, and other information.
- ▶ Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- ▶ Copy commands transfer or save configuration and informational files to and from the switch.
- ▶ Clear commands clear
 - some
(e.g. the "clear arp-table-switch" command which clears the agent's ARP table) or
 - all
(e.g. the "clear config" command which resets the whole configuration to the factory defaults)

This chapter includes the following configuration types:

- ▶ System information and statistics commands
- ▶ Management commands
- ▶ Device configuration commands
- ▶ User account management commands
- ▶ Security commands
- ▶ System utilities
- ▶ Link Layer Discovery Protocol Commands
- ▶ Simple Network Time Protocol Commands
- ▶ Precision Time Protocol Commands
- ▶ Power over Ethernet Commands

4.1 System Information and Statistics

4.1.1 show

This command displays the interface's configuration.

Format

```
show [all]
```

Mode

```
Interface Config
```

all

Show all the running configuration parameters on this interface. The configuration parameters will be displayed even if their value is the default value.

4.1.2 show address-conflict

This command displays address-conflict settings.

Format

```
show address-conflict
```

Mode

```
Privileged EXEC and User EXEC
```

4.1.3 show arp switch

This command displays the Address Resolution Protocol cache of the switch.

Format

```
show arp switch
```

Mode

Privileged EXEC and User EXEC

4.1.4 show bridge address-learning

This command displays the address-learning setting. The setting can be enable or disable.

Format

```
show bridge address-learning
```

Mode

Privileged EXEC and User EXEC

4.1.5 **show bridge address-relearn-detect**

This command displays the Bridge Address Relearn Detection setting and the Bridge Address Relearn Threshold.

Format

```
show bridge address-relearn-detect
```

Mode

Privileged EXEC and User EXEC

Bridge Address Relearn Detection

Setting can be enable or disable.

Bridge Address Relearn Threshold

The threshold can be 1 to 1024.

4.1.6 **show bridge aging-time**

This command displays the timeout for address aging.

Format

```
show bridge aging-time
```

Mode

Privileged EXEC and User EXEC

4.1.7 **show bridge duplex-mismatch-detect**

This command displays the Bridge Duplex Mismatch Detection setting (Enabled or Disabled).

Format

```
show bridge duplex-mismatch-detect
```

Mode

```
Privileged EXEC and User EXEC
```

4.1.8 **show bridge framesize**

This command displays the maximum size of frame (packet size) setting.

Format

```
show bridge framesize
```

Mode

```
Privileged EXEC and User EXEC
```

4.1.9 **show bridge vlan-learning**

This command displays the bridge vlan-learning mode.

Format

```
show bridge vlan-learning
```

Mode

```
Privileged EXEC and User EXEC
```

4.1.10 bridge framesize

Activation of long frames. Configure 1522 or 1632¹⁾ as maximum size of frame (packet size).

Default

1522

Format

```
bridge framesize { 1522 | 16321) | 90222) }
```

Mode

Global Config

bridge framesize 1522

Configure 1522 as maximum size of frame (packet size).

bridge framesize 1632 ¹⁾

Configure 1632 ¹⁾ as maximum size of frame (packet size).

¹⁾ On MACH4000, MACH100, MACH1000 and PowerMICE: 1552

4.1.11 show config-watchdog

Activating the watchdog enables you to return automatically to the last configuration after a set time period has elapsed. This gives you back your access to the Switch.

Format

```
show config-watchdog
```

Mode

Privileged EXEC and User EXEC

4.1.12 show device-status

The signal device status is for displaying

- ▶ the monitoring functions of the switch,
- ▶ the device status trap setting.

Format

```
show device-status  
[monitor|state|trap]
```

Mode

Privileged EXEC and User EXEC

Device status monitor

Displays the possible monitored events and which of them are monitored:

- the detected failure of at least one of the supply voltages.
- the removal of the ACA
- the removal of a media module
- the temperature limits
- the defective link status of at least one port. With the switch, the indication of link status can be masked by the management for each port. Link status is not monitored in the delivery condition.
- the loss of Redundancy guarantee.

Ring/network coupling:

- The following conditions are reported in Stand-by mode:
- interrupted control line
- partner device running in Stand-by mode.

HIPER-Ring:

- The following condition is reported in RM mode additionally:
- Ring redundancy guaranteed. Ring redundancy is not monitored in the delivery condition.

Device status state

`Error` The current device status is error.

`No Error` The current device status is no error.

Device status trap

`enabled` A trap is sent if the device status changes.

`disabled` No trap is sent if the device status changes.

4.1.13 show authentication

This command displays users assigned to authentication login lists.

Format

```
show authentication [users <listname>]
```

Mode

Privileged EXEC and User EXEC

4.1.14 show eventlog

This command displays the event log, which contains error messages from the system. The event log is not cleared on a system reset.

Format

```
show eventlog
```

Mode

Privileged EXEC and User EXEC

File

The file in which the event originated.

Line

The line number of the event

Task Id

The task ID of the event.

Code

The event code.

Time

The time this event occurred.

Note: Event log information is retained across a switch reset.

4.1.15 show interface

This command displays a summary of statistics for a specific port or a count of all CPU traffic based upon the argument.

Format

```
show interface {<slot/port> |  
               ethernet{<slot/port>|switchport} |  
               switchport}
```

Mode

Privileged EXEC and User EXEC

The display parameters, when the argument is '<slot/port>', is as follows :

Packets Received Without Error

The total number of packets (including broadcast packets and multi-cast packets) received by the processor.

Packets Received With Error

The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.

Broadcast Packets Received

The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.

Packets Transmitted Without Error

The total number of packets transmitted out of the interface.

Transmit Packets Errors

The number of outbound packets that could not be transmitted because of errors.

Collisions Frames

The best estimate of the total number of collisions on this Ethernet segment.

Time Since Counters Last Cleared

The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

The display parameters, when the argument is 'switchport', is as follows :

Packets Received Without Error

The total number of packets (including broadcast packets and multi-cast packets) received by the processor.

Broadcast Packets Received

The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.

Packets Received With Error

The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.

Packets Transmitted Without Error

The total number of packets transmitted out of the interface.

Broadcast Packets Transmitted

The total number of packets that higher-level protocols requested to be transmitted to the Broadcast address, including those that were discarded or not sent.

Transmit Packet Errors

The number of outbound packets that could not be transmitted because of errors.

Address Entries Currently In Use

The total number of Forwarding Database Address Table entries now active on the switch, including learned and static entries.

VLAN Entries Currently In Use

The number of VLAN entries presently occupying the VLAN table.

Time Since Counters Last Cleared

The elapsed time, in days, hours, minutes, and seconds since the statistics for this switch were last cleared.

4.1.16 show interface ethernet

This command displays detailed statistics for a specific port or for all CPU traffic based upon the argument.

Format

```
show interface ethernet {<slot/port> | switchport}
```

Mode

Privileged EXEC and User EXEC

The display parameters, when the argument is '<slot/port>', are as follows :

Packets Received

Octets Received - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including Frame Check Sequence (FCS) octets). This object can be used as a reasonable estimate of ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. ----- The result of this equation is the value Utilization which is the percent utilization of the ethernet segment on a scale of 0 to 100 percent.

Packets Received < 64 Octets - The total number of packets (including bad packets) received that were < 64 octets in length (excluding framing bits but including FCS octets).

Packets Received 64 Octets - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets).

Packets Received 65-127 Octets - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Received 128-255 Octets - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Received 256-511 Octets - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Received 512-1023 Octets - The total number of packets (including bad packets) received that were between 512 and 1023

octets in length inclusive (excluding framing bits but including FCS octets).

Packets Received 1024-1518 Octets - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Received 1519-1522 Octets - The total number of packets (including bad packets) received that were between 1519 and 1522 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Received > 1522 Octets - The total number of packets received that were longer than 1522 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.

Packets Received Successfully

Total - The total number of packets received that were without errors.

Unicast Packets Received - The number of subnetwork-unicast packets delivered to a higher-layer protocol.

Multicast Packets Received - The total number of good packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address.

Broadcast Packets Received - The total number of good packets received that were directed to the broadcast address. Note that this does not include multicast packets.

Packets Received with MAC Errors

Total - The total number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.

Jabbers Received - The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Note that this definition of jabber is different than the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms.

Fragments/Undersize Received - The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets).

Alignment Errors - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with a non-integral number of octets.

Rx FCS Errors - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets

Overruns - The total number of frames discarded as this port was overloaded with incoming packets, and could not keep up with the inflow.

Received Packets not forwarded

Total - A count of valid frames received which were discarded (i.e. filtered) by the forwarding process.

Local Traffic Frames - The total number of frames dropped in the forwarding process because the destination address was located off of this port.

802.3x Pause Frames Received - A count of MAC Control frames received on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode.

Unacceptable Frame Type - The number of frames discarded from this port due to being an unacceptable frame type.

VLAN Membership Mismatch - The number of frames discarded on this port due to ingress filtering.

VLAN Viable Discards - The number of frames discarded on this port when a lookup on a particular VLAN occurs while that entry in the VLAN table is being modified, or if the VLAN has not been configured.

Multicast Tree Viable Discards - The number of frames discarded when a lookup in the multicast tree for a VLAN occurs while that tree is being modified.

Reserved Address Discards - The number of frames discarded that are destined to an IEEE 802.1 reserved address and are not supported by the system.

Broadcast Storm Recovery - The number of frames discarded that are destined for FF:FF:FF:FF:FF:FF when Broadcast Storm Recovery is enabled.

CFI Discards - The number of frames discarded that have CFI bit set and the addresses in RIF are in non-canonical format.

Upstream Threshold - The number of frames discarded due to lack of cell descriptors available for that packet's priority level.

Packets Transmitted Octets

Total Bytes - The total number of octets of data (including those in bad packets) transmitted into the network (excluding framing bits but including FCS octets). This object can be used as a reasonable estimate of ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. -----

Packets Transmitted 64 Octets - The total number of packets (including bad packets) transmitted that were 64 octets in length (excluding framing bits but including FCS octets).

Packets Transmitted 65-127 Octets - The total number of packets (including bad packets) transmitted that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Transmitted 128-255 Octets - The total number of packets (including bad packets) transmitted that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Transmitted 256-511 Octets - The total number of packets (including bad packets) transmitted that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Transmitted 512-1023 Octets - The total number of packets (including bad packets) transmitted that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Transmitted 1024-1518 Octets - The total number of packets (including bad packets) transmitted that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).

Packets Transmitted 1519-1522 Octets - The total number of packets (including bad packets) transmitted that were between 1519 and 1522 octets in length inclusive (excluding framing bits but including FCS octets).

Max Info - The maximum size of the Info (non-MAC) field that this port will receive or transmit.

Packets Transmitted Successfully

Total - The number of frames that have been transmitted by this port to its segment.

Unicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.

Multicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a Multicast address, including those that were discarded or not sent.

Broadcast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.

Transmit Errors

Total Errors - The sum of Single, Multiple, and Excessive Collisions.

Tx FCS Errors - The total number of packets transmitted that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets

Oversized - The total number of frames that exceeded the max permitted frame size. This counter has a max increment rate of 815 counts per sec. at 10 Mb/s.

Underrun Errors - The total number of frames discarded because the transmit FIFO buffer became empty during frame transmission.

Transmit Discards

Total Discards - The sum of single collision frames discarded, multiple collision frames discarded, and excessive frames discarded.

Single Collision Frames - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision.

Multiple Collision Frames - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision.

Excessive Collisions - A count of frames for which transmission on a particular interface is discontinued due to excessive collisions.

Port Membership - The number of frames discarded on egress for this port due to egress filtering being enabled.

VLAN Viable Discards - The number of frames discarded on this port when a lookup on a particular VLAN occurs while that entry in the VLAN table is being modified, or if the VLAN has not been configured.

Protocol Statistics

BPDUs received - The count of BPDUs (Bridge Protocol Data Units) received in the spanning tree layer.

BPDUs Transmitted - The count of BPDUs (Bridge Protocol Data Units) transmitted from the spanning tree layer.

802.3x Pause Frames Received - A count of MAC Control frames received on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode.

GVRP PDU's Received - The count of GVRP PDU's received in the GARP layer.

STP BPDUs Transmitted - Spanning Tree Protocol Bridge Protocol Data Units sent

STP BPDUs Received - Spanning Tree Protocol Bridge Protocol Data Units received

RST BPDUs Transmitted - Rapid Spanning Tree Protocol Bridge Protocol Data Units sent

RSTP BPDUs Received - Rapid Spanning Tree Protocol Bridge Protocol Data Units received

MSTP BPDUs Transmitted - Multiple Spanning Tree Protocol Bridge Protocol Data Units sent

MSTP BPDUs Received - Multiple Spanning Tree Protocol Bridge Protocol Data Units received

Time Since Counters Last Cleared

The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

The display parameters, when the argument is 'switchport, are as follows :

Octets Received - The total number of octets of data received by the processor (excluding framing bits but including FCS octets).

Total Packets Received Without Error- The total number of packets (including broadcast packets and multicast packets) received by the processor.

Unicast Packets Received - The number of subnetwork-unicast packets delivered to a higher-layer protocol.

Multicast Packets Received - The total number of packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address.

Broadcast Packets Received - The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.

Receive Packets Discarded - The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.

Octets Transmitted - The total number of octets transmitted out of the interface, including framing characters.

Packets Transmitted without Errors - The total number of packets transmitted out of the interface.

Unicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.

Multicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a Multicast address, including those that were discarded or not sent.

Broadcast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.

Transmit Packets Discarded - The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.

Most Address Entries Ever Used - The highest number of Forwarding Database Address Table entries that have been learned by this switch since the most recent reboot.

Address Entries in Use - The number of Learned and static entries in the Forwarding Database Address Table for this switch.

Maximum VLAN Entries - The maximum number of Virtual LANs (VLANs) allowed on this switch.

Most VLAN Entries Ever Used - The largest number of VLANs that have been active on this switch since the last reboot.

Static VLAN Entries - The number of presently active VLAN entries on this switch that have been created statically.

Dynamic VLAN Entries - The number of presently active VLAN entries on this switch that have been created by GVRP registration.

VLAN Deletes - The number of VLANs on this switch that have been created and then deleted since the last reboot.

Time Since Counters Last Cleared

The elapsed time, in days, hours, minutes, and seconds, since the statistics for this switch were last cleared.

4.1.17 show interface switchport

This command displays data concerning the internal port to the management agent.

Format

```
show interface switchport
```

Mode

```
Privileged EXEC and User EXEC
```

4.1.18 show interface utilization

This command displays the utilization statistics for the entire device.

Format

```
show interface utilization
```

Mode

```
Global Config
```

Interface

Display port number in <slot/port> notation.

Utilization

Display the utilization on this port.

Possible values: 0..100.00%

Lower threshold

Display the lower threshold setting for the utilization statistics on this port.

Possible values: 0..100.00%

Upper threshold

Display the upper threshold setting for the utilization statistics on this port.

Possible values: 0..100.00%

Alarm condition

Display the alarm condition setting for the utilization statistics on this port.

Possible values: true, false

4.1.19 show logging

This command displays the trap log maintained by the switch. The trap log contains a maximum of 256 entries that wrap.

Format

```
show logging [buffered | hosts | traplogs |  
snmp-requests]
```

Mode

Privileged EXEC and User EXEC

buffered

Display buffered (in-memory) log entries.

hosts

Display logging hosts.

traplogs

Display trap records.

snmp-requests

Display logging SNMP requests and severity level.

4.1.20 show mac-addr-table

This command displays the forwarding database entries. If the command is entered with no parameter, the entire table is displayed. This is the same as entering the optional *all* parameter. Alternatively, the administrator can enter a MAC Address to display the table entry for the requested MAC address and all entries following the requested MAC address.

Note: This command displays only learned unicast addresses. For other addresses use the command `show mac-filter-table`.

Format

```
show mac-addr-table [<macaddr> <1-4042> | all]
```

Mode

Privileged EXEC and User EXEC

Mac Address

A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.

Slot/Port

The port which this address was learned.

if Index

This object indicates the ifIndex of the interface table entry associated with this port.

Status

The status of this entry. The meanings of the values are:

Learned The value of the corresponding instance was learned by observing the source MAC addresses of incoming traffic, and is currently in use.

Management The value of the corresponding instance (system MAC address) is also the value of an existing instance of `dot1dStaticAddress`.

4.1.21 show signal-contact

The signal contact is for displaying

- ▶ the manual setting and the current state of the signal contact,
- ▶ the monitoring functions of the switch,
- ▶ the signal-contacts trap setting.

Format

```
show signal-contact  
    [1|2|all [mode|monitor|state|trap]]
```

Mode

Privileged EXEC and User EXEC

Signal contact mode

Auto The signal contact monitors the functions of the switch which makes it possible to perform remote diagnostics.

A break in contact is reported via the zero-potential signal contact (relay contact, closed circuit).

Device Status The signal contact monitors the device-status.

Manual This command gives you the option of remote switching the signal contact.

Signal contact monitor

Displays the possible monitored events and which of them are monitored:

- the detected failure of at least one of the supply voltages.
- the removal of the ACA
- the removal of a media module
- the temperature limits
- the defective link status of at least one port. With the switch, the indication of link status can be masked by the management for each port. Link status is not monitored in the delivery condition.
- the loss of Redundancy guarantee.

Ring/network coupling:

- The following conditions are reported in Stand-by mode:
- interrupted control line
- partner device running in Stand-by mode.

HIPER-Ring:

- The following condition is reported in RM mode additionally:
- Ring redundancy guaranteed. Ring redundancy is not monitored in the delivery condition.

Signal contact manual setting

`closed` The signal contact's manual setting is closed.

`open` The signal contact's manual setting is open.

Signal contact operating state

`closed` The signal contact is currently closed.

`open` The signal contact is currently open.

Signal contact trap

`enabled` A trap is sent if the signal contact state changes.

`disabled` No trap is sent if the signal contact state changes.

Note: To show the signal contact's port related settings, use the command `show port {<slot/port> | all}` (see [“show port” on page 176](#)).

4.1.22 show slot

This command is used to display information about slot(s).

For `[slot]` enter the slot ID.

Format

```
show slot [slot]
```

Mode

Privileged EXEC, Global Config

Slot

Display the number of the media module slot.

Status

`Full` The media module slot is equipped with a module.

`Empty` The media module slot is not equipped.

Admin State

Note: This feature is available for MS20/MS30, PowerMICE, MACH102 and MACH4000 devices.

`Enable` The media module slot is logically enabled.

`Disable` The media module slot is logically disabled.

Configured Card Model ID

Display the type of the media module.

Card Description

Display the type of the media module.

Product Code

Display the type of the media module.

Pluggable

`Yes` The module is pluggable.

`No` The module is not pluggable.

4.1.23 show running-config

This command is used to display the current setting of different protocol packages supported on the switch. This command displays only those parameters, the values of which differ from default value.

Format

```
show running-config [all]
```

Mode

```
Privileged EXEC
```

all

Show all the running configuration on the switch. All configuration parameters will be output even if their value is the default value.

4.1.24 show sysinfo

This command displays switch information.

Format

```
show sysinfo
```

Mode

Privileged EXEC and User EXEC

Alarm

Displays the latest present Alarm for a signal contact.

System Description

Text used to identify this switch.

System Name

Name used to identify the switch.

System Location

Text used to identify the location of the switch. May be up to 31 alpha-numeric characters. The factory default is blank.

System Contact

Text used to identify a contact person for this switch. May be up to 31 alpha-numeric characters. The factory default is blank.

System UpTime

The time in days, hours and minutes since the last switch reboot.

System Date and Time

The system clock's date and time in local time zone.

System IP Address

The system's IP address.

Boot Software Release

The boot code's version number.

Boot Software Build Date

The boot code's build date.

Operating system Software Release

The operating system's software version number.

Operating system Software Build Date

The operating system's software build date.

Backplane Hardware Revision

The hardware's revision number.

Backplane Hardware Description

The hardware's device description.

Serial Number (Backplane)

The hardware's serial number.

Base MAC Address (Backplane)

The hardware's base MAC address.

Number of MAC Addresses (Backplane)

The number of hardware MAC addresses.

Configuration state

The state of the actual configuration.

Configuration signature

The signature (watermark) of the stored configuration. The signature changes each time the configuration is saved.

Auto Config Adapter, State

The Auto Configuration Adapter's state.

Auto Config Adapter, Serial Number

The Auto Configuration Adapter's serial number (if present and operative).

Power Supply Information

The status of the power supplies.

Media Module Information

The description of each media module

- Description: media module type,
- Serial Number of the media modul (if available),
- SFP Information:
 - SFP Part ID: SFP type (if available),
 - SFP Serial No. of the SFP module (if available),
 - SFP Supported: yes/no,
 - SFP Temperature (°C, F),
 - SFP Tx Pwr, SFP transmit power (dBm / mW),
 - SFP Rx Pwr, SFP receive power (dBm / mW),
 - SFP Rx Pwr State: ok/warning/alarm.

CPU Utilization

The utilization of the central processing unit.

Average CPU Utilization

The average utilization of the central processing unit.

Flashdisk

Free memory on flashdisk (in Kbytes).

4.1.25 show temperature

Note: The command is available for RS20/RS30/RS40, MS20/MS30, RSR20/RSR30, MACH100, MACH1000, PowerMICE, MACH4000 and OCTOPUS devices.

This command displays the lower and upper temperature limit for sending a trap.

Format

```
show temperature
```

Mode

```
Privileged EXEC and User EXEC
```

4.1.26 utilization alarm-threshold

Use this command to add the alarm threshold value for monitoring bandwidth utilization of the interface.

Format

```
utilization alarm-threshold  
    {lower <0..10000> | upper <0..10000>}
```

Mode

Interface Config

lower

Enter lower utilization alarm threshold in the range of 0..10000 where 10000 represents 100%.

upper

Enter upper utilization alarm threshold in the range of 0..10000 where 10000 represents 100%.

4.2 Management VLAN Commands

4.2.1 network mgmt_vlan

This command configures the Management VLAN ID. If you enter the VLAN ID "0", the agent can be accessed by all VLANs.

Default

1

Format

```
network mgmt_vlan <0-4042>
```

Mode

Privileged EXEC

4.3 Class of Service (CoS) Commands

This chapter provides a detailed explanation of the QoS CoS commands. The following commands are available.

The commands are divided into these different groups:

- ▶ Configuration Commands are used to configure features and options of the switch. For every configuration command there is a show command that will display the configuration setting.
- ▶ Show commands are used to display device settings, statistics and other information.

Note: The 'Interface Config' mode only affects a single interface, whereas the 'Global Config' mode is applied to all interfaces.

4.3.1 classofservice dot1p-mapping

This command maps an 802.1p priority to an internal traffic class for a device when in 'Global Config' mode. The number of available traffic classes may vary with the platform. Userpriority and trafficclass can both be the range from 0-7. The command is only available on platforms that support priority to traffic class mapping on a 'per-port' basis, and the number of available traffic classes may vary with the platform.

Format

```
classofservice dot1p-mapping
    <userpriority> <trafficclass>
```

Mode

Global Config or Interface Config

userpriority

Enter the 802.1p priority (0-7).

trafficclass

Enter the traffic class to map the 802.1p priority (0-3).

■ no classofservice dot1p-mapping

This command restores the default mapping of the 802.1p priority to an internal traffic class.

Format

```
no classofservice dot1p-mapping
```

Modes

Global Config or Interface Config

4.3.2 classofservice ip-dscp-mapping

This command maps an IP DSCP value to an internal traffic class. The <ipdscp> value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

Format

```
classofservice ip-dscp-mapping
                               <ipdscp> <trafficclass>
```

Mode

Global Config

ipdscp

Enter the IP DSCP value in the range of 0 to 63 or an IP DSCP keyword (af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef).

trafficclass

Enter the traffic class to map the 802.1p priority (0-3).

■ no classofservice ip-dscp-mapping

This command restores the default mapping of the IP DSCP value to an internal traffic class.

Format

```
no classofservice dot1p-mapping
```

Modes

Global Config

4.3.3 classofservice trust

This command sets the class of service trust mode of an interface. The mode can be set to trust one of the Dot1p (802.1p) or IP DSCP packet markings.

Note: In `trust ip-dscp` mode the switch modifies the vlan priority for outgoing frames according to

– the a fix mapping table

(see Reference Manual „GUI Graphical User Interface“ (Web-based Interface) for further details).

Format

```
classofservice trust dot1p | ip-dscp
```

Mode

```
Global Config
```

■ no classofservice trust

This command sets the interface mode to untrusted, i.e. the packet priority marking is ignored and the default port priority is used instead.

Format

```
no classofservice trust
```

Modes

```
Global Config
```

4.3.4 **show classofservice dot1p-mapping**

This command displays the current 802.1p priority mapping to internal traffic classes for a specific interface. The slot/port parameter is required on platforms that support priority to traffic class mapping on a 'per-port' basis.

Platforms that support priority to traffic class mapping on a per-port basis:

Format

```
show classofservice dot1p-mapping
```

Platforms that do not support priority to traffic class mapping on a per-port basis:

Format

```
Show classofservice dot1p-mapping
```

Mode

```
Privileged EXEC and User EXEC
```

4.3.5 show classofservice ip-dscp-mapping

This command displays the current IP DSCP mapping to internal traffic classes for the global configuration settings.

Format

```
show classofservice ip-dscp-mapping [<slot/port>]
```

Mode

Privileged EXEC

The following information is repeated for each user priority.

IP DSCP

The IP DSCP value.

Traffic Class

The traffic class internal queue identifier to which the IP DSCP value is mapped.

slot/port

Valid slot and port number separated by forward slashes.

4.3.6 show classofservice trust

This command displays the current trust mode for the specified interface. The slot/port parameter is optional. If specified, the trust mode of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format

```
show classofservice trust [slot/port]
```

Mode

Privileged EXEC

Class of Service Trust Mode

The current trust mode: Dot1p, IP DSCP, or Untrusted.

Untrusted Traffic Class

The traffic class used for all untrusted traffic. This is only displayed when the COS trust mode is set to 'untrusted'.

slot/port

Valid slot and port number separated by forward slashes.

4.3.7 vlan port priority all

This command configures the port priority assigned for untagged packets for all ports presently plugged into the device. The range for the priority is 0-7. Any subsequent per port configuration will override this configuration setting.

Format

```
vlan port priority all <priority>
```

Mode

Global Config

4.3.8 vlan priority

This command configures the default 802.1p port priority assigned for untagged packets for a specific interface. The range for the priority is 0-7

Default

0

Format

```
vlan priority <priority>
```

Mode

Interface Config

4.4 Management Commands

These commands manage the switch and show current management settings.

4.4.1 transport input telnet

This command regulates new telnet sessions. If sessions are enabled, new telnet sessions can be established until there are no more sessions available. If sessions are disabled, no new telnet sessions are established. An established session remains active until the session is ended or an abnormal network error ends the session.

Default

enabled

Format

```
transport input telnet
```

Mode

Line Config

■ no transport input telnet

This command disables telnet sessions. If sessions are disabled, no new telnet sessions are established.

Format

```
no transport input telnet
```

Mode

Line Config

4.4.2 bridge address-learning

To enable you to observe the data at all the ports, the Switch allows you to disable the learning of addresses. When the learning of addresses is disabled, the Switch transfers all the data from all ports to all ports. The default value is enable.

Format

```
bridge address-learning {disable|enable}
```

Mode

```
Global Config
```

4.4.3 bridge address-relearn detect operation

This command enables or disables Bridge Address Relearn Detection. The default value is disable.

Default

```
Disabled
```

Format

```
bridge address-relearn detect operation  
{disable|enable}
```

Mode

```
Global Config
```


4.4.4 bridge address-relearn detect threshold

This command defines the value of relearned addresses to signal address relearn threshold exceeded.

The default relearn threshold is 1. Possible values to configure threshold count are 1 to 1024.

Default

1

Format

```
bridge address-relearn-detect threshold <value>
```

Mode

Global Config

value

1 to 1024

4.4.5 bridge aging-time

This command configures the forwarding database address aging timeout in seconds.

Default

30

Format

```
bridge aging-time <10-630>
```

Mode

Global Config

Seconds

The <seconds> parameter must be within the range of 10 to 630 seconds.

■ no bridge aging-time

This command sets the forwarding database address aging timeout to 30 seconds.

Format

```
no bridge aging-time
```

Mode

Global Config

4.4.6 bridge fast-link-detection

This command enables or disables the Bridge Fast Link Detection.

Default

Enabled

Format

```
bridge fast-link-detection {disable|enable}
```

Mode

Global Config

4.4.7 bridge duplex-mismatch-detect operation

This command enables or disables Bridge Duplex Mismatch Detection.

Reasons for Duplex Mismatch can be:

- A local port is configured to fix full-duplex.
- A port is configured to auto-negotiation and has negotiated HalfDuplex-Mode.

Duplex Mismatch can be excluded, when the local port is configured to auto-negotiation and duplex mode is negotiated to full-duplex.

Note: If counters and configuration settings indicate a Duplex Mismatch, the reason can also be a bad cable and/or EMI.

Default

Enabled

Format

```
bridge duplex-mismatch-detect operation  
{disable|enable}
```

Mode

Global Config

4.4.8 bridge vlan-learning

With "independent" you set the Shared VLAN Learning mode to Independent. The switch will treat equal MAC source addresses from different VLANs as separate addresses.

With "shared" you set the Shared VLAN Learning mode to Shared. The switch will treat equal MAC source addresses from different VLANs as the same address.

Format

```
bridge vlan-learning {independent|shared}
```

Mode

```
Global Config
```

4.4.9 ethernet-ip

This command controls the EtherNet/IP function on the switch. Detailed information you can find in the User Manual Industrial Protocols.

Default

depends on the order code (standard = disable)

Format

```
ethernet-ip admin-state {enable | disable}
```

Mode

```
Global Config
```

Admin-state

`disable`: Disables the EtherNet/IP function on this device.

Note: The relevant MIB objects are still accessible.

`enable`: Enables the EtherNet/IP function on this device.

4.4.10 network javascriptmode

When the user accesses the switch's graphical user interface (web-based interface), the switch's web server will deliver a HTML page that contains JavaScript.

Default

enabled

Format

```
network javascriptmode
```

Mode

Privileged EXEC

■ no network javascriptmode

When the user accesses the switch's graphical user interface (web-based interface), the switch's web server will deliver a HTML page that contains no JavaScript.

Format

```
no network javascriptmode
```

Mode

Privileged EXEC

4.4.11 network mgmt-access add

This command is used to configure the restricted management access feature (RMA).

It creates a new empty entry at the <index> (if you enter the command with parameter <index>) or at the next free index (if you enter the command without parameter <index>).

Format

```
network mgmt-access add [index]
```

Mode

```
Global Config
```

[index]

Index of the entry in the range 1..16.

4.4.12 network mgmt-access delete

This command is used to configure the restricted management access feature (RMA).

It deletes an existing entry with <index>.

Format

```
network mgmt-access delete <index>
```

Mode

```
Global Config
```

<index>

Index of the entry in the range 1..16.

4.4.13 network mgmt-access modify

This command is used to configure the restricted management access feature (RMA).

The command modifies an existing rule with <index> to change IP address, net mask and allowed services.

Format

```
network mgmt-access modify <index>
                               { ip <address> |
                               mask <netmask> |
                               http {enable | disable} |
                               snmp {enable | disable} |
                               telnet {enable | disable} |
                               ssh {enable |disable } }
```

Mode

Global Config

<index>

Index of the entry in the range 1..16.

<ip>

Configure IP address which should have access to management

<mask>

Configure network mask to allow a subnet for management access.

<http>

Configure if HTTP is allowed to have management access.

<snmp>

Configure if SNMP is allowed to have management access.

<telnet>

Configure if TELNET is allowed to have management access.

<ssh>

Configure if SSH is allowed to have management access.

enable

Allow the service to have management access.

disable

Do not allow the service to have management access.

4.4.14 network mgmt-access operation

This command is used to configure the restricted management access feature (RMA).

It enables or disables the service to have management access. The default value is disable.

Format

```
network mgmt-access operation {disable|enable}
```

Mode

```
Global Config
```

enable

Enable the restricted management access function globally.

disable

Disable the restricted management access function globally.

4.4.15 network mgmt-access status

This command is used to configure the restricted management access feature (RMA).

It activates/deactivates an existing rule with <index>.

Format

```
network mgmt-access status <index>
                                     {enable | disable}
```

Mode

```
Global Config
```

<index>

Index of the entry in the range 1..16.

enable

Allow the service to have management access.

disable

Do not allow the service to have management access.

4.4.16 network parms

This command sets the IP Address, subnet mask and gateway of the router. The IP Address and the gateway must be on the same subnet.

Format

```
network parms <ipaddr> <netmask> [gateway]
```

Mode

Privileged EXEC

4.4.17 network protocol

This command specifies the network configuration protocol to be used. If you modify this value, change is effective immediately after you saved your changes.

The parameter `bootp` indicates that the switch periodically sends requests to a Bootstrap Protocol (BootP) server or a DHCP server until a response is received.

`none` indicates that the switch should be manually configured with IP information.

Independently of the BootP and DHCP settings, HiDiscovery can be configured as an additional protocol.

Default

DHCP

Format

```
network protocol {none | bootp | dhcp | hidiscovery  
{off | read-only | read-write}}
```

Mode

Privileged EXEC

4.4.18 network priority

This command configures the VLAN priority or the IP DSCP value for outgoing management packets. The <ipdscp> is specified as either an integer from 0-63, or symbolically through one of the following keywords:

af11,af12,af13,af21,af22,af23,af31,af32,af33,af41,af42,af43,be,cs0, cs1, cs2,cs3,cs4,cs5,cs6,cs7,ef.

Default

0 for both values

Format

```
network priority {dot1p-vlan <0-7> |  
ip-dscp <ipdscp> }
```

Mode

Privileged EXEC

■ no network priority

This command sets the VLAN priority or the IP DSCP value for outgoing management packets to default which means VLAN priority 0 or IP DSCP value 0 (Best effort).

Format

```
no network priority {dot1p-vlan | ip-dscp }
```

Mode

Privileged EXEC

4.4.19 profinetio

This command controls the PROFINET IO function on the switch. Detailed information you can find in the User Manual Industrial Protocols.

Default

depends on the order code (standard = disable)

Format

```
profinetio admin-state {enable | disable}
```

Mode

Global Config

Admin-state

`disable` Disables the PROFINET IO function on this device.

Note: The relevant MIB objects are still accessible.

`enable` Enables the PROFINET IO function on this device.

4.4.20 serial timeout

This command specifies the maximum connect time (in minutes) without console activity. A value of 0 indicates that a console can be connected indefinitely. The time range is 0 to 160.

Default

5

Format

```
serial timeout <0-160>
```

Mode

Line Config

■ no serial timeout

This command sets the maximum connect time without console activity (in minutes) back to the default value.

Format

```
no serial timeout
```

Mode

Line Config

4.4.21 set prompt

This command changes the name of the prompt. The length of name may be up to 64 alphanumeric characters.

Format

```
set prompt <prompt string>
```

Mode

Privileged EXEC

4.4.22 show ethernet-ip

This command displays the admin state of the EtherNet/IP function.

Format

```
show ethernet-ip
```

Mode

Privileged EXEC and User EXEC

4.4.23 show network

This command displays configuration settings associated with the switch's network interface. The network interface is the logical interface used for in-band connectivity with the switch via any of the switch's front panel ports. The configuration parameters associated with the switch's network interface do not affect the configuration of the front panel ports through which traffic is switched or routed.

Format

```
show network
```

Mode

Privileged EXEC and User EXEC

System IP Address

The IP address of the interface. The factory default value is 0.0.0.0

Subnet Mask

The IP subnet mask for this interface. The factory default value is 0.0.0.0

Default Gateway

The default gateway for this IP interface. The factory default value is 0.0.0.0

Burned In MAC Address

The burned in MAC address used for in-band connectivity.

Network Configuration Protocol (BootP/DHCP)

Indicates which network protocol is being used. The options are `bootp` | `dhcp` | `none`.

DHCP Client ID (same as SNMP System Name)

Displays the DHCP Client ID.

Network Configuration Protocol HiDiscovery

Indicates in which way the HiDiscovery protocol is being used. The options are `off` | `read-only` | `read-write`.

Management VLAN ID

Specifies the management VLAN ID.

Management VLAN Priority

Specifies the management VLAN Priority.

Management VLAN IP-DSCP Value

Specifies the management VLAN IP-DSCP value.

Java Script Mode

Specifies if the Switch will use Java Script to start the Management Applet. The factory default is enabled.

4.4.24 show network mgmt-access

This command displays the operating status and entries for restricted management access (RMA).

Format

```
show network mgmt-access
```

Mode

Privileged EXEC and User EXEC

Operation

Indicates whether the operation for RMA is enabled or not.
The options are `Enabled` | `Disabled`.

ID

Index of the entry for restricted management access (1 to max. 16).

IP Address

The IP address which should have access to management.
The factory default value is 0.0.0.0.

Netmask

The network mask to allow a subnet for management access.
The factory default value is 0.0.0.0.

HTTP

Indicates whether HTTP is allowed to have management access or not. The options are `Yes` | `No`.

SNMP

Indicates whether SNMP is allowed to have management access or not. The options are `Yes` | `No`.

TELNET

Indicates whether TELNET is allowed to have management access or not. The options are `Yes` | `No`.

SSH

Indicates whether SSH is allowed to have management access or not. The options are `Yes` | `No`.

Active

Indicates whether the feature is active or not. The options are `[x]` | `[]`.

4.4.25 show profinetio

This command displays the admin state of the PROFINET IO function.

Format

```
show profinetio
```

Mode

Privileged EXEC and User EXEC

4.4.26 show serial

This command displays serial communication settings for the switch.

Format

```
show serial
```

Mode

Privileged EXEC and User EXEC

Serial Port Login Timeout (minutes)

Specifies the time, in minutes, of inactivity on a Serial port connection, after which the Switch will close the connection. Any numeric value between 0 and 160 is allowed, the factory default is 5. A value of 0 disables the timeout.

4.4.27 show snmp-access

This command displays SNMP access information related to global and SNMP version settings. SNMPv3 is always enabled.

Format

```
show snmp-access
```

Mode

```
Privileged EXEC
```

4.4.28 show snmpcommunity

This command displays SNMP community information. Six communities are supported. You can add, change, or delete communities. The switch does not have to be reset for changes to take effect.

The SNMP agent of the switch complies with SNMP Version 1 (for more about the SNMP specification, see the SNMP RFCs). The SNMP agent sends traps through TCP/IP to an external SNMP manager based on the SNMP configuration (the trap receiver and other SNMP community parameters).

Format

```
show snmpcommunity
```

Mode

Privileged EXEC

SNMP Community Name

The community string to which this entry grants access. A valid entry is a case-sensitive alphanumeric string of up to 32 characters. Each row of this table must contain a unique community name.

Client IP Address -

An IP address (or portion thereof) from which this device will accept SNMP packets with the associated community. The requesting entity's IP address is ANDed with the Subnet Mask before being compared to the IP Address. Note that if the Subnet Mask is set to 0.0.0.0, an IP Address of 0.0.0.0 matches all IP addresses. The default value is 0.0.0.0

Client IP Mask -

A mask to be ANDed with the requesting entity's IP address before comparison with IP Address. If the result matches with IP Address then the address is an authenticated IP address. For example, if the IP Address = 9.47.128.0 and the corresponding Subnet Mask = 255.255.255.0 a range of incoming IP addresses would match, i.e. the incoming IP Address could equal 9.47.128.0 - 9.47.128.255. The default value is 0.0.0.0

Access Mode

The access level for this community string.

Status

The status of this community access entry.

4.4.29 show snmptrap

This command displays SNMP trap receivers. Trap messages are sent across a network to an SNMP Network Manager. These messages alert the manager to events occurring within the switch or on the network. Six trap receivers are simultaneously supported.

Format

```
show snmptrap
```

Mode

```
Privileged EXEC
```

SNMP Trap Name

The community string of the SNMP trap packet sent to the trap manager. This may be up to 32 alphanumeric characters. This string is case sensitive.

IP Address

The IP address to receive SNMP traps from this device. Enter four numbers between 0 and 255 separated by periods.

Status

A pull down menu that indicates the receiver's status (enabled or disabled) and allows the administrator/user to perform actions on this user entry:

Enable - send traps to the receiver

Disable - do not send traps to the receiver.

Delete - remove the table entry.

4.4.30 show telnet

This command displays outbound telnet settings.

Format

```
show telnet
```

Mode

Privileged EXEC and User EXEC

Outbound Telnet Connection Login Timeout (minutes)

This object indicates the number of minutes a remote connection session is allowed to remain inactive before being logged off. May be specified as a number from 1 to 160. The factory default is 5.

Maximum Number of Outbound Telnet Sessions

This object indicates the number of simultaneous outbound connection sessions allowed. The factory default is 5.

Allow New Outbound Telnet Sessions

Indicates that new outbound telnet sessions will not be allowed when set to no. The factory default value is yes.

4.4.31 show telnetcon

This command displays inbound telnet settings.

Format

```
show telnetcon
```

Mode

```
Privileged EXEC and User EXEC
```

Telnet Connection Login Timeout (minutes)

This object indicates the number of minutes a remote connection session is allowed to remain inactive before being logged off. May be specified as a number from 1 to 160. The factory default is 4.

Maximum Number of Remote Telnet Sessions

This object indicates the number of simultaneous remote connection sessions allowed. The factory default is 2 .

Allow New Telnet Sessions

Indicates that new telnet sessions will not be allowed when set to no. The factory default value is yes.

4.4.32 show trapflags

This command displays trap conditions. Configure which traps the switch should generate by enabling or disabling the trap condition. If a trap condition is enabled and the condition is detected, the switch's SNMP agent sends the trap to all enabled trap receivers. The switch does not have to be reset to implement the changes. Cold and warm start traps are always generated and cannot be disabled.

Format

```
show trapflags
```

Mode

Privileged EXEC and User EXEC

Authentication Flag

May be enabled or disabled. The factory default is enabled. Indicates whether authentication failure traps will be sent.

Chassis

Indicates whether traps that are related to the chassis functionality of the switch will be sent. These functions include the signal contacts, the ACA, temperature limits exceeded, changes in the module map, addition or removal of SFP modules, status of power supply has changed and the LLDP and Sntp features. May be enabled or disabled.

Default: enabled.

Layer 2 Redundancy

Indicates whether traps that are related to the layer 2 redundancy features of the switch will be sent. The HiPER-Ring and the Redundant Coupling will tell you with these traps when the main line has become inoperative or returned. May be enabled or disabled.

Default: enabled.

Link Up/Down Flag

May be enabled or disabled. The factory default is enabled. Indicates whether link status traps will be sent.

Multiple Users Flag

May be enabled or disabled. The factory default is enabled. Indicates whether a trap will be sent when the same user ID is logged into the switch more than once at the same time (either via telnet or serial port).

Port Security (MAC, IP)

Enable/disable sending port security event traps (for MAC/IP port security).

Spanning Tree Flag

May be enabled or disabled. The factory default is enabled. Indicates whether spanning tree traps will be sent.

4.4.33 snmp-access global

This command configures the global SNMP access setting (for all SNMP versions).

Format

```
snmp-access global {disable|enable|read-only}
```

Mode

```
Global Config
```

disable

Disable SNMP access to this switch, regardless of the SNMP version used.

enable

Enable SNMP read and write access to this switch, regardless of the SNMP version used.

read-only

Enable SNMP read-only access to this switch (disable write access), regardless of the SNMP version used.

4.4.34 snmp-access version

This command configures the SNMP version specific access mode for SNMPv1 and SNMPv2.

Format

```
snmp-access version {all|v1|v2} {disable|enable}
```

Mode

Global Config

all

Enable or disable SNMP access by all protocol versions (v1 and v2).

v1

Enable or disable SNMP access by v1.

v2

Enable or disable SNMP access by v2.

4.4.35 snmp-access version v3-encryption

Use this command to activate/deactivate SNMPv3 data encryption.

Format

```
snmp-access version v3-encryption  
                {readonly | readwrite} {enable | disable}
```

Mode

```
Global Config
```

disable

Disable SNMP access to this switch by SNMPv3 protocol version.

enable

Enable SNMP read and write access to this switch by SNMPv3 protocol version.

readonly

Enable SNMP read-only access to this switch (disable write access) by SNMPv3 protocol version.

readwrite

Enable SNMP read-write access to this switch (enable write access) by SNMPv3 protocol version.

4.4.36 snmp-server

This command sets the name and the physical location of the switch, and the organization responsible for the network. The range for name, location and contact is from 0 to 64 alphanumeric characters.

Default

None

Format

```
snmp-server
{community <name> |
 ipaddr <ipaddr> <name> |
 ipmask <ipmask> <name> |
 mode <name> |
 ro <name> |
 rw <name> |
 contact <con> |
 enable traps { chassis | l2redundancy |
 linkmode | multiusers | port-sec | stpmode }
 location <loc> |
 sysname <name> }
```

Mode

Global Config

4.4.37 snmp-server community

This command adds a new SNMP community name. A community name is a name associated with the switch and with a set of SNMP managers that manage it with a specified privileged level. The length of name can be up to 32 case-sensitive characters.

Note: Community names in the SNMP community table must be unique. When making multiple entries using the same community name, the first entry is kept and processed and all duplicate entries are ignored.

Default

Two default community names: Public and Private. You can replace these default community names with unique identifiers for each community. The default values for the remaining four community names are blank.

Format

```
snmp-server community <name>
```

Mode

```
Global Config
```

■ no snmp-server community

This command removes this community name from the table. The name is the community name to be deleted.

Format

```
no snmp-server community <name>
```

Mode

```
Global Config
```

4.4.38 snmp-server contact

This command adds a new SNMP server contact.

Format

```
snmp-server contact <con>
```

Mode

Global Config

con

Enter system contact up to 63 characters in length.

If the name contains spaces, enclose it in quotation marks ("").

■ no snmp-server contact

This command removes this SNMP server contact from the table.

<con> is the SNMP server contact to be deleted.

Format

```
no snmp-server contact <con>
```

Mode

Global Config

4.4.39 snmp-server community ipaddr

This command sets a client IP address for an SNMP community. The address is the associated community SNMP packet sending address and is used along with the client IP mask value to denote a range of IP addresses from which SNMP clients may use that community to access the device. A value of 0.0.0.0 allows access from any IP address. Otherwise, this value is ANDed with the mask to determine the range of allowed client IP addresses. The name is the applicable community name.

Default

0.0.0.0

Format

```
snmp-server community ipaddr <ipaddr> <name>
```

Mode

Global Config

■ no snmp-server community ipaddr

This command sets a client IP address for an SNMP community to 0.0.0.0. The name is the applicable community name.

Format

```
no snmp-server community ipaddr <name>
```

Mode

Global Config

4.4.40 snmp-server community ipmask

This command sets a client IP mask for an SNMP community. The address is the associated community SNMP packet sending address and is used along with the client IP address value to denote a range of IP addresses from which SNMP clients may use that community to access the device. A value of 255.255.255.255 will allow access from only one station, and will use that machine's IP address for the client IP Address. A value of 0.0.0.0 will allow access from any IP address. The name is the applicable community name.

Default

0.0.0.0

Format

```
snmp-server community ipmask <ipmask> <name>
```

Mode

Global Config

■ no snmp-server community ipmask

This command sets a client IP mask for an SNMP community to 0.0.0.0. The name is the applicable community name. The community name may be up to 32 alphanumeric characters.

Format

```
no snmp-server community ipmask <name>
```

Mode

Global Config

4.4.41 snmp-server community mode

This command activates an SNMP community. If a community is enabled, an SNMP manager associated with this community manages the switch according to its access right. If the community is disabled, no SNMP requests using this community are accepted. In this case the SNMP manager associated with this community cannot manage the switch until the Status is changed back to Enable.

Default

The default private and public communities are enabled by default.
The four undefined communities are disabled by default.

Format

```
snmp-server community mode <name>
```

Mode

```
Global Config
```

■ no snmp-server community mode

This command deactivates an SNMP community. If the community is disabled, no SNMP requests using this community are accepted. In this case the SNMP manager associated with this community cannot manage the switch until the Status is changed back to Enable.

Format

```
no snmp-server community mode <name>
```

Mode

```
Global Config
```

4.4.42 snmp-server community ro

This command restricts access to switch information. The access mode is read-only (also called public).

Format

```
snmp-server community ro <name>
```

Mode

```
Global Config
```

4.4.43 snmp-server community rw

This command restricts access to switch information. The access mode is read/write (also called private).

Format

```
snmp-server community rw <name>
```

Mode

```
Global Config
```

4.4.44 snmp-server location

This command configures the system location.

Format

```
snmp-server location <system location>
```

Mode

```
Global Config
```


4.4.45 snmp-server sysname

This command configures the system name.

Format

```
snmp-server sysname <system name>
```

Mode

```
Global Config
```

4.4.46 snmp-server enable traps

This command enables the Authentication Trap Flag.

Default

```
enabled
```

Format

```
snmp-server enable traps
```

Mode

```
Global Config
```

■ **no snmp-server enable traps**

This command disables the Authentication Trap Flag.

Format

```
no snmp-server enable traps
```

Mode

```
Global Config
```

4.4.47 snmp-server enable traps chassis

Configures whether traps that are related to the chassis functionality of the switch will be sent. These functions include the signal contacts, the ACA, temperature limits exceeded, changes in the module map, addition or removal of SFP modules, status of power supply has changed and the LLDP and SNMP features. May be enabled or disabled.

Default: enabled.

Default

enabled

Format

```
snmp-server enable traps chassis
```

Mode

Global Config

■ no snmp-server enable traps chassis

This command disables chassis traps for the entire switch.

Format

```
no snmp-server enable traps chassis
```

Mode

Global Config

4.4.48 snmp-server enable traps l2redundancy

Indicates whether traps that are related to the layer 2 redundancy features of the switch will be sent. The HiPER-Ring and the Redundant Coupling will tell you with these traps when the main line has become inoperative or returned. May be enabled or disabled.

Default: enabled.

Default

enabled

Format

```
snmp-server enable traps l2redundancy
```

Mode

Global Config

■ no snmp-server enable traps l2redundancy

This command disables layer 2 redundancy traps for the entire switch.

Format

```
no snmp-server enable traps l2redundancy
```

Mode

Global Config

4.4.49 snmp-server enable traps linkmode

This command enables Link Up/Down traps for the entire switch. When enabled, link traps are sent only if the Link Trap flag setting associated with the port is enabled (see 'snmp trap link-status' command).

Default

enabled

Format

```
snmp-server enable traps linkmode
```

Mode

Global Config

■ no snmp-server enable traps linkmode

This command disables Link Up/Down traps for the entire switch.

Format

```
no snmp-server enable traps linkmode
```

Mode

Global Config

4.4.50 snmp-server enable traps multiusers

This command enables Multiple User traps. When the traps are enabled, a Multiple User Trap is sent when a user logs in to the terminal interface (EIA 232 (serial port) or telnet) and there is an existing terminal interface session.

Default

enabled

Format

```
snmp-server enable traps multiusers
```

Mode

Global Config

■ no snmp-server enable traps multiusers

This command disables Multiple User traps.

Format

```
no snmp-server enable traps multiusers
```

Mode

Global Config

4.4.51 snmp-server enable traps port-sec

This command enables port security traps. When the traps are enabled, a Port Security Trap is sent if a port security event occurs (applies to MAC/IP Port Security).

Default

enabled

Format

```
snmp-server enable traps port-sec
```

Mode

Global Config

■ no snmp-server enable traps port-sec

This command disables Port Security traps.

Format

```
no snmp-server enable traps port-sec
```

Mode

Global Config

4.4.52 snmp-server enable traps stpmode

This command enables the sending of new root traps and topology change notification traps.

Default

enabled

Format

```
snmp-server enable traps stpmode
```

Mode

Global Config

■ no snmp-server enable traps stpmode

This command disables the sending of new root traps and topology change notification traps.

Format

```
no snmp-server enable traps stpmode
```

Mode

Global Config

4.4.53 snmptrap

This command adds an SNMP trap name. The maximum length of name is 32 case-sensitive alphanumeric characters.

Default

The default name for the six undefined community names is Delete.

Format

```
snmptrap <name> <ipaddr> [snmpversion snmpv1]
```

Mode

Global Config

■ no snmptrap

This command deletes trap receivers for a community.

Format

```
no snmptrap <name> <ipaddr>
```

Mode

Global Config

4.4.54 snmptrap ipaddr

This command assigns an IP address to a specified community name. The maximum length of name is 32 case-sensitive alphanumeric characters.

Note: IP addresses in the SNMP trap receiver table must be unique. If you make multiple entries using the same IP address, the first entry is retained and processed. All duplicate entries are ignored.

Format

```
snmptrap ipaddr <name> <ipaddr> <ipaddrnew>
```

Mode

Global Config

ipaddr

Enter the old IP Address.

ipaddrnew

Enter the new IP Address.

4.4.55 snmptrap mode

This command activates or deactivates an SNMP trap. Enabled trap receivers are active (able to receive traps). Disabled trap receivers are inactive (not able to receive traps).

Format

```
snmptrap mode <name> <ipaddr>
```

Mode

```
Global Config
```

■ no snmptrap mode

This command deactivates an SNMP trap. Disabled trap receivers are inactive (not able to receive traps).

Format

```
no snmptrap mode <name> <ipaddr>
```

Mode

```
Global Config
```

4.4.56 snmptrap snmpversion

This command configures SNMP trap version for a specified community.

Format

```
snmptrap snmpversion <name> <ipAddr>
      {snmpv1 | snmpv2}
```

Mode

```
Global Config
```

name

Enter the community name.

ipAddr

Enter the IP Address.

snmpv1

Use SNMP v1 to send traps.

snmpv2

Use SNMP v2 to send traps.

4.4.57 telnetcon maxsessions

Configure the number of remote telnet connections allowed.

Default

5

Format

```
telnetcon maxsessions <0-5>
```

Mode

Privileged EXEC

■ no telnetcon maxsessions

This command sets the maximum number of telnet connection sessions that can be established to the default value.

Format

```
no telnetcon maxsessions
```

Mode

Privileged EXEC

4.4.58 telnetcon timeout

This command sets the telnet connection session timeout value, in minutes. A session is active as long as the session has not been idle for the value set. The time is a decimal value from 1 to 160.

Default

5

Format

```
telnetcon timeout <1-160>
```

Mode

Privileged EXEC

■ no telnetcon timeout

This command sets the telnet connection session timeout value to the default.

Changing the timeout value for active sessions does not become effective until the session is reaccessed. Also, any keystroke activates the new timeout duration.

Format

```
no telnetcon timeout
```

Mode

Privileged EXEC

4.5 Syslog Commands

This section provides a detailed explanation of the Syslog commands. The commands are divided into two functional groups:

- ▶ Show commands display spanning tree settings, statistics, and other information.
- ▶ Configuration Commands configure features and options of the device. For every configuration command there is a show command that displays the configuration setting.

4.5.1 logging buffered

This command enables logging to an in-memory log where up to 128 logs are kept.

Default

```
enabled
```

Format

```
logging buffered
```

Mode

```
Global Config
```

■ no logging buffered

This command disables logging to in-memory log.

Format

```
no logging buffered
```

4.5.2 logging buffered wrap

This command enables wrapping of in-memory logging when full capacity reached. Otherwise when full capacity is reached, logging stops.

Default

```
wrap
```

Format

```
logging buffered wrap
```

Mode

```
Privileged EXEC
```

■ no logging buffered wrap

This command disables wrapping of in-memory logging and configures logging to stop when capacity is full.

Format

```
no logging buffered wrap
```

4.5.3 logging cli-command

This command enables the CLI command Logging feature. The Command Logging component enables the switch software to log all Command Line Interface (CLI) commands issued on the system.

Default

```
disabled
```

Format

```
logging cli-command
```

Mode

```
Global Config
```

■ no logging cli-command

This command disables the CLI command Logging feature.

Format

```
no logging cli-command
```


4.5.4 logging console

This command enables logging to the console. The <severitylevel> value is specified as either an integer from 0 to 7 or symbolically through one of the following keywords: emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), informational (6), debug (7).

Default

```
disabled; alert
```

Format

```
logging console [severitylevel] | <[0-7]>
```

Mode

```
Global Config
```

severitylevel | [0-7]

Enter Logging Severity Level (emergency|0, alert|1, critical|2, error|3, warning|4, notice|5, info|6, debug|7).

Note: Selecting a lower severity level (larger number) will include all messages from higher severity levels (smaller numbers).

Possible severity levels: see Table 9

■ no logging console

This command disables logging to the console.

Format

```
no logging console
```

4.5.5 logging host

This command enables logging to a host where up to eight hosts can be configured.

Default

```
Port - 514; Level - Critical;
```

Format

```
logging host <hostaddress>
  [<port> [<severitylevel>]]
```

Mode

```
Global Config
```

Severity number	Severity name	Meaning
0	emergency	Minimum severity to be logged is 0. This is the highest level and will result in all other messages of lower levels not being logged.
1	alert	Minimum severity to be logged is 1.
2	critical	Minimum severity to be logged is 2.
3	error	Minimum severity to be logged is 3.
4	warning	Minimum severity to be logged is 4.
5	notice	Minimum severity to be logged is 5.
6	info	Minimum severity to be logged is 6.
7	debug	Minimum severity to be logged is 7. This is the lowest level and will result in messages of all levels being logged.

Tab. 9: Possible severity levels

4.5.6 logging host reconfigure

The Logging Host Index for which to change the IP Address.

Format

```
logging host reconfigure <hostindex> <hostaddress>
```

Mode

```
Global Config
```

4.5.7 logging host remove

The Logging Host Index to be removed.

Format

```
logging host remove <hostindex>
```

Mode

```
Global Config
```

4.5.8 logging snmp-requests get operation

This command enables or disables the logging of SNMP GET requests.

Default

```
Disabled
```

Format

```
logging snmp-requests get operation  
{ enable | disable }
```

Mode

```
Global Config
```

4.5.9 logging snmp-requests set operation

This command enables or disables the logging of SNMP SET requests.

Default

Disabled

Format

```
logging snmp-requests set operation  
{ enable | disable }
```

Mode

Global Config

4.5.10 logging snmp-requests get severity

With this command you can define the severity level of logging SNMP GET requests.

Default

Disabled

Format

```
logging snmp-requests get severity <level|[0-7]>
```

Mode

Global Config

level | [0-7]

Enter Logging Severity Level (emergency|0, alert|1, critical|2, error|3, warning|4, notice|5, info|6, debug|7).

Note: Selecting a lower severity level (larger number) will include all messages from higher severity levels (smaller numbers).

4.5.11 logging snmp-requests set severity

With this command you can define the severity level of logging SNMP SET requests.

Default

Disabled

Format

```
logging snmp-requests set severity <level|[0-7]>
```

Mode

Global Config

level | [0-7]

Enter Logging Severity Level (emergency|0, alert|1, critical|2, error|3, warning|4, notice|5, info|6, debug|7).

Note: Selecting a lower severity level (larger number) will include all messages from higher severity levels (smaller numbers).

4.5.12 logging syslog

This command enables syslog logging.

Default

disabled

Format

```
logging syslog
```

Mode

Global Config

■ no logging syslog

This command disables syslog logging.

Format

```
no logging syslog
```

4.5.13 logging syslog port

Enter the port number of the syslog server.

Default

514

Format

```
logging syslog port <portid>
```

Mode

Global Config

4.6 Device Configuration Commands

4.6.1 auto-disable reason

This command enables the port disabling on this device by reason.

Default

Disabled

Format

```
auto-disable reason  
    {link-flap | crc-error | overload-detection}
```

Mode

Global Config

link-flap

Enable the port disabling on this device by link flap.

crc-error

Enable the port disabling on this device by CRC error.

overload-detection

Enable the port disabling on this device by overload detection.

■ **no auto-disable reason**

This command disables the port disabling on this device by reason.

Default

Disabled

Format

```
no auto-disable reason
    {link-flap | crc-error | overload-detection}
```

Mode

Global Config

link-flap

Disable the port disabling on this device by link flap.

crc-error

Disable the port disabling on this device by CRC error.

overload-detection

Disable the port disabling on this device by overload detection.

4.6.2 auto-disable timer

This command defines the time after which a deactivated port is activated again.

Default

0

Format

```
auto-disable timer {0 | 30..2147483}
```

Mode

Interface Config

{0 | 30..2147483}

Timer value in seconds after a deactivated port is activated again.

Possible values:

0 The value 0 disables the timer.

30..2147483.

4.6.3 auto-negotiate

This command enables automatic negotiation on a port. The default value is enable.

Format

```
auto-negotiate
```

Mode

```
Interface Config
```

■ no auto-negotiate

This command disables automatic negotiation on a port.

Format

```
no auto-negotiate
```

Mode

```
Interface Config
```

4.6.4 auto-negotiate all

This command enables automatic negotiation on all ports.
The default value is `enable`.

Format

```
auto-negotiate all
```

Mode

```
Global Config
```

■ no auto-negotiate all

This command disables automatic negotiation on all ports.

Format

```
no auto-negotiate all
```

Mode

```
Global Config
```

4.6.5 cable-crossing

Note: This function is available for the RS20/RS30/RS40, MS20/MS30, RSR20/RSR30, MACH1000, PowerMICE and OCTOPUS devices.

Use this command to enable or disable the cable crossing function.

Note: The `cable-crossing` settings become effective for a certain port, if `auto-negotiate` is disabled for this port.

The `cable-crossing` settings are irrelevant for a certain port, if `auto-negotiate` is enabled for this port.

Format

```
cable-crossing {enable|disable}
```

Mode

```
Interface Config
```

cable-crossing enable

The device swaps the port output and port input of the TP port.

cable-crossing disable

The device does not swap the port output and port input of the TP port.

4.6.6 media-module

Use this command to logically configure media modules.

Default

```
media-module enable all
```

Format

```
media-module { remove <1-7> |  
                enable { <1-7> | all } |  
                disable { <1-7> | all } }
```

Mode

```
Global Config
```

remove

Logically remove a media-module that has already been physically removed.

<1-7>

Enter the number of a media module that has already been physically removed but is logically still present in the configuration.

enable

Enable a media-module slot.

<1-7>

Enter the number of the media module to be enabled.

all

Enable all media modules on the device.

disable

Disable a media-module slot.

<1-7>

Enter the number of the media module to be disabled.

all

Disable all media modules on the device.

4.6.7 dip-switch operation

Note: This command is available for the MICE, PowerMICE and RS20/RS30/RS40 devices.

Use this command to enable/disable the DIP switch configuration.

Default

disabled

Format

```
dip-switch operation { enable | disable }
```

Mode

Global Config

enable

Enable the DIP switch configuration.

disable

Disable the DIP switch configuration.
The device ignores DIP switch settings.

4.6.8 macfilter

This command adds a static MAC filter entry for the MAC address <macaddr> on the VLAN <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The restricted MAC Addresses are: 00:00:00:00:00:00, 01:80:C2:00:00:00 to 01:80:C2:00:00:0F, 01:80:C2:00:00:20 to 01:80:C2:00:00:21, and FF:FF:FF:FF:FF:FF.

The <vlanid> parameter must identify a valid VLAN (1 to 4042) .

Up to 100 static MAC filters may be created.

Format

```
macfilter <macaddr> <vlanid>
```

Mode

```
Global Config
```

■ no macfilter

This command removes all filtering restrictions and the static MAC filter entry for the MAC address <macaddr> on the VLAN <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The <vlanid> parameter must identify a valid VLAN (1 to 4042).

Format

```
no macfilter <macaddr> <vlanid>
```

Mode

```
Global Config
```

4.6.9 macfilter adddest

This command adds the interface to the destination filter set for the MAC filter with the given <macaddr> and VLAN of <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The <vlanid> parameter must identify a valid VLAN (1-4042).

Format

```
macfilter adddest <macaddr> <vlanid>
```

Mode

```
Interface Config
```

■ no macfilter adddest

This command removes a port from the destination filter set for the MAC filter with the given <macaddr> and VLAN of <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The <vlanid> parameter must identify a valid VLAN (1-4042).

Format

```
no macfilter adddest <macaddr> <vlanid>
```

Mode

```
Interface Config
```


4.6.10 macfilter adddest all

This command adds all interfaces to the destination filter set for the MAC filter with the given <macaddr> and VLAN of <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The <vlanid> parameter must identify a valid VLAN (1 to 4042).

Format

```
macfilter adddest {all | <macaddr> <vlanid>}
```

Mode

```
Global Config
```

■ no macfilter adddest all

This command removes all ports from the destination filter set for the MAC filter with the given <macaddr> and VLAN of <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The <vlanid> parameter must identify a valid VLAN (1 to 4042).

Format

```
no macfilter adddest [all | <macaddr> <vlanid>]
```

Mode

```
Global Config
```

4.6.11 monitor session

This command configures a probe port and a monitored port for monitor session (port monitoring). The first slot/port is the source monitored port and the second slot/port is the destination probe port. If this command is executed while port monitoring is enabled, it will have the effect of changing the probe and monitored port values.

Format

```
monitor session
  [ mode |
    source interface <slot/port>
      [direction { rx | tx | tx/rx } ] |
    destination interface <slot/port> ]
```

Mode

Global Config

session-id

Session number (currently, session number 1 is supported).

mode

Enable/Disable port mirroring session.

Note: does not affect the source or destination interfaces.

source interface <slot/port>

Configure the source interface (in `slot/port` notation).

direction

Configure the direction of the interface.

rx

Configure the direction of the interface as rx (receive).

tx

Configure the direction of the interface as tx (transmit).

rx/tx

Configure the direction of the interface as rx/tx (receive and transmit).

destination interface <slot/port>

Configure the probe interface (in `slot/port` notation).

■ **no monitor session**

This command removes the monitor session (port monitoring) designation from both the source probe port and the destination monitored port and removes the probe port from all VLANs. The port must be manually re-added to any desired VLANs.

Format

```
no monitor session
```

Mode

```
Global Config
```

session-id

Session number (currently, session number 1 is supported).

4.6.12 monitor session mode

This command configures the monitor session (port monitoring) mode to enable. The probe and monitored ports must be configured before monitor session (port monitoring) can be enabled. If enabled, the probe port will monitor all traffic received and transmitted on the physical monitored port. It is not necessary to disable port monitoring before modifying the probe and monitored ports.

Default

disabled

Format

```
monitor session mode
```

Mode

Global Config

session-id

Session number (currently, session number 1 is supported).

■ no monitor session mode

This command sets the monitor session (port monitoring) mode to disable.

Format

```
no monitor session mode
```

Mode

Global Config

session-id

Session number (currently, session number 1 is supported).

4.6.13 monitor session <session-id> source/destination

This command allows you to configure and activate the port mirroring function of the switch. Port mirroring is when the data traffic of a source port is copied to a specified destination port. The data traffic at the source port is not influenced by port mirroring. A management tool connected at the specified port, e.g., an RMON probe, can thus monitor the data traffic of the source port.

Note: In active port mirroring, the specified destination port is used solely for observation purposes.

Default

none

Format

```
monitor session {source | destination} interface
<slot/port>
```

Mode

Global Config

session-id

Session number (currently, session number 1 is supported).

■ no monitor session <session-id> source/destination

This command resets the monitor session (port monitoring) source/destination. The port will be removed from port mirroring

Format

```
no monitor session <session-id> {source | destina-
tion} interface
```

Mode

Global Config

session-id

Session number (currently, session number 1 is supported).

4.6.14 set igmp

This command enables IGMP Snooping on the system. The default value is disable.

Note: The IGMP snooping application supports the following:

- ▶ Global configuration or per interface configuration.
- ▶ Validation of the IP header checksum (as well as the IGMP header checksum) and discarding of the frame upon checksum error.
- ▶ Maintenance of the forwarding table entries based on the MAC address versus the IP address.
- ▶ Flooding of unregistered multicast data packets to all ports in the VLAN.

Format

```
set igmp
```

Mode

```
Global Config
```

■ no set igmp

This command disables IGMP Snooping on the system.

Format

```
no set igmp
```

Mode

```
Global Config
```

4.6.15 set igmp

This command enables IGMP Snooping on a selected interface.

Default

enabled

Format

```
set igmp
```

Mode

Interface Config

■ no set igmp

This command disables IGMP Snooping on a selected interface.

Format

```
no set igmp
```

Mode

Interface Config

4.6.16 set igmp aging-time-unknown

This command configures the IGMP Snooping aging time for unknown multicast frames (unit: seconds, min.: 3, max.: 3,600, default: 260).

Format

```
set igmp aging-time-unknown <3-3600>
```

Mode

Global Config

4.6.17 set igmp automatic-mode

If enabled, this port is allowed to be set as static query port automatically, if the LLDP protocol has found a switch or router connected to this port. Use the command's normal form to enable the feature, the 'no' form to disable it.

Default

disabled

Format

```
set igmp automatic-mode
```

Mode

Interface Config

4.6.18 set igmp forward-all

This command activates the forwarding of multicast frames to this interface even if the given interface has not received any reports by hosts. N. B.: this applies only to frames that have been learned via IGMP Snooping. The purpose is that an interface (e. g. a HIPER Ring's ring port) may need to forward all such frames even if no reports have been received on it. This enables faster recovery from ring interruptions for multicast frames.

Default

disabled

Format

```
set igmp forward-all
```

Mode

Interface Config

■ no set igmp forward-all

This command disables the forwarding of all multicast frames learned via IGMP Snooping on a selected interface.

Format

```
no set igmp forward-all
```

Mode

Interface Config

4.6.19 set igmp forward-unknown

Note: This command is available for MS20/MS30.

This command defines how to handle unknown multicast frames.

Format

```
set igmp forward-unknown
                        { discard | flood | query-ports}
```

Mode

Global Config

discard

Unknown multicast frames will be discarded.

flood

Unknown multicast frames will be flooded.

query-ports

Unknown multicast frames will be forwarded only to query ports.

4.6.20 set igmp static-query-port

This command activates the forwarding of IGMP membership report frames to this interface even if the given interface has not received any queries. The purpose is that a port may need to forward such frames even if no queries have been received on it (e. g., if a router is connected to the interface that sends no queries).

Default

disabled

Format

```
set igmp static-query-port
```

Mode

Interface Config

■ no set igmp

This command disables the unconditional forwarding of IGMP membership report frames to this interface.

Format

```
no set igmp static-query-port
```

Mode

Interface Config

4.6.21 set igmp groupmembershipinterval

This command sets the IGMP Group Membership Interval time on the system. The Group Membership Interval time is the amount of time in seconds that a switch will wait for a report from a particular group on a particular interface before deleting the interface from the entry. This value must be greater than the IGMP Maximum Response time value. The range is 3 to 3,600 seconds.

Default

260

Format

```
set igmp groupmembershipinterval <3-3600>
```

Mode

Global Config

■ no set igmp groupmembershipinterval

This command sets the IGMP Group Membership Interval time on the system to 260 seconds.

Format

```
no set igmp groupmembershipinterval
```

Mode

Global Config

4.6.22 set igmp interfacemode

This command enables IGMP Snooping on all interfaces.

Format

```
set igmp interfacemode
```

Mode

```
Global Config
```

■ no set igmp interfacemode

This command disables IGMP Snooping on all interfaces.

Format

```
no set igmp interfacemode
```

Mode

```
Global Config
```

4.6.23 set igmp lookup-interval-unknown

This command configures the IGMP Snooping lookup response time for unknown multicast frames (unit: seconds, min.: 2, max.: 3,599, default: 125).

Format

```
set igmp lookup-interval-unknown <2-3599>
```

Mode

```
Global Config
```

<2-3599>

Enter the IGMP Snooping lookup response time for unknown multicast frames (unit: seconds, min.: 2, max.: 3,599, default: 125).

4.6.24 set igmp lookup-resp-time-unknown

This command configures the IGMP Snooping lookup interval for unknown multicast frames (unit: seconds, min.: 1, max.: 3,598, default: 10).

Format

```
set igmp lookup-resp-time-unknown <1-3598>
```

Mode

Global Config

<2-3598>

Enter the IGMP Snooping lookup interval for unknown multicast frames (unit: seconds, min.: 1, max.: 3,598, default: 10).

4.6.25 set igmp maxresponse

This command sets the IGMP Maximum Response time on the system. The Maximum Response time is the amount of time in seconds that a switch will wait after sending a query in response to a received leave message, before deleting the multicast group received in the leave message. If the switch receives a report in response to the query within the maxresponse time, then the multicast group is not deleted. This value must be less than the IGMP Query Interval time value. The range is 1 to 3,598 seconds.

Default

10

Format

```
set igmp maxresponse <1-3598>
```

Mode

Global Config

Note: the IGMP Querier's max. response time was also set. It is always the same value as the IGMP Snooping max. response time.

■ no set igmp maxresponse

This command sets the IGMP Maximum Response time on the system to 10 seconds.

Format

```
no set igmp maxresponse
```

Mode

Global Config

4.6.26 set igmp querier max-response-time

Configure the IGMP Snooping Querier's maximum response time. The range is 1 to 3,598 seconds. The default value is 10 seconds.

Default

10

Format

```
set igmp querier max-response-time <1-3598>
```

Mode

Global Config

Note: The IGMP Snooping max. response time was also set. It is always the same value as the IGMP Querier's max. response time.

4.6.27 set igmp querier protocol-version

Configure the IGMP Snooping Querier's protocol version (1, 2 or 3).

Default

2

Format

```
set igmp querier protocol-version {1 | 2 | 3}
```

Mode

Global Config

4.6.28 set igmp querier status

Configure the IGMP Snooping Querier's administrative status (enable or disable).

Default

```
disable
```

Format

```
set igmp querier status {enable | disable}
```

Mode

```
Global Config
```

4.6.29 set igmp querier tx-interval

Configure the IGMP Snooping Querier's transmit interval. The range is 2 to 3,599 seconds.

Default

```
125
```

Format

```
set igmp querier tx-interval <2-3599>
```

Mode

```
Global Config
```

4.6.30 set igmp query-ports-to-filter

This command enables or disables the addition of query ports to multicast filter portmasks. The setting can be enable or disable.

Default

Disable

Format

```
set igmp query-ports-to-filter {enable | disable}
```

Mode

Global Config

enable

Addition of query ports to multicast filter portmasks.

disable

No addition of query ports to multicast filter portmasks.

4.6.31 set pre-login-banner text

Use this command to set the text for the pre-login banner. The device displays this banner additionally before login in the CLI and before login in the graphical user interface.

Default

Empty string

Format

```
set pre-login-banner text <text>
```

Mode

Privileged Exec

text

Enter the text for the pre-login banner.

Possible values: Max. 255 characters in the range ASCII code 0x20 (space character, " ") to ASCII code 0x7E (tilde, "~"), except ASCII code 0x25 (percent sign, "%").

Use "\n" for new line and "\t" for tab.

4.6.32 selftest ramtest

Enable or disable the RAM test for a cold start of the device.

Deactivating the RAM test reduces the booting time for a cold start of the device.

Default: enabled.

Format

```
selftest ramtest {disable|enable}
```

Mode

Global Config

selftest ramtest disable

Disable the ramtest.

selftest ramtest enable

Enable the ramtest. This is the default.

4.6.33 selftest reboot-on-hdxerror

Enable or disable a restart when the device detects a half duplex mismatch error. Default: enabled.

Format

```
selftest reboot-on-hdxerror {disable|enable}
```

Mode

Global Config

selftest reboot-on-hdxerror disable

Disable the reboot-on-hdxerror function.

selftest reboot-on-hdxerror enable

Enable the reboot-on-hdxerror function. This is the default.

4.6.34 selftest reboot-on-error

Enable or disable a restart due to an undefined software or hardware state.
Default: disabled.

Format

```
selftest reboot-on-error  
                    {disable|enable|seriousOnly}
```

Mode

Global Config

selftest reboot-on-error disable

Disable the reboot-on-error function. This is the default.

selftest reboot-on-error enable

Enable the reboot-on-error function.

selftest reboot-on-error seriousOnly

The device will only reboot on errors considered to be critical.

Note: Duplex mismatch errors are considered to be non-critical. In case of a detected duplex mismatch error, the device will not reboot. Reset the device to restore ports to an usable state.

4.6.35 show auto-disable brief

Use this command to display the Auto Disable summary.

Format

```
show auto-disable brief
```

Mode

```
Global Config
```

Intf

Display the number of the interface in slot/port format.

Error reason

Display the error reason for auto-disable.

Possible values: no error, link-flap, crc-error, overload-detection.

Component name

Display the name of the component for auto-disable.

Remaining time(sec.)

Display the remaining time in seconds for auto-disable.

Possible values: 0 | 30..2147483.

Auto-Disable time(sec.)

Display the time for auto-disable in seconds.

Possible values: 0 | 30..2147483.

Auto-Disable oper state

Display the operational state of the auto-disable function.

Possible values: active, inactive.

4.6.36 show auto-disable reasons

Use this command to display the reasons for port auto-disable on this device.

Format

```
show auto-disable reasons
```

Mode

```
Global Config
```

Error reason

Display the error reasons of the port auto-disable function (link-flap, crc-error, overload-detection).

State

Display the state of the port auto-disable function.
Possible values: enabled, disabled.

4.6.37 show dip-switch

This command displays the DIP switch operation configuration.

Format

```
show dip-switch
```

Mode

```
Global Config
```

DIP Switch operation

This field displays the DIP Switch operation status.

Possible values: `Enabled`, `Disabled`

DIP Switch conflict

This field displays the DIP Switch conflict status.

Possible values: `True`, `False`

DIP Switch Red. Manager

This field displays the DIP Switch Redundancy Manager status.

Possible values: `Enabled`, `Disabled`

DIP Switch Standby

This field displays the DIP Switch Standby status.

Possible values: `Enabled`, `Disabled`

DIP Switch RingPort

Note: This command is available for the MICE devices.

This field displays the DIP Switch RingPort numbers.

Possible values: Interface number in `slot/port` notation.

DIP Switch SW config

Note: This command is available for the MICE devices.

This field displays the DIP Switch SW config status.

Possible values: `Enabled`, `Disabled`

4.6.38 show igmpsnooping

This command displays IGMP Snooping information. Configured information is displayed whether or not IGMP Snooping is enabled. Status information is only displayed when IGMP Snooping is enabled.

Format

```
show igmpsnooping
```

Mode

Privileged EXEC and User EXEC

Admin Mode

This indicates whether or not IGMP Snooping is globally enabled on the switch.

Forwarding of Unknown Frames

This displays if and how unknown multicasts are forwarded. The setting can be Discard, Flood or Query Ports. The default is Query Ports.

Group Membership Interval

This displays the IGMP Group Membership Interval. This is the amount of time a switch will wait for a report for a particular group on a particular interface before it sends a query on that interface. This value may be configured.

Multicast Control Frame Count

This displays the number of multicast control frames that are processed by the CPU.

Interfaces Enabled for IGMP Snooping

This is the list of interfaces on which IGMP Snooping is enabled. Additionally, if a port has a special function, it will be shown to the right of its slot/port number. There are 3 special functions: Forward All, Static Query Port and Learned Query Port.

Querier Status (the administrative state).

This displays the IGMP Snooping Querier's administrative status.

Querier Mode (the actual state, read only)

This displays the IGMP Snooping Querier's operating status.

Querier Transmit Interval

This displays the IGMP Snooping Querier's transmit interval in seconds.

Querier Max. Response Time

This displays the IGMP Snooping Querier's maximum response time in seconds.

Querier Protocol Version

This displays the IGMP Snooping Querier's protocol version number.

4.6.39 show mac-filter-table igmpsnooping

This command displays the IGMP Snooping entries in the Multicast Forwarding Database (MFDB) table.

Format

```
show mac-filter-table igmpsnooping
```

Mode

Privileged EXEC and User EXEC

Mac Address

A multicast MAC address for which the switch has forwarding and or filtering information. The format is two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.

Type

This displays the type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.

Description

The text description of this multicast table entry.

Interfaces

The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

4.6.40 show mac-filter-table multicast

This command displays the Multicast Forwarding Database (MFDB) information. If the command is entered with no parameter, the entire table is displayed. This is the same as entering the optional `all` parameter. The user can display the table entry for one MAC Address by specifying the MAC address as an optional parameter.

Format

```
show mac-filter-table multicast
        [<macaddr> <1-4042>]
```

Mode

Privileged EXEC and User EXEC

Mac Address

A multicast MAC address for which the switch has forwarding and or filtering information. The format is two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.

Type

This displays the type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.

Component

The component that is responsible for this entry in the Multicast Forwarding Database. Possible values are IGMP Snooping and Static Filtering.

Description

The text description of this multicast table entry.

Interfaces

The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

Forwarding Interfaces

The resultant forwarding list is derived from combining all the component's forwarding interfaces and removing the interfaces that are listed as the static filtering interfaces.

4.6.41 show mac-filter-table static

This command displays the Static MAC Filtering information for all Static MAC Filters. If `all` is selected, all the Static MAC Filters in the system are displayed. If a `macaddr` is entered, a `vlan` must also be entered and the Static MAC Filter information will be displayed only for that MAC address and VLAN.

Format

```
show mac-filter-table static {<macaddr> <vlanid> |  
all}
```

Mode

Privileged EXEC and User EXEC

MAC Address

Is the MAC Address of the static MAC filter entry.

VLAN ID

Is the VLAN ID of the static MAC filter entry.

Source Port(s)

Indicates the source port filter set's slot and port(s).

Destination Port(s)

Indicates the destination port filter set's slot and port(s).

4.6.42 show mac-filter-table staticfiltering

This command displays the Static Filtering entries in the Multicast Forwarding Database (MFDB) table.

Format

```
show mac-filter-table staticfiltering
```

Mode

Privileged EXEC and User EXEC

Mac Address

A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB.

Type

This displays the type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.

Description

The text description of this multicast table entry.

Interfaces

The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

4.6.43 show mac-filter-table stats

This command displays the Multicast Forwarding Database (MFDB) statistics.

Format

```
show mac-filter-table stats
```

Mode

Privileged EXEC and User EXEC

Total Entries

This displays the total number of entries that can possibly be in the Multicast Forwarding Database table.

Most MFDB Entries Ever Used

This displays the largest number of entries that have been present in the Multicast Forwarding Database table. This value is also known as the MFDB high-water mark.

Current Entries

This displays the current number of entries in the Multicast Forwarding Database table.

4.6.44 show monitor session

This command displays the port monitoring information for the system.

Format

```
show monitor session <Session Number>
```

Mode

Global Config, Privileged EXEC, User EXEC

Session

Display port monitor session settings.

Session Number

Session number. Enter 1 for the session number.

Session ID

Displays the session number of the port monitor session.

Possible values: 1.

Admin Mode

Displays the status of the port monitoring feature.

Possible values: Enable, Disable.

Probe Port

Displays the interface configured as the probe port (in slot/port notation). If this value has not been configured, 'Not Configured' will be displayed.

Mirrored Port

Displays the interface configured as the mirrored port (in slot/port notation). If this value has not been configured, 'Not Configured' will be displayed.

Direction

Displays the direction which has been configured for the port.

Possible values: rx (receive), tx (transmit), rx/tx (receive and transmit)

If this value has not been configured, 'Not Configured' will be displayed.

4.6.45 show port

This command displays port information.

Format

```
show port {<slot/port> | all} [name]
```

Mode

Privileged EXEC and User EXEC

Slot/Port

Valid slot and port number separated by forward slashes.

Name

When the optional command parameter `name` was specified, the output is different. It specifically includes the Interface Name as the second column, followed by other basic settings that are also shown by the normal command without the command parameter `name`.

Type

If not blank, this field indicates that this port is a special type of port. The possible values are:

`Mon` - this port is a monitoring port. Look at the Port Monitoring screens to find out more information.

`LA Mbr` - this port is a member of a Link Aggregation (LAG).

`Probe` - this port is a probe port.

Admin Mode

Indicates the Port control administration state. The port must be enabled in order for it to be allowed into the network. - May be enabled or disabled. The factory default is enabled.

Physical Mode

Indicates the desired port speed and duplex mode. If auto-negotiation support is selected, then the duplex mode and speed will be set from the auto-negotiation process. Note that the port's maximum capability (full duplex -100M) will be advertised. Otherwise, this object will determine the port's duplex mode and transmission rate. The factory default is Auto.

Physical Status

Indicates the port speed and duplex mode.

Link Status

Indicates whether the Link is up or down.

Link Trap

This object determines whether or not to send a trap when link status changes. The factory default is enabled.

Flow

Indicates if enable flow control is enabled on this port.

Device Status

Indicates whether or not the given port's link status is monitored by the device status.

VLAN Prio

This object displays the port VLAN priority.

4.6.46 show rmon-alarm

This command displays switch configuration information.

Format

```
show rmon-alarm
```

Mode

Privileged EXEC and User EXEC

4.6.47 show selftest

This command displays switch configuration information.

Format

```
show selftest
```

Mode

Privileged EXEC and User EXEC

Ramtest state

May be enabled or disabled. The factory default is enabled.

Reboot on error

May be enabled, disabled or seriousOnly. The factory default is enabled.

4.6.48 show storm-control

This command displays switch configuration information.

Format

```
show storm-control
```

Mode

Privileged EXEC and User EXEC

Ingress Limiting

May be enabled or disabled. The factory default is disabled.

Ingress Limiter Mode

Note: This command is available for the MACH4000 and PowerMICE devices.

Sets the global mode for the ingress limiter. The factory default is: Broadcasts only.

Egress Broadcast Limiting

May be enabled or disabled. The factory default is disabled.

Egress Limiting (all traffic)

May be enabled or disabled. The factory default is disabled.

802.3x Flow Control Mode

May be enabled or disabled. The factory default is disabled.

4.6.49 show storm-control limiters port

This command displays the limiter settings per port. "0" means that the respective limiter is disabled.

Format

```
show storm-control limiters port {<slot/port>|all}
```

Mode

Privileged EXEC and User EXEC

Ingress Mode

Note: This command is available for the devices RS20/RS30/RS40, MS20/MS30 and OCTOPUS.

Shows the mode for the ingress limiter. The factory default is: Broadcasts only.

Ingress Limit

Shows the ingress rate limit. The factory default is: 0.

Egress Broadcast Limit

Shows the egress broadcast rate limit. The factory default is: 0.

Egress Limit (all traffic)

Note: This command is available for the devices RS20/RS30/RS40, MS20/MS30 and OCTOPUS.

Shows the egress rate limit for all frame types.

The factory default is: 0.

4.6.50 show vlan

This command displays detailed information, including interface information, for a specific VLAN. The ID is a valid VLAN identification number

Format

```
show vlan <vlanid>
```

Mode

Privileged EXEC and User EXEC

VLAN ID

There is a VLAN Identifier (VID) associated with each VLAN. The range of the VLAN ID is 1 to 4042.

VLAN Name

A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of `Default`. This field is optional.

VLAN Type

Type of VLAN, which can be Default, (VLAN ID = 1), a static (one that is configured and permanently defined), or Dynamic (one that is created by GVRP registration).

VLAN Creation Time

Time since VLAN has been created:
d days, hh:mm:ss (System Uptime).

Interface

Valid slot and port number separated by forward slashes. It is possible to set the parameters for all ports by using the selectors on the top line.

Current

Determines the degree of participation of this port in this VLAN. The permissible values are:

`Include` - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard.

`Exclude` - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard.

`Autodetect` - Specifies to allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.

Configured

Determines the configured degree of participation of this port in this VLAN. The permissible values are:

`Include` - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard.

`Exclude` - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard.

`Autodetect` - Specifies to allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.

Tagging

Select the tagging behavior for this port in this VLAN.

`Tagged` - specifies to transmit traffic for this VLAN as tagged frames.

`Untagged` - specifies to transmit traffic for this VLAN as untagged frames.

4.6.51 show vlan brief

This command displays a list of all configured VLANs.

Format

```
show vlan brief
```

Mode

Privileged EXEC and User EXEC

VLAN ID

There is a VLAN Identifier (`vlanid`) associated with each VLAN. The range of the VLAN ID is 1 to 4042.

VLAN Name

A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of ``Default``. This field is optional.

VLAN Type

Type of VLAN, which can be Default, (VLAN ID = 1), a static (one that is configured and permanently defined), or a Dynamic (one that is created by GVRP registration).

VLAN Creation Time

Displays the time (as the system time up time) when the VLAN was created.

4.6.52 show vlan port

This command displays VLAN port information.

Format

```
show vlan port {<slot/port> | all}
```

Mode

Privileged EXEC and User EXEC

Slot/Port

Valid slot and port number separated by forward slashes. It is possible to set the parameters for all ports by using the selectors on the top line.

Port VLAN ID

The VLAN ID that this port will assign to untagged frames or priority tagged frames received on this port. The value must be for an existing VLAN. The factory default is 1.

Acceptable Frame Types

Specifies the types of frames that may be received on this port. The options are 'VLAN only' and 'Admit All'. When set to 'VLAN only', untagged frames or priority tagged frames received on this port are discarded. When set to 'Admit All', untagged frames or priority tagged frames received on this port are accepted and assigned the value of the Port VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance to the 802.1Q VLAN specification.

Ingress Filtering

May be enabled or disabled. When enabled, the frame is discarded if this port is not a member of the VLAN with which this frame is associated. In a tagged frame, the VLAN is identified by the VLAN ID in the tag. In an untagged frame, the VLAN is the Port VLAN ID specified for the port that received this frame. When disabled, all frames are forwarded in accordance with the 802.1Q VLAN bridge specification. The factory default is disabled.

GVRP

The protocol for VLAN administration, GVRP (GARP VLAN Registration Protocol) is particularly used for the adjustment of terminal devices and VLAN switches. In realtime, it traces users log-in and log-off and provides updated configuration data to the network management system. In order to be able to use this protocol, GVRP has

to be supported by every switch.

GVRP may be enabled or disabled. The factory default is disabled.

Default Priority

The 802.1p priority assigned to tagged packets arriving on the port.

4.6.53 shutdown

This command disables a port.

Default

enabled

Format

shutdown

Mode

Interface Config

■ no shutdown

This command enables a port.

Format

no shutdown

Mode

Interface Config

4.6.54 shutdown all

This command disables all ports.

Default

enabled

Format

shutdown all

Mode

Global Config

■ no shutdown all

This command enables all ports.

Format

no shutdown *all*

Mode

Global Config

4.6.55 snmp trap link-status

This command enables link status traps by interface.

Note: This command is valid only when the Link Up/Down Flag is enabled. See 'snmp-server enable traps linkmode' command.

Format

```
snmp trap link-status
```

Mode

```
Interface Config
```

■ no snmp trap link-status

This command disables link status traps by interface.

Note: This command is valid only when the Link Up/Down Flag is enabled. See 'snmp-server enable traps linkmode' command).

Format

```
no snmp trap link-status
```

Mode

```
Interface Config
```

4.6.56 snmp trap link-status all

This command enables link status traps for all interfaces.

Note: This command is valid only when the Link Up/Down Flag is enabled (see “snmp-server enable traps linkmode”).

Format

```
snmp trap link-status all
```

Mode

```
Global Config
```

■ no snmp trap link-status all

This command disables link status traps for all interfaces.

Note: This command is valid only when the Link Up/Down Flag is enabled (see “snmp-server enable traps linkmode”).

Format

```
no snmp trap link-status all
```

Mode

```
Global Config
```

4.6.57 spanning-tree bpdumigrationcheck

This command enables BPDU migration check on a given interface. This will force the specified port to transmit RST or MST BPDUs. The **all** option enables BPDU migration check on all interfaces.

Format

```
spanning-tree bpdumigrationcheck {<slot/port>|all}
```

Mode

Global Config

■ no spanning-tree bpdumigrationcheck

This command disables BPDU migration check on a given interface. The **all** option disables BPDU migration check on all interfaces.

Format

```
no spanning-tree bpdumigrationcheck {<slot/  
port>|all}
```

Mode

Global Config

4.6.58 speed

This command sets the speed and duplex setting for the interface.

Format

```
speed {<100 | 10> <half-duplex | full-duplex> | 1000  
full-duplex}
```

Mode

```
Interface Config
```

Acceptable values are:

1000f

```
1000BASE-T full duplex
```

100h

```
100BASE-T half duplex
```

100f

```
100BASE-T full duplex
```

10h

```
10BASE-T half duplex
```

10f

```
100BASE-T full duplex
```

4.6.59 storm-control broadcast

This command enables the egress broadcast limiter globally.

Format

```
storm-control broadcast
```

Mode

```
Global Config
```

■ no storm-control broadcast

This command disables the egress broadcast limiter globally.

Format

```
no storm-control broadcast
```

Mode

```
Global Config
```

4.6.60 storm-control egress-limiting

This command enables or disables the egress limiter globally for all frame types.

Format

```
storm-control egress-limiting {disable | enable}
```

Mode

```
Global Config
```

4.6.61 storm-control ingress-limiting

This command enables or disables the ingress limiter globally.

Format

```
storm-control ingress-limiting {disable | enable}
```

Mode

```
Global Config
```

4.6.62 storm-control ingress-mode

Note: This command is available for the MACH4000 and PowerMICE devices.

This command sets the frame type for the ingress limiter globally to: BC or BC+MC.

Format

```
storm-control ingress-mode {bc | mc+bc}
```

Mode

```
Global Config
```

4.6.63 storm-control broadcast (port-related)

This command enables the broadcast limiter per port.

Enter the maximum number of broadcasts that the given port is allowed to send (unit: frames per second, min.: 0 (no limit), default: 0 (no limit)).

Format

```
storm-control broadcast <max. broadcast rate>
```

Mode

```
Interface Config
```

4.6.64 storm-control egress-limit

Note: This command is available for the RS20/RS30/RS40, MS20/MS30 and OCTOPUS devices.

Sets the egress rate limit in kbit/s. "0" means: no limit.

Format

```
storm-control egress-limit <max. egress rate>
```

Mode

```
Interface Config
```


4.6.65 storm-control ingress-limit

Sets the ingress rate limit in kbit/s. "0" means: no limit.

Format

```
storm-control ingress-limit <max. ingress rate>
```

Mode

```
Interface Config
```

4.6.66 storm-control ingress-mode

Note: This command is available for the RS20/RS30/RS40, MS20/MS30, OCTOPUS devices.

This command sets the frame type for the ingress limiter to:
All, BC, BC+MC, BC+MC+uUC.

Format

```
storm-control ingress-mode {all | bc | mc+bc |  
uuc+mc+bc}
```

Mode

```
Interface Config
```

4.6.67 storm-control flowcontrol

This command enables 802.3x flow control for the switch.

Note: This command only applies to full-duplex mode ports.

Default

disabled

Format

```
storm-control flowcontrol
```

Mode

Interface Config
Global Config

■ no storm-control flowcontrol

This command disables 802.3x flow control for the switch.

Note: This command only applies to full-duplex mode ports.

Format

```
no storm-control flowcontrol
```

Mode

Interface Config
Global Config

4.6.68 storm-control flowcontrol per port

This command enables 802.3x flow control for the port.

Note: This command only applies to full-duplex mode ports.

Default

enabled

Format

```
storm-control flowcontrol
```

Mode

Interface Config

■ no storm-control flowcontrol per port

This command disables 802.3x flow control for the port.

Note: This command only applies to full-duplex mode ports.

Format

```
no storm-control flowcontrol
```

Mode

Interface Config

4.6.69 vlan

This command creates a new VLAN and assigns it an ID. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). VLAN range is 1-4042.

Format

```
vlan <1-4042>
```

Mode

```
VLAN database
```

■ no vlan

This command deletes an existing VLAN. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). VLAN range is 1-4042.

Format

```
no vlan <1-4042>
```

Mode

```
VLAN database
```

4.6.70 vlan0-transparent-mode

Activate the “Transparent Mode” to be able to switch priority tagged frames without a VLAN affiliation thus with VLAN-ID “0”.

In this mode the VLAN-ID “0” persists in the frame, irrespective of the Port VLAN ID setting in the “VLAN Port” dialog.

Note: For PowerMICE, MACH100, MACH1000 and MACH4000:
In transparency mode devices ignore received vlan tags. Set the vlan membership of the ports to untagged for all vlans.

Note: For RS20/RS30/RS40, MS20/MS30 and OCTOPUS:
In transparency mode devices ignore the configured port vlan id. Set the vlan membership of the ports from vlan 1 to untagged or member.

Format

```
vlan0-transparent-mode {disable|enable}
```

Mode

```
VLAN database
```

4.6.71 vlan acceptframe

This command sets the frame acceptance mode per interface. For VLAN Only mode, untagged frames or priority frames received on this interface are discarded. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Default

```
Admit All
```

Format

```
vlan acceptframe <vlanonly | all | untaggedonly>
```

Mode

```
Interface Config
```

all

Untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port.

vlanonly

Only frames received with a VLAN tag will be forwarded. Other frames will be dropped.

untaggedonly

Only frames received without a VLAN tag will be forwarded. Other frames will be dropped.

Note: This command is available for devices of the RS20/RS30/RS40, MS20/MS30, MACH102, RSR20/RSR30, MACH1020/MACH1030 and OCTOPUS family.

■ no vlan acceptframe

This command sets the frame acceptance mode per interface to `Admit All`. For `Admit All` mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Format

```
no vlan acceptframe
```

Mode

```
Interface Config
```

4.6.72 vlan database

This command switches into the global VLAN mode.

Default

```
Admit All
```

Format

```
vlan database
```

Mode

```
Privileged EXEC
```

4.6.73 vlan ingressfilter

This command enables ingress filtering. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default

disabled

Format

```
vlan ingressfilter
```

Mode

Interface Config

■ no vlan ingressfilter

This command disables ingress filtering. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format

```
no vlan ingressfilter
```

Mode

Interface Config

4.6.74 vlan name

This command changes the name of a VLAN. The name is an alphanumeric string of up to 32 characters, and the ID is a valid VLAN identification number. ID range is 1-4042.

Default

The name for VLAN ID 1 is always Default. The name for other VLANs is defaulted to a blank string.

Format

```
vlan name <1-4042> <newname>
```

Mode

```
VLAN database
```

■ no vlan name

This command sets the name of a VLAN to a blank string. The VLAN ID is a valid VLAN identification number. ID range is 1-4042.

Format

```
no vlan name <1-4042>
```

Mode

```
VLAN database
```

4.6.75 vlan participation

This command configures the degree of participation for a specific interface in a VLAN. The ID is a valid VLAN identification number, and the interface is a valid interface number .

Format

```
vlan participation  
    <exclude | include | auto> <1-4042>
```

Mode

```
Interface Config
```

Participation options are:

include

The interface is always a member of this VLAN. This is equivalent to registration fixed.

exclude

The interface is never a member of this VLAN. This is equivalent to registration forbidden.

auto

The interface is dynamically registered in this VLAN by GVRP. The interface will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

4.6.76 vlan participation all

This command configures the degree of participation for all interfaces in a VLAN. The ID is a valid VLAN identification number .

Format

```
vlan participation all <exclude | include | auto>  
<1-4042>
```

Mode

```
Global Config
```

Participation options are:

include

The interface is always a member of this VLAN. This is equivalent to registration fixed.

exclude

The interface is never a member of this VLAN. This is equivalent to registration forbidden.

auto

The interface is dynamically registered in this VLAN by GVRP. The interface will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

4.6.77 vlan port acceptframe all

This command sets the frame acceptance mode for all interfaces. For VLAN Only mode, untagged frames or priority frames received on this interface are discarded. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Default

```
Admit All
```

Format

```
vlan port acceptframe all <vlanonly | all>
```

Mode

```
Global Config
```

■ no vlan port acceptframe all

This command sets the frame acceptance mode for all interfaces to `Admit All`. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Format

```
no vlan port acceptframe all
```

Mode

```
Global Config
```

4.6.78 vlan port ingressfilter all

This command enables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default

disabled

Format

```
vlan port ingressfilter all
```

Mode

Global Config

■ no vlan port ingressfilter all

This command disables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format

```
no vlan port ingressfilter all
```

Mode

Global Config

4.6.79 vlan port pvid all

This command changes the VLAN ID for all interface.

Default

1

Format

```
vlan port pvid all <1-4042>
```

Mode

Global Config

■ no vlan port pvid all

This command sets the VLAN ID for all interfaces to 1.

Format

```
no vlan port pvid all <1-4042>
```

Mode

Global Config

4.6.80 vlan port tagging all

This command configures the tagging behavior for all interfaces in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format

```
vlan port tagging all <1-4042>
```

Mode

```
Global Config
```

■ no vlan port tagging all

This command configures the tagging behavior for all interfaces in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format

```
no vlan port tagging all <1-4042>
```

Mode

```
Global Config
```

4.6.81 vlan pvid

This command changes the VLAN ID per interface.

Default

1

Format

```
vlan pvid <1-4042>
```

Mode

Interface Config

■ no vlan pvid

This command sets the VLAN ID per interface to 1.

Format

```
no vlan pvid <1-4042>
```

Mode

Interface Config

4.6.82 vlan tagging

This command configures the tagging behavior for a specific interface in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format

```
vlan tagging <1-4042>
```

Mode

```
Interface Config
```

■ no vlan tagging

This command configures the tagging behavior for a specific interface in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format

```
no vlan tagging <1-4042>
```

Mode

```
Interface Config
```

4.7 User Account Management Commands

These commands manage user accounts.

4.7.1 disconnect

This command closes a telnet session.

Format

```
disconnect {<sessionID> | all}
```

Mode

```
Privileged EXEC
```

Session ID

Enter the session ID (1-11).

4.7.2 show loginsession

This command displays current telnet and serial port connections to the switch.

Format

```
show loginsession
```

Mode

Privileged EXEC and User EXEC

ID

Login Session ID

User Name

The name the user will use to login using the serial port or Telnet. A new user may be added to the switch by entering a name in a blank entry. The user name may be up to 8 characters, and is not case sensitive. Two users are included as the factory default, 'admin' and 'user'.

Connection From

IP address of the telnet client machine or EIA-232 for the serial port connection.

Idle Time

Time this session has been idle.

Session Time

Total time this session has been connected.

4.7.3 show users

This command displays the configured user names and their settings. This command is only available for users with readwrite privileges. The SNMPv3 fields will only be displayed if SNMP is available on the system.

Format

```
show users
```

Mode

Privileged EXEC

User Name

The name the user will use to login using the serial port, Telnet or Web. A new user may be added to the switch by entering a name in a blank entry. The user name may be up to eight characters, and is not case sensitive. Two users are included as the factory default, 'admin' and 'user'

Access Mode

Shows whether the operator is able to change parameters on the switch (Read/Write) or is only able to view them (Read Only). As a factory default, the 'admin' user has Read/Write access and the 'user' has Read Only access. There can only be one Read/Write user and up to five Read Only users.

SNMPv3 AccessMode

This field displays the SNMPv3 Access Mode. If the value is set to ReadWrite, the SNMPv3 user will be able to set and retrieve parameters on the system. If the value is set to ReadOnly, the SNMPv3 user will only be able to retrieve parameter information. The SNMPv3 access mode may be different than the CLI and Web access mode.

SNMPv3 Authentication

This field displays the authentication protocol to be used for the specified login user.

SNMPv3 Encryption

This field displays the encryption protocol to be used for the specified login user.

4.7.4 users defaultlogin

This command assigns the authentication login list to use for non-configured users when attempting to log in to the system. This setting is overridden by the authentication login list assigned to a specific user if the user is configured locally. If this value is not configured, users will be authenticated using local authentication only.

Format

```
users defaultlogin <listname>
```

Mode

```
Global Config
```

listname

Enter an alphanumeric string of not more than 15 characters.

4.7.5 users login <user>

Enter user name.

Format

```
users login <user> <listname>
```

Mode

```
Global Config
```

■ no users login <user>

This command removes an operator.

Format

```
no users login <user> <listname>
```

Mode

```
Global Config
```

Note:

The 'admin' user account cannot be deleted.

4.7.6 users access

This command sets access for a user: readonly/readwrite.

Format

```
users access <username> {readonly | readwrite}
```

Mode

Global Config

<username>

Enter a name up to 32 alphanumeric characters in length.

readonly

Enter the access mode as readonly.

readwrite

Enter the access mode as readwrite.

■ no users access

This command deletes access for a user.

Format

```
no users access <username>
```

Mode

Global Config

4.7.7 users name

This command adds a new user (account) if space permits. The account <username> can be up to eight characters in length. The name may be comprised of alphanumeric characters as well as the dash ('-') and underscore ('_'). The <username> is not case-sensitive. Six user names can be defined.

Format

```
users name <username>
```

Mode

```
Global Config
```

■ no users name

This command removes an operator.

Format

```
no users name <username>
```

Mode

```
Global Config
```

Note:

The 'admin' user account cannot be deleted.

4.7.8 users passwd

This command is used to change a password. The password should not be more than eight alphanumeric characters in length. If a user is authorized for authentication or encryption is enabled, the password must be at least eight alphanumeric characters in length. The username and password are case-sensitive. When a password is changed, a prompt will ask for the former password. If none, press enter.

Note: Make sure, that the passwords of the users differ from each other. If two or more users try to choose the same password, the CLI will display an error message.

Default

No Password

Format

```
users passwd <username> {<password>}
```

Mode

Global Config

■ no users passwd

This command sets the password of an existing operator to blank. When a password is changed, a prompt will ask for the operator's former password. If none, press enter.

Format

```
no users passwd <username> {<password>}
```

Mode

Global Config

4.7.9 users snmpv3 accessmode

This command specifies the snmpv3 access privileges for the specified login user. The valid accessmode values are `readonly` or `readwrite`. The `<username>` is the login user name for which the specified access mode applies. The default is `readwrite` for 'admin' user; `readonly` for all other users

Default

```
admin -- readwrite; other -- readonly
```

Format

```
users snmpv3 accessmode <username> <readonly |  
readwrite>
```

Mode

```
Global Config
```

■ no users snmpv3 accessmode

This command sets the snmpv3 access privileges for the specified login user as `readwrite` for the 'admin' user; `readonly` for all other users. The `<username>` is the login user name for which the specified access mode will apply.

Format

```
no users snmpv3 accessmode <username>
```

Mode

```
Global Config
```

4.7.10 users snmpv3 authentication

This command specifies the authentication protocol to be used for the specified login user. The valid authentication protocols are `none`, `md5` or `sha`. If `md5` or `sha` are specified, the user login password is also used as the `snmpv3` authentication password and therefore must be at least eight characters in length. The `<username>` is the login user name associated with the authentication protocol.

Default

```
no authentication
```

Format

```
users snmpv3 authentication <username> <none | md5  
| sha>
```

Mode

```
Global Config
```

■ no users snmpv3 authentication

This command sets the authentication protocol to be used for the specified login user to `none`. The `<username>` is the login user name for which the specified authentication protocol will be used.

Format

```
users snmpv3 authentication <username>
```

Mode

```
Global Config
```

4.7.11 users snmpv3 encryption

This command specifies the encryption protocol to be used for the specified login user. The valid encryption protocols are `des` or `none`.

If `des` is specified, the required key may be specified on the command line. The `key` may be up to 16 characters long. If the `des` protocol is specified but a key is not provided, the user will be prompted for the key. When using the `des` protocol, the user login password is also used as the snmpv3 encryption password and therefore must be at least eight characters in length.

If `none` is specified, a key must not be provided. The `<username>` is the login user name associated with the specified encryption.

Default

```
no encryption
```

Format

```
users snmpv3 encryption <username> <none |  
des[key]>
```

Mode

```
Global Config
```

■ no users snmpv3 encryption

This command sets the encryption protocol to `none`. The `<username>` is the login user name for which the specified encryption protocol will be used.

Format

```
no users snmpv3 encryption <username>
```

Mode

```
Global Config
```

4.8 System Utilities

This section describes system utilities.

4.8.1 address-conflict

This command configures the setting for detection possible address conflicts of the agent's IP address with other devices' IP addresses in the network.

Format

```
address-conflict
  {detection-mode { active-only | disable |
  enable | passive-only}}|
  ongoing-detection { disable | enable } }
```

Mode

Global Config

detection mode

Configure the device's address conflict detection mode (active-only, disable, enable or passive-only). Default: enable.

ongoing detection

Disable or enable the ongoing address conflict detection.
Default: enable.

4.8.2 boot skip-aca-on-boot

Use this command to skip external memory (AutoConfiguration Adapter ACA21) during boot phase to shorten startup duration. The ACA21 functionality will be available after the boot phase.

Format

```
boot skip-aca-on-boot {disable | enable}
```

Mode

```
Global Config
```

Default

```
disabled
```

enable

Enable ACA21 skip during boot phase.

disable

Disable ACA21 skip during boot phase.

4.8.3 show boot skip-aca-on-boot

Use this command display the status of the option of skipping external memory (AutoConfiguration Adapter ACA21) during boot phase.

Format

```
show boot skip-aca-on-boot
```

Mode

```
Global Config
```

Default

```
disabled
```

Enabled

ACA21 skip during boot phase is enabled.

Disabled

ACA21 skip during boot phase is disabled.

4.8.4 clear eventlog

Clear the event log. The CLI will ask for confirmation.

Answer `y` (yes) or `n` (no).

The CLI displays the end of this operation.

Format

```
clear eventlog
```

Mode

Privileged EXEC

4.8.5 traceroute

This command is used to discover the routes that packets actually take when traveling to their destination through the network on a hop-by-hop basis.

`<ipaddr>` should be a valid IP address.

The optional port parameter is the UDP port used as the destination of packets sent as part of the traceroute. This port should be an unused port on the destination system. `[port]` should be a valid decimal integer in the range of 0 (zero) to 65,535. The default value is 33,434.

Format

```
traceroute <ipaddr> [port]
```

Mode

Privileged EXEC

4.8.6 clear arp-table-switch

This command clears the agent's ARP table (cache).

Format

```
clear arp-table-switch
```

Mode

```
Privileged EXEC
```

4.8.7 clear config

This command resets the configuration in RAM to the factory defaults without powering off the switch.

Format

```
clear config
```

Mode

```
Privileged EXEC
```

4.8.8 clear config factory

This command resets the whole configuration to the factory defaults. Configuration data and scripts stored in nonvolatile memory will also be deleted.

Format

```
clear config factory
```

Mode

```
Privileged EXEC
```

4.8.9 clear counters

This command clears the stats for a specified <slot/port> or for all the ports or for the entire switch based upon the argument.

Format

```
clear counters {<slot/port> | all}
```

Mode

Privileged EXEC

4.8.10 clear hiper-ring

This command clears the HIPER Ring configuration (deletes it).

Format

```
clear hiper-ring
```

Mode

Privileged EXEC

4.8.11 clear igmpsnooping

This command clears the tables managed by the IGMP Snooping function and will attempt to delete these entries from the Multicast Forwarding Database.

Format

```
clear igmpsnooping
```

Mode

Privileged EXEC

4.8.12 clear mac-addr-table

This command clears the switch's MAC address table (the forwarding database that contains the learned MAC addresses).

Note: this command does not affect the MAC filtering table.

Format

```
clear mac-addr-table
```

Mode

Privileged EXEC

4.8.13 clear pass

This command resets all user passwords to the factory defaults without powering off the switch. You are prompted to confirm that the password reset should proceed.

Format

```
clear pass
```

Mode

Privileged EXEC

4.8.14 clear signal-contact

This command clears the signal-contact output configuration.

Switches the signal contact 1's mode to `auto` and its manual setting to `open`.

Switches the signal contact 2's mode to `manual` and its manual setting to `closed`.

Enables the monitoring of the power supplies for signal contact 1 only.

Disables the sending of signal contact traps.

Format

```
clear signal-contact
```

Mode

Privileged EXEC

4.8.15 clear traplog

This command clears the trap log.

Format

```
clear traplog
```

Mode

Privileged EXEC

4.8.16 clear ring-coupling

This command clears the ring-coupling configuration.

Format

```
clear ring-coupling
```

Mode

```
Privileged EXEC
```

4.8.17 clear vlan

This command resets VLAN configuration parameters to the factory defaults.

Format

```
clear vlan
```

Mode

```
Privileged EXEC
```

4.8.18 config-watchdog

If the function is enabled and the connection to the switch is interrupted for longer than the time specified in “timeout [s]”, the switch then loads the last configuration saved.

Format

```
config-watchdog {admin-state {disable|enable}}|
timeout <10..600>}
```

Mode

Global Config

admin-state

Enable or disable the Auto Configuration Undo feature
(default: disabled).

timeout

Configure the Auto Configuration Undo timeout (unit: seconds).

4.8.19 copy

This command uploads and downloads to/from the switch. Remote URLs can be specified using `ftp`.

`copy` (without parameters) displays a brief explanation of the most important copy commands. A list of valid commands is provided below.

The command can be used to save the running configuration to nvram by specifying the source as `system:running-config` and the destination as `nvram:startup-config`.

Default

none

Format

```
copy
copy nvram:clibanner <url>
copy nvram:capture aca:capture
copy nvram:capture <url>
copy nvram:capturefilter <sourcefilename>
```

```
aca:capturefilter <targetfilename>
copy nvram:capturefilter <sourcefilename>
copy nvram:errorlog <url>
copy nvram:startup-config <url>
copy nvram:startup-config system:running-config
copy nvram:traplog <url>
copy system:running-config nvram:startup-config
<url>
copy system:running-config <url>
copy tftp://<server_ip>/<path_to_pem>
nvram:https-cert
copy <url> nvram:clibanner
copy <url> nvram:capturefilter <destfilename>
copy aca:capturefilter <sourcefilename>
nvram:capturefilter <destfilename>
copy <url> nvram:startup-config
copy <url> system:image
copy <url> system:running-config
copy <url> system:bootcode
```

Mode

Privileged EXEC

■ **copy tftp://<server_ip>/<path_to_pem> nvram:https-cert**

Use this command for uploading a PEM certificate for HTTPS over TFTP

Note: Reboot the device or re-enable the HTTPS server after uploading a PEM certificate.

■ **copy nvram:clibanner <url>**

Downloads the CLI banner file via TFTP using <tftp://ip/filepath/fileName>.

■ copy nvram:capture aca:capture

Save the internal packet capture file to the Auto Configuration Adapter ACA21 (file name: "capture.cap").

■ copy nvram:capture <url>

Save the internal packet capture file to a tftp URL using <tftp://ip/filepath/fileName>.

**■ copy nvram:capturefilter <sourcefilename>
aca:capturefilter <targetfilename>**

Save a capture filter file from the flash memory to the Auto Configuration Adapter.

- sourcefilename: Filename of source capture filter expressions file.
- targetfilename: Filename of target capture filter expressions file.

■ copy nvram:capturefilter <sourcefilename> <url>

Save the internal packet capture filter file from the flash memory to a tftp URL using <tftp://ip/filepath/fileName>.

- sourcefilename: Filename of source capture filter expressions file.

■ copy nvram:errorlog <url>

Uploads Errorlog file.

- <url>: Uploads Error log file using <tftp://ip/filepath/fileName>.

■ copy nvram:startup-config <url>

Uploads config file using <tftp://ip/filepath/fileName>.

■ copy nvram:startup-config system:running-config

Uploads/Copies config file. The target is the currently running configuration.

■ copy nvram:traplog <url>

Uploads Trap log file. Uploads Trap log file using <tftp://ip/filepath/fileName>.

■ copy system:running-config nvram:startup-config

Copies system config file. Save the running configuration to NVRAM.

■ copy system:running-config <url>

Copies system config file. Uploads system running-config via tftp using <tftp://ip/filepath/fileName>.

■ **copy <url> nvram:clibanner**

This feature provides a privileged user the capability to change the CLI default banner:

```
-----
Copyright (c) 2004-2010 <Company Name>
```

```

    All rights reserved
```

```
<Product Name> Release L3P-06.0.00
```

```
(Build date 2010-05-01 00:30)
```

```
System Name: <Product Name>-518280
```

```
Mgmt-IP      : a.b.c.d
```

```
1.Router-IP: 0.0.0.0
```

```
Base-MAC     : aa:bb:cc:dd:ee:ff
```

```
System Time: 2010-01-02 05:51:11
-----
```

The command uploads the CLI Banner file by tftp using `<tftp://ip/filepath/fileName>`.

After the upload you logout from CLI and the new CLI banner file will be displayed at the next login.

- `url`: Upload CLI banner file using `<tftp://ip/filepath/fileName>`.

If no cli banner file is defined, the default cli banner is displayed (see above).

Note: See that the the CLI banner file you created has the following properties:

- Use ASCII format (character codes 0x20 .. 0x7F, \n and \t as C-like sequences)
- Do not use regular expressions
- Do not exceed the limit of 2048 byte
- Do not exceed the limit of 20 lines
- Do not exceed the limit of 80 characters per line
- A device can only have one banner file at the moment
- Save the CLI banner file as *.bnr.

■ no clibanner

This command deletes an existing CLI banner file.

■ copy <url> nvram:capturefilter <destfilename>

Load a Capture Filter file from a tftp URL into the flash memory using <tftp://ip/filepath/fileName>.

– *destfilename*: Destination filename of capture filter expressions file.

**■ copy aca:capturefilter <sourcefilename>
nvram:capturefilter <targetfilename>**

Load a capture filter file from AutoConfiguration Adapter ACA21 into the flash memory.

– *sourcefilename*: Filename of source capture filter expressions file.

– *targetfilename*: Specify the file name on the switch's NVRAM.

■ copy <url> nvram:startup-config

Downloads Config file by tftp using <tftp://ip/filepath/fileName>.

■ copy <url> system:image

Downloads code file by tftp using <tftp://ip/filepath/fileName>.

■ copy <url> system:running-config

Downloads Code/Config file using <tftp://ip/filepath/fileName>.

The target is the currently running configuration.

■ copy <url> system:bootcode

Use the "copy <url> system:bootcode" command to load the bootcode file via tftp into the device. For <url> enter the path of the tftp server using the following notation: "<tftp://ip/filepath/fileName>", e.g. "tftp://10.1.112.214/switch/switch01.cfg".

4.8.20 device-status connection-error

This command configures the device status link error monitoring for this port.

Default

ignore

Format

```
device-status connection-error {ignore|propagate}
```

Mode

Interface Config

4.8.21 device-status monitor

This command configures the device-status.

Format

```
device-status monitor
  {aca-removal | all | connection-error |
  hiper-ring |
  module-removal | power-supply-1 |
  power-supply-2 | power-supply-3-1 |
  power-supply-3-2 | power-supply-4-1 |
  power-supply-4-2 | ring-coupling | temperature }
  {error|ignore}
device-status trap {disable|enable}
```

Mode

Global Config

monitor

Determines the monitoring of the selected event or all events.

- `error` If the given event signals an error, the device state will also signal `error`,
- `ignore` Ignore the given event - even if it signals an error, the device state will not signal 'error' because of that.

trap

Configure if a trap is sent when the device status changes its state.

- `enable` enables sending traps,
- `disable` disables sending traps.

4.8.22 logout

This command closes the current telnet connection or resets the current serial connection.

Note: Save configuration changes before logging out.

Format

```
logout
```

Mode

```
Privileged EXEC
```

4.8.23 ping

This command checks if another computer is on the network and listens for connections. To use this command, configure the switch for network (in-band) connection. The source and target devices must have the ping utility enabled and running on top of TCP/IP. The switch can be pinged from any IP workstation with which the switch is connected through the default VLAN (VLAN 1), as long as there is a physical path between the switch and the workstation. The terminal interface sends, three pings to the target station.

Format

```
ping <ipaddr>
```

Mode

```
Privileged EXEC and User EXEC
```

4.8.24 signal-contact connection-error

This command configures the signal contact link error monitoring for this port.

Format

```
signal-contact connection-error {disable|enable}
```

Mode

```
Interface Config
```

disable

A link down event on this port will be not monitored by a signal contact (default).

enable

A link down event on this port will be monitored by a signal contact.

4.8.25 signal-contact

This command configures the signal contacts.

Format

```
signal-contact {1|2|all}
  {mode {auto|device-status|manual}
  |monitor {aca-removal|
  all|
  connection-error|hiper-ring|module-removal
  |power-supply-1| power-supply-2
  |power-supply-3-1|power-supply-3-2
  |power-supply-4-1|power-supply-4-2
  |ring-coupling|temperature} {disable|enable}
  |state {closed|open}
  |trap {disable|enable} }
```

Mode

```
Global Config
```

Contact No.

Selection of the signal contact:

- 1 signal contact 1,
- 2 signal contact 2,
- all signal contact 1 and signal contact 2.

mode

Selection of the operational mode:

- auto function monitoring,
- device-status the device-status determines the signal contact's status.
- manual manually setting the signal contact.

monitor

Enables or disables the monitoring of the selected event or all events.

- enable monitoring,
- disable no monitoring.

state

Set the manual setting of the signal contact:

- closed ,
- open.

Only takes immediate effect in manual mode.

trap

Configures the sending of traps concerning the signal contact.

- enable enables sending traps,
- disable disables sending traps.

4.8.26 temperature

Note: The command is available for RS20/RS30/RS40, MS20/MS30, RSR20/RSR30, MACH100, MACH1000, PowerMICE, MACH4000 and OCTOPUS devices.

This command configures the lower and upper temperature limit for the device. If these limits are exceeded, a trap is sent. The unit for the temperature limit is °C (Celsius), the minimum value is -99, the maximum value is 99. The default for the lower limit is 0, for the upper limit, it is 70.

Note: To give the temperature in Fahrenheit, use the suffix f.

Format

```
temperature {lower-limit|upper-limit} <temperature  
value> [c|f]
```

Mode

```
Global Config
```

lower-limit

Configure the lower temperature limit.

upper-limit

Configure the upper temperature limit.

4.8.27 reboot

This command resets the switch (cold start) after a given time delay, for warm start See “reload” on page 242. Reset means that all network connections are terminated and the boot code executes. The switch uses the stored configuration to initialize the switch. You are prompted to confirm that the reset should proceed. A successful reset is indicated by the LEDs on the switch.

Format

```
reboot {delay <seconds>}
```

Mode

Privileged EXEC

<seconds>

The number of seconds after which the switch will reboot.

Value range: None (no reboot scheduled), 0 - 2,147,483 sec (= 596 h + 31 min + 23 sec).

■ clear reboot

This command cancels a scheduled reboot.

4.8.28 show reboot

This command displays if a reboot is scheduled for the device. If scheduled, the command displays the number of seconds after which the switch will reboot.

Format

```
show reboot
```

Modes

```
Privileged EXEC
```

```
User Exec
```

<seconds>

The number of seconds after which the switch will reboot.

Value range: None (no reboot scheduled), 0 - 2,147,483 sec (= 596 h + 31 min + 23 sec) .

4.8.29 reload

This command enables you to reset the switch (warm start) after a given time delay, for cold start [See “reboot” on page 240](#).

Note: First, the device is checking the software in the flash memory and then it resets. If a warm start is not possible, the device automatically executes a cold start.

Reset means that all network connections are terminated and the boot code executes. The switch uses the stored configuration to initialize the switch. You are prompted to confirm that the reset should proceed. A successful reset is indicated by the LEDs on the switch.

Format

```
reload {delay <seconds>}
```

Mode

Privileged EXEC

<seconds>

The number of seconds after which the switch will reload.

Value range: 0 - 2,147,483 sec.

■ clear reload

This command cancels a scheduled reload.

4.8.30 show reload

This command displays if a reload is sceduled for the device. If sceduled, the command displays the number of seconds after which the switch will reload.

Format

```
show reload
```

Modes

```
Privileged EXEC
```

```
User Exec
```

<seconds>

The number of seconds after which the switch will reload.

Possible values: None (no reload sceduled), 0 - 2,147,483 sec.

4.9 LLDP - Link Layer Discovery Protocol

These commands show and configure the LLDP parameters in compliance with IEEE 802.1 AB.

4.9.1 show lldp

This command shows all LLDP settings.

Format

```
show lldp
```

Mode

```
Privileged EXEC and User EXEC
```

4.9.2 show lldp config

This command shows all LLDP configuration settings.

Format

```
show lldp config
```

Mode

```
Privileged EXEC and User EXEC
```

4.9.3 show lldp config chassis

This command shows all LLDP configuration settings concerning the entire device.

Format

```
show lldp config chassis
```

Mode

```
Privileged EXEC and User EXEC
```

4.9.4 show lldp config chassis admin-state

Display the LLDP/IEEE802.1AB functionality on this device. If disabled, the LLDP protocol is inactive but the LLDP MIBs can still be accessed.

Format

```
show lldp config chassis admin-state
```

Mode

```
Privileged EXEC and User EXEC
```

4.9.5 show lldp config chassis notification-interval

Display the LLDP minimum notification trap interval (unit: seconds).

Format

```
show lldp config chassis notification-interval
```

Mode

```
Privileged EXEC and User EXEC
```

4.9.6 show lldp config chassis re-init-delay

Display the LLDP configuration's chassis re-initialization delay (unit: seconds).

Format

```
show lldp config chassis re-init-delay
```

Mode

Privileged EXEC and User EXEC

4.9.7 show lldp config chassis tx-delay

Display the LLDP transmit delay (unit: seconds). It indicates the delay between successive LLDP frame transmissions.

Format

```
show lldp config chassis tx-delay
```

Mode

Privileged EXEC and User EXEC

4.9.8 show lldp config chassis tx-hold-mult

Display the LLDP transmit hold multiplier, a time-to-live value expressed as a multiple of the LLDP Message Tx Interval (tx-interval).

Format

```
show lldp config chassis tx-hold-mult
```

Mode

Privileged EXEC and User EXEC

4.9.9 show lldp config chassis tx-interval

Display the interval (unit: seconds) at which LLDP frames are transmitted on behalf of this LLDP agent.

Format

```
show lldp config chassis tx-interval
```

Mode

```
Privileged EXEC and User EXEC
```

4.9.10 show lldp config port

This command shows all LLDP configuration settings and states concerning one or all ports.

Format

```
show lldp config port <{slot/port|all}>  
  admin-state | fdb-mode | hm-mode |  
  max-neighbors | notification | tlv
```

Mode

Privileged EXEC and User EXEC

admin-state

Display the port's LLDP admin state (if LLDP/IEEE802.1AB frames will be transmitted and/or received).

fdb-mode

Display the port's LLDP FDB mode.

hm-mode

Display the port's LLDP Hirschmann mode.

.max-neighbors

Display the port's max. no. of LLDP neighbors.

notification

Display the port's LLDP notification (trap) setting.

tlv

Display the port's LLDP TLV settings (they determine which information is included in the LLDP frames that are sent). The command is a group command and will output several lines of data.

4.9.11 show lldp config port tlv

This command shows all LLDP TLV configuration settings (if the given information is included in the sent LLDP frames or not) concerning one or all ports.

Format

```
show lldp config port <{slot/port|all}> tlv
```

Mode

Privileged EXEC and User EXEC

link-aggregation

Display the port's LLDP TLV inclusion of Link Aggregation.

mac-phy-config-state

Display the port's LLDP TLV inclusion of MAC Phy. Cfg. State.

max-frame-size

Display the port's LLDP TLV inclusion of Max. Frame Size.

PROFINET IO Status

Display the port's LLDP TLV inclusion of PROFINET IO Status.

PROFINET IO Alias

Display the port's LLDP TLV inclusion of PROFINET IO Alias.

PROFINET IO MRP

Display the port's LLDP TLV inclusion of PROFINET IO MRP.

mgmt-addr

Display the port's LLDP TLV inclusion of Management Address.

port-desc

Display the port's LLDP TLV inclusion of Port Description.

port-vlan

Display the port's LLDP TLV inclusion of Port VLAN.

protocol

Display the port's LLDP TLV inclusion of Protocol.

sys-cap

Display the port's LLDP TLV inclusion of System Capabilities.

sys-desc

Display the port's LLDP TLV inclusion of System Description.

sys-name

Display the port's LLDP TLV inclusion of System Name.

vlan-name

Display the port's LLDP TLV inclusion of VLAN Name.

4.9.12 show lldp remote-data

This command shows all LLDP remote-data settings and states concerning one or all ports.

Format

```
show lldp remote-data <{slot/port|all}>
  chassis-id | detailed | ether-port-info |
  inlinepower | link-aggregation-info |
  mgmt-addr | profinetio-port-info |
  port-desc | port-id | summary | sys-desc |
  sys-name | vlan-info
```

Mode

Privileged EXEC and User EXEC

chassis-id

Display the remote data's chassis ID only.

detailed

Display remote data in detailed format (i. e., all available data).

Note: most important data is output first (not in alphabetic order of command names). This is the default command if no specific command is given.

ether-port-info

Display the remote data's port Ethernet properties only (group command, outputs: Port Autoneg. Supported, Port Autoneg. Enabled,

Port Autoneg. Advertized Capabilities and Port Operational MAU Type).

inlinepower

Displays the remote port's Power over Ethernet capabilities (PoE, IEEE 802.3af). Included are if the remote device is a PSE (Power Source Device) or a PD (Powered Device), if PoE is supported and if the power pairs are selectable.

link-aggregation-info

Display the remote data's link aggregation information only (group command, outputs: Link Agg. Status and Link Agg. Port ID).

mgmt-addr

Display the remote data's management address only.

profinetio-port-info

Display the remote data's Port ProfinetIO properties only.

port-desc

Display the port's LLDP TLV inclusion of Port Description.

port-id

Display the remote data's port ID only.

summary

Display remote data in summary format (table with most important data only, strings will be truncated if necessary, indicated by an appended '>' character).

sys-desc

Display the remote data's system description only.

sys-name

Display the remote data's system name only.

vlan-info

Display the remote data's VLAN information only (group command, outputs: Port VLAN ID, Membership VLAN IDs and their respective names).

4.9.13 lldp

Enable/disable the LLDP/IEEE802.1AB functionality on this device. If disabled, the LLDP protocol will become inactive, but the LLDP MIBs can still be accessed. This command is a shorthand notation for `lldp config chassis admin-state {off|on}` (see “[lldp config chassis admin-state](#)” on [page 253](#)).

The default setting is `on`.

Format

```
lldp
```

Mode

```
Global Config
```

■ no lldp

Disable the LLDP/IEEE802.1AB functionality on this device.

Format

```
no lldp
```

Mode

```
Global Config
```

4.9.14 lldp config chassis admin-state

Configure the LLDP/IEEE802.1AB functionality on this device. If disabled, the LLDP protocol will become inactive, but the LLDP MIBs can still be accessed.

- ▶ `off`: Disable the LLDP/IEEE802.1AB functionality.
- ▶ `on`: Enable the LLDP/IEEE802.1AB functionality.

The default setting is `on`.

Format

```
lldp config chassis admin-state {off|on}
```

Mode

```
Global Config
```

4.9.15 lldp config chassis notification-interval

Configure the LLDP minimum notification interval (the minimum time after a notification trap has been sent until a new trap can be sent, unit: seconds, min.: 5 sec., max.: 3600 sec., default: 5 sec.).

Format

```
lldp config chassis notification-interval  
<notification interval>
```

Mode

```
Global Config
```

Notification interval

Configure the LLDP minimum notification interval (the minimum time after a notification trap has been sent until a new trap can be sent, unit: seconds, min.: 5 sec., max.: 3600 sec., default: 5 sec.).

4.9.16 lldp config chassis re-init-delay

Configure the LLDP re-initialization delay (unit: seconds, min.: 1 sec., max.: 10 sec., default: 2 sec.).

Format

```
lldp config chassis re-init-delay <re-init delay>
```

Mode

Global Config

Re-init-delay

Configure the LLDP re-initialization delay (unit:seconds, min.: 1 sec., max.: 10 sec., default: 2 sec.).

4.9.17 lldp config chassis tx-delay

Configure the LLDP transmit delay, the delay between successive LLDP frame transmissions (unit: seconds, min.: 1 sec., max.: 8192 sec., default: 2 sec.).

Format

```
lldp config chassis tx-delay <tx delay>
```

Mode

Global Config

Tx-delay

Configure the LLDP transmit delay, the delay between successive LLDP frame transmissions (unit: seconds, min.: 1 sec., max.: 8192 sec., default: 2 sec.).

4.9.18 lldp config chassis tx-hold-mult

Configure the LLDP transmit hold multiplier, a time-to-live value expressed as a multiple of the LLDP Message Tx Interval (tx-interval), min.: 2, max.: 10, default: 4.

Format

```
lldp config chassis tx-hold-mult  
                                <tx hold multiplier>
```

Mode

Global Config

Tx-hold-mult

Configure the LLDP transmit hold multiplier, a time-to-live value expressed as a multiple of the LLDP Message Tx Interval (tx-interval), min.: 2, max.: 10, default: 4.

4.9.19 lldp chassis tx-interval

Configure the interval at which LLDP frames are transmitted on behalf of this LLDP agent (unit: seconds, min.: 5 sec., max.: 32768 sec., default: 30 sec.)

Format

```
lldp chassis tx-interval <tx interval>
```

Mode

Global Config

Tx-interval

Configure the interval at which LLDP frames are transmitted on behalf of this LLDP agent (unit: seconds, min.: 5 sec., max.: 32768 sec., default: 30 sec.).

4.9.20 clear lldp config all

Clear the LLDP configuration, i. e., set all configurable parameters to default values (all chassis- as well as port-specific parameters at once).

Note: LLDP Remote data remains unaffected.

Format

```
clear lldp config all
```

Mode

Privileged EXEC

4.9.21 lldp admin-state

Configure the port's LLDP admin state (if LLDP/IEEE802.1AB frames will be transmitted to and/or received from the standard IEEE multicast address 01:80:c2:00:00:0e).

The default setting is `tx-and-rx`.

Format

```
lldp admin-state <{tx-only|rx-only|tx-and-rx|off}>
```

Mode

Interface Config

4.9.22 lldp fdb-mode

Configure the port's LLDP FDB mode.

The default setting is `autodetect`.

Format

```
lldp fdb-mode <{lldp-only|mac-only|lldp-and-  
mac|autodetect}>
```

Mode

```
Interface Config
```

4.9.23 lldp hm-mode

Configure the port's LLDP Hirschmann mode (if LLDP/IEEE802.1AB frames will be transmitted to and/or received from the Hirschmann-specific multicast address `01:80:63:2f:ff:0b`).

The default setting is `tx-and-rx`.

Format

```
lldp hm-mode <{tx-only|rx-only|tx-and-rx|off}>
```

Mode

```
Interface Config
```

4.9.24 lldp max-neighbors

Configure the port's LLDP max. no. of neighbors (min.: 1, max.: 50, default: 10).

Format

```
lldp max-neighbors <1..50>
```

Mode

```
Interface Config
```

4.9.25 lldp notification

Configure the port's LLDP notification setting (on or off, default: off).

Format

```
lldp notification <{off|on}>
```

Mode

```
Interface Config
```

4.9.26 lldp tlv link-aggregation

Configure the port's LLDP TLV inclusion of Link Aggregation (on or off, default: on).

Format

```
lldp tlv link-aggregation <{off|on}>
```

Mode

```
Interface Config
```

4.9.27 lldp tlv mac-phy-config-state

Configure the port's LLDP TLV inclusion of MAC Phy. Cfg. State (on or off, default: on).

Format

```
lldp tlv mac-phy-config-state <{off|on}>
```

Mode

```
Interface Config
```

4.9.28 lldp tlv max-frame-size

Configure the port's LLDP TLV inclusion of Max. Frame Size (on or off, default: on).

Format

```
lldp tlv max-frame-size <{off|on}>
```

Mode

```
Interface Config
```

4.9.29 lldp tlv mgmt-addr

Configure the port's LLDP TLV inclusion of Management Address (on or off, default: on).

Format

```
lldp tlv mgmt-addr <{off|on}>
```

Mode

```
Interface Config
```

4.9.30 lldp tlv pnio

Configure the port's LLDP TLV inclusion of PROFINET IO Status (on or off, default: on).

Format

```
lldp tlv pnio <{off|on}>
```

Mode

```
Interface Config
```

4.9.31 lldp tlv pnio-alias

Configure the port's LLDP TLV inclusion of PROFINET IO Alias (on or off, default: on).

Format

```
lldp tlv pnio-alias <{off|on}>
```

Mode

```
Interface Config
```

4.9.32 lldp tlv pnio-mrp

Configure the port's LLDP TLV inclusion of PROFINET IO MRP (on or off, default: on).

Format

```
lldp tlv pnio-mrp <{off|on}>
```

Mode

```
Interface Config
```

4.9.33 lldp tlv port-desc

Configure the port's LLDP TLV inclusion of Port Description (on or off, default: on).

Format

```
lldp tlv port-desc <{off|on}>
```

Mode

```
Interface Config
```

4.9.34 lldp tlv port-vlan

Configure the port's LLDP TLV inclusion of Port VLAN (on or off, default: on).

Format

```
lldp tlv port-vlan <{off|on}>
```

Mode

```
Interface Config
```

4.9.35 lldp tlv gmrp

Configure the port's LLDP TLV inclusion of GMRP (on or off, default: on).

Format

```
lldp tlv gmrp <{off|on (on)}>
```

Mode

```
Interface Config
```

4.9.36 lldp tlv igmp

Configure the port's LLDP TLV inclusion of IGMP (on or off, default: on).

Format

```
lldp tlv igmp <{off|on (on)}>
```

Mode

```
Interface Config
```

4.9.37 lldp tlv portsec

Configure the port's LLDP TLV inclusion of PortSec (on or off, default: on).

Format

```
lldp tlv portsec <{off|on (on)}>
```

Mode

```
Interface Config
```

4.9.38 lldp tlv ptp

Configure the port's LLDP TLV inclusion of PTP (on or off, default: on).

Format

```
lldp tlv ptp <{off|on (on)}>
```

Mode

```
Interface Config
```

4.9.39 lldp tlv protocol

Configure the port's LLDP TLV inclusion of Protocol (on or off, default: on).

Format

```
lldp tlv protocol <{off|on (on)}>
```

Mode

```
Interface Config
```

4.9.40 lldp tlv sys-cap

Configure the port's LLDP TLV inclusion of System Capabilities (on or off, default: on).

Format

```
lldp tlv sys-cap <{off|on}>
```

Mode

```
Interface Config
```

4.9.41 lldp tlv sys-desc

Configure the port's LLDP TLV inclusion of System Description (on or off, default: on).

Format

```
lldp tlv sys-desc <{off|on}>
```

Mode

```
Interface Config
```

4.9.42 lldp tlv sys-name

Configure the port's LLDP TLV inclusion of System Name (on or off, default: on).

Format

```
lldp tlv sys-name <{off|on}>
```

Mode

```
Interface Config
```

4.9.43 lldp tlv vlan-name

Configure the port's LLDP TLV inclusion of VLAN Name.

Format

```
lldp tlv vlan-name <{off|on}>
```

Mode

```
Interface Config
```


4.9.44 name

Set or remove a descriptive name for the current interface (physical ports only).

Format

```
name <descriptive name>
```

Mode

```
Interface Config
```

<descriptive name>

Enter a descriptive name for the current interface (physical ports only). Max. length is 20 characters.

Note: If it contains blanks or exclamation marks (!), enclose it in quotation marks ("). The description itself must not contain any quotation marks (' or "), question marks (?) or backslashes (\).

■ no name

Delete the descriptive name for the current interface (physical ports only).

Format

```
no name
```

Mode

```
Interface Config
```

4.10 SNTP - Simple Network Time Protocol

These commands show and configure the SNTP parameters.

4.10.1 show sntp

This command shows all SNTP settings.

Format

```
show sntp
```

Mode

```
Privileged EXEC and User EXEC
```

SNTP Server Anycast Address

Show SNTP Server Anycast Address (a.b.c.d).

SNTP Server Anycast Transmit Interval

Show SNTP Anycast Transmit Interval (in seconds).

SNTP Server Anycast VLAN

Show SNTP Server Anycast VLAN.

SNTP Server Disable if Timesource is local

Show SNTP Server Disable if Timesource is local (Yes/No).

SNTP Client Accepts Broadcasts

Show SNTP Client Accepts Broadcasts (Yes/No).

SNTP Client Disable after Synchronization

Show SNTP Client Disable after Synchronization (Yes/No).

SNTP Client Request Interval

Show SNTP Client Request Interval (in seconds).

SNTP Client Local Time Offset

Show SNTP Client Local Time Offset (in minutes).

SNTP Client Primary Server IP Address

Show SNTP Client Primary Server IP Address (a.b.c.d).

SNTP Client Secondary Server IP Address

Show SNTP Client Secondary Server IP Address (a.b.c.d).

SNTP Client Threshold to Server Time

Show SNTP Client Threshold to Server Time (in milliseconds).

SNTP Operation Global

Show SNTP Operation Global (Disabled or Enabled).

SNTP Operation Server

Show SNTP Operation Server (Disabled or Enabled).

SNTP Operation Client

Show SNTP Operation Client (Disabled or Enabled).

SNTP Status

Show SNTP Status

SNTP Time

Show SNTP Time (yyyy-mm-dd hh:mm:ss).

SNTP System Time

Show SNTP system Time (yyyy-mm-dd hh:mm:ss).

4.10.2 show sntp anycast

This command shows all SNTP anycast configuration settings.

Format

```
show sntp anycast [address|transmit-interval|vlan]
```

Mode

Privileged EXEC and User EXEC

address

Show the SNTP server's anycast destination IP Address.

transmit-interval

Show the SNTP Server's interval for sending Anycast messages (unit: seconds).

vlan

Show the SNTP server's Anycast VLAN ID (used for sending Anycast messages).

4.10.3 show sntp client

This command shows all SNTP anycast configuration settings.

Format

```
show sntp client [accept-broadcast|
                 disable-after-sync|
                 offset|
                 request-interval|
                 server<primary|secondary>|
                 threshold]
```

Mode

Privileged EXEC and User EXEC

accept-broadcast

Show if the SNTP Client accepts SNTP broadcasts.

disable-after-sync

Show if the SNTP client will be disabled once it is synchronized to the time server.

offset

Show the local time's offset (in minutes) with respect to UTC (positive values for locations east of Greenwich).

request-interval

Show the SNTP Client's request interval (unit: seconds).

server

Show the SNTP Client's server IP addresses.

server primary

Show the SNTP Client's primary server IP addresses.

server secondary

Show the SNTP Client's redundant server IP addresses.

server threshold

Show the SNTP Client's threshold in milliseconds.

4.10.4 show sntp operation

This command shows if the SNTP function is enabled or disabled.

Format

```
show sntp operation
```

Mode

```
Privileged EXEC and User EXEC
```

4.10.5 show sntp server

This command shows the SNTP Server's configuration parameters.

Format

```
show sntp server [disable-if-local]
```

Mode

Privileged EXEC and User EXEC

disable-if-local

Show if the server will be disabled if the time is running from the local clock and not synchronized to an external time source.

4.10.6 show sntp status

This command shows the SNTP state, synchronization and error messages.

Format

```
show sntp status
```

Mode

Privileged EXEC and User EXEC

4.10.7 show sntp time

This command shows time and date.

Format

```
show sntp time [sntp|system]
```

Mode

Privileged EXEC and User EXEC

sntp

Show the current SNTP date and UTC time.

system

Show the local system's current date and time.

4.10.8 no sntp

This command disables sntp.

Format

```
no sntp
```

Mode

Global Config

4.10.9 sntp anycast address

Set the SNTP server's anycast destination IP Address, default: 0.0.0.0 (none).

Format

```
sntp anycast address <IPAddress>
```

Mode

```
Global Config
```

■ no sntp anycast address

Set the SNTP server's anycast destination IP Address to 0.0.0.0.

Format

```
no sntp anycast address
```

Mode

```
Global Config
```

4.10.10 sntp anycast transmit-interval

The transmit interval in seconds, default: 120.

Format

```
sntp anycast transmit-interval <1-3600>
```

Mode

```
Global Config
```


4.10.11 sntp anycast vlan

Set the SNTP server's Anycast VLAN ID used for sending Anycast messages, default: 1.

Format

```
sntp anycast vlan <1-4042>
```

Mode

```
Global Config
```

4.10.12 sntp client accept-broadcast

Enable/Disable that the SNTP Client accepts SNTP broadcasts.

Format

```
sntp client accept-broadcast <on | off>
```

Mode

```
Global Config
```

■ no sntp accept-broadcast

Disable the SNTP Client accepts SNTP broadcasts.

Format

```
no sntp client accept-broadcast
```

Mode

```
Global Config
```

4.10.13 **sntp client disable-after-sync**

If this option is activated, the SNTP client disables itself once it is synchronised to a server.

Format

```
sntp client disable-after-sync <on | off>
```

Mode

Global Config

off

Do not disable SNTP client when it is synchronised to a time server.

on

Disable SNTP client as soon as it is synchronised to a time server.

4.10.14 **sntp client offset**

The offset between UTC and local time in minutes, default: 60.

Format

```
sntp client offset <-1000 to 1000>
```

Mode

Global Config

4.10.15 sntp client request-interval

The synchronization interval in seconds, default: 30.

Format

```
sntp client request-interval <1-3600>
```

Mode

Global Config

4.10.16 no sntp client server

Disable the SNTP client servers.

Format

```
no sntp client server
```

Mode

Global Config

4.10.17 sntp client server primary

Set the SNTP Client's primary server IP Address, default: 0.0.0.0 (none).

Format

```
sntp client server primary <IP-Address>
```

Mode

```
Global Config
```

■ no sntp client server primary

Disable the primary SNTP client server.

Format

```
no sntp client server primary
```

Mode

```
Global Config
```

4.10.18 sntp client server secondary

Set the SNTP Client's secondary server IP Address, default: 0.0.0.0 (none).

Format

```
sntp client server secondary <IP-Address>
```

Mode

```
Global Config
```

■ no sntp client server secondary

Disable the secondary SNTP client server.

Format

```
no sntp client server secondary
```

Mode

```
Global Config
```

4.10.19 sntp client threshold

With this option you can reduce the frequency of time alterations. Enter this threshold as a positive integer value in milliseconds. The switch obtains the server timer as soon as the deviation to the server time is above this threshold.

Format

```
sntp client threshold <milliseconds>
```

Mode

```
Global Config
```

Milliseconds

```
Enter the allowed deviation to the server time as a  
positive integer value in milliseconds.
```

■ no sntp client threshold

Disable the sntp client threshold.

Format

```
no sntp client threshold
```

Mode

```
Global Config
```

4.10.20 sntp operation

Enable/Disable the SNTP function.

Format

```
sntp operation <on | off> |  
                    client { on | off } |  
                    server { on | off }
```

Mode

Global Config

client

Enable or disable SNTP Client.

server

Enable or disable SNTP Server.

■ no sntp operation

Disable the SNTP Client and Server.

Format

```
no sntp operation
```

Mode

Global Config

4.10.21 sntp server disable-if-local

With this option enabled, the switch disables the SNTP Server Function if it is not synchronized to a time server itself.

Format

```
sntp server disable-if-local <on | off>
```

Mode

Global Config

off

Enable the SNTP Server even if it is not synchronized to a time server itself.

on

Disable the SNTP Server if it is not synchronized to a time server itself.

4.10.22 sntp time system

Set the current sntp time.

Format

```
sntp time system <YYYY-MM-DD HH:MM:SS>
```

Mode

Global Config

4.11 PoE - Power over Ethernet

These commands show and configure the Power over Ethernet (IEEE 802.3af) parameters.

4.11.1 show inlinepower

This command shows global Inline Power settings PoE.

Format

```
show inlinepower
```

Mode

Privileged EXEC and User EXEC

4.11.2 show inlinepower port

This command shows the configuration settings and states per port.

Format

```
show inlinepower port [<slot/port> | all]
```

Mode

Privileged EXEC and User EXEC

4.11.3 inlinepower (Global Config)

Configure the global Inline Power parameters.

Format

```
inlinepower {admin-mode {disable|enable} |  
trap {disable|enable} | threshold <1-99> |  
fast-startup {enable|disable} }
```

Mode

Global Config

admin-mode

Configure the global Inline Power administrative setting (enable or disable, default: enable).

trap

Configure the Inline Power notification (trap) setting (enable or disable, default: disable).

threshold

Configure the Inline Power notification (trap) threshold (unit: percent of maximum rated power, valid range: 1-99, default: 90).

fast-startup

Configure the Inline Power to be enabled at the beginning of the start phase (enable or disable, default: disable).

4.11.4 inlinepower (Interface Config)

Configure the port-related Inline Power parameters.

Note: The interface name you enter in the `name`-command.

Format

```
inlinepower {admin-mode {disable|enable} |  
priority {critical|high|low} }
```

Mode

Interface Config

admin-mode

Configure the port-related Inline Power administrative setting (enable or disable, default: enable).

priority

Configure the Inline Power priority for this port. In case of power scarcity, inline power on ports configured with the lowest priority is dropped first. Possible values are: critical, high or low, default: low. The highest priority is critical.

Note: This parameter is available for MACH1000, MACH4000 and devices which support Power over Ethernet Plus (MACH104-16TX-PoEP devices and MACH102 devices with media module M1-8TP-RJ45 PoE).

4.11.5 clear inlinepower

Reset the Inline Power parameters to default settings.

Format

```
clear inlinepower
```

Mode

Privileged EXEC

5 CLI Commands: Switching

This section provides detailed explanation of the Switching commands. The commands are divided into two functional groups:

- ▶ Show commands display spanning tree settings, statistics, and other information.
- ▶ Configuration Commands configure features and options of the switch. For every configuration command there is a show command that displays the configuration setting.

5.1 Spanning Tree Commands

5.1.1 show spanning-tree

This command displays spanning tree settings for the common and internal spanning tree, when the optional parameter “brief” is not included in the command. The following details are displayed.

Format

```
show spanning-tree [brief]
```

Mode

Privileged EXEC and User EXEC

Spanning Tree Adminmode

Enabled or Disabled

Bridge Priority

Configured value.

Bridge Identifier

The bridge identifier for the CST (CST = Classical Spanning Tree IEEE 802.1d). It is made up using the bridge priority and the base MAC address of the bridge.

Time Since Topology Change

in seconds

Topology Change Count

Number of times changed.

Topology Change

Boolean value of the Topology Change parameter for the switch indicating if a topology change is in progress on any port assigned to the common and internal spanning tree.

Designated Root

The bridge identifier of the root bridge. It is made up from the bridge priority and the base MAC address of the bridge.

Root Path Cost

Value of the Root Path Cost parameter for the common and internal spanning tree.

Root Port Identifier

Identifier of the port to access the Designated Root for the CST.

Root Port Max Age

Derived value

Root Port Bridge Forward Delay

Derived value

Hello Time

Configured value

Bridge Hold Time

Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs)

CST Regional Root

Bridge Identifier of the CST Regional Root. It is made up using the bridge priority and the base MAC address of the bridge.

Regional Root Path Cost

Path Cost to the CST Regional Root.

Associated FIDs

List of forwarding database identifiers currently associated with this instance.

Associated VLANs

List of VLAN IDs currently associated with this instance.

■ show spanning-tree brief

When the “brief” optional parameter is included, this command displays a brief overview of the spanning tree settings for the bridge. In this case, the following details are displayed.

Bridge Priority

Configured value.

Bridge Identifier

The bridge identifier for the selected MST instance. It is made up using the bridge priority and the base MAC address of the bridge.

Bridge Max Age

Configured value.

Bridge Hello Time

Configured value.

Bridge Forward Delay

Configured value.

Bridge Hold Time

Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs)

Rstp Mrp Mode

Rapid spanning tree mrp (Media Redundancy Protocol) mode (Enabled/Disabled)

Rstp Mrp configuration error

Configuration error in Rapid spanning tree mrp (Media Redundancy Protocol) (No/Yes)

5.1.2 show spanning-tree interface

This command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The <slot/port> is the desired switch port. The following details are displayed on execution of the command.

Format

```
show spanning-tree interface <slot/port>
```

Mode

Privileged EXEC and User EXEC

Port mode

Enabled or disabled.

Port Up Time Since Counters Last Cleared

Time since port was reset, displayed in days, hours, minutes, and seconds.

STP BPDUs Transmitted

Spanning Tree Protocol Bridge Protocol Data Units sent

STP BPDUs Received

Spanning Tree Protocol Bridge Protocol Data Units received.

RST BPDUs Transmitted

Rapid Spanning Tree Protocol Bridge Protocol Data Units sent

RST BPDUs Received

Rapid Spanning Tree Protocol Bridge Protocol Data Units received.

MSTP BPDUs Transmitted

Multiple Spanning Tree Protocol Bridge Protocol Data Units sent

MSTP BPDUs Received

Multiple Spanning Tree Protocol Bridge Protocol Data Units received.

5.1.3 show spanning-tree mst detailed

This command displays settings and parameters for the specified multiple spanning tree instance. The instance <mstid> is a number that corresponds to the desired existing multiple spanning tree instance ID. The following details are displayed.

Format

```
show spanning-tree mst detailed <mstid>
```

Mode

Privileged EXEC and User EXEC

mstid

Enter a multiple spanning tree instance identifier.
Valid values: 0 - 4094.

MST Instance ID

Valid value: 0

MST Bridge Priority

Valid values: 0-61440 in increments of 4096.

Time Since Topology Change

in seconds

Topology Change Count

Number of times the topology has changed for this multiple spanning tree instance.

Topology Change in Progress

Value of the Topology Change parameter for the multiple spanning tree instance.

Designated Root

Identifier of the Regional Root for this multiple spanning tree instance.

Root Path Cost

Path Cost to the Designated Root for this multiple spanning tree instance

Root Port Identifier

Port to access the Designated Root for this multiple spanning tree instance

Associated FIDs

List of forwarding database identifiers associated with this instance.

Associated VLANs

List of VLAN IDs associated with this instance.

5.1.4 show spanning-tree mst port detailed

This command displays the detailed settings and parameters for a specific switch port within a particular multiple spanning tree instance. The instance <mstid> is a number that corresponds to the desired existing multiple spanning tree instance. The <slot/port> is the desired switch port.

Format

```
show spanning-tree mst port detailed <mstid> <slot/
port>
```

Mode

Privileged EXEC and User EXEC

MST Instance ID

Valid value: 0

Port Identifier

Port priority as a two digit hex number followed by the port number as a two digit hex number.

Port Priority

Decimal number.

Port Forwarding State

Current spanning tree state of this port

Port Role

The port's current RSTP port role.

Port Path Cost

Configured value of the Internal Port Path Cost parameter

Designated Root

The Identifier of the designated root for this port.

Designated Port Cost

Path Cost offered to the LAN by the Designated Port

Designated Bridge

Bridge Identifier of the bridge with the Designated Port.

Designated Port Identifier

Port on the Designated Bridge that offers the lowest cost to the LAN
If 0 (defined as the default CIST ID) is passed as the <mstid>, then this command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The <slot/port> is the desired switch port. In this case, the following are displayed.

Port Identifier

The port identifier for this port within the CST.

Port Priority

The priority of the port within the CST.

Port Forwarding State

The forwarding state of the port within the CST.

Port Role

The role of the specified interface within the CST.

Port Path Cost

The configured path cost for the specified interface.

Designated Root

Identifier of the designated root for this port within the CST.

Designated Port Cost

Path Cost offered to the LAN by the Designated Port.

Designated Bridge

The bridge containing the designated port

Designated Port Identifier

Port on the Designated Bridge that offers the lowest cost to the LAN

Topology Change Acknowledgement

Value of flag in next Configuration Bridge Protocol Data Unit (BPDU) transmission indicating if a topology change is in progress for this port.

Hello Time

The hello time in use for this port.

Edge Port

The configured value indicating if this port is an edge port.

Edge Port Status

The derived value of the edge port status. True if operating as an edge port; false otherwise.

Point To Point MAC Status

Derived value indicating if this port is part of a point to point link.

CST Regional Root

The regional root identifier in use for this port.

CST Port Cost

The configured path cost for this port.

5.1.5 show spanning-tree mst port summary

This command displays the settings of one or all ports within the specified multiple spanning tree instance. The parameter <mstid> indicates a particular MST instance. The parameter {<slot/port> | all} indicates the desired switch port or all ports.

If 0 (defined as the default CIST ID) is passed as the <mstid>, then the status summary is displayed for one or all ports within the common and internal spanning tree.

Format

```
show spanning-tree mst port summary <mstid> {<slot/
port> | all}
```

Mode

Privileged EXEC and User EXEC

MST Instance ID

The MST instance associated with this port. Valid value: 0.

Interface

Valid slot and port number separated by forward slashes.

STP Mode

Current STP mode of this port in the specified spanning tree instance.

Type

Currently not used.

Port Forwarding State

The forwarding state of the port in the specified spanning tree instance

Port Role

The role of the specified port within the spanning tree.

5.1.6 show spanning-tree mst summary

This command displays settings and parameters for the specified multiple spanning tree instance. The following details are displayed.

Format

```
show spanning-tree mst summary
```

Mode

Privileged EXEC and User EXEC

MST Instance ID

Valid value: 0

Associated FIDs

List of forwarding database identifiers associated with this instance.

Associated VLANs

List of VLAN IDs associated with this instance.

5.1.7 show spanning-tree summary

This command displays spanning tree settings and parameters for the switch. The following details are displayed on execution of the command.

Format

```
show spanning-tree summary
```

Mode

Privileged EXEC and User EXEC

Spanning Tree Adminmode

Enabled or disabled.

Spanning Tree Version

Version of 802.1 currently supported (IEEE 802.1Q-2005, IEEE 802.1D-2004) based upon the Force Protocol Version parameter

Configuration Name

Configured name.

Configuration Revision Level

Configured value.

Configuration Digest Key

Calculated value.

Configuration Format Selector

Configured value.

MST Instances

List of all multiple spanning tree instances configured on the switch

5.1.8 show spanning-tree vlan

This command displays the association between a VLAN and a multiple spanning tree instance. The <vlanid> corresponds to an existing VLAN ID (1-4042).

Format

```
show spanning-tree vlan <vlanid>
```

Mode

Privileged EXEC and User EXEC

vlanid

Enter a VLAN identifier (1 - 4042).

VLAN Identifier

The VLANs associated with the selected MST instance.

Associated Instance

Identifier for the associated multiple spanning tree instance or "CST" if associated with the common and internal spanning tree

5.1.9 **spanning-tree**

This command sets the spanning-tree operational mode to enabled.

Default

```
disabled
```

Format

```
spanning-tree
```

Mode

```
Global Config
```

■ **no spanning-tree**

This command sets the spanning-tree operational mode to disabled. While disabled, the spanning-tree configuration is retained and can be changed, but is not activated.

Format

```
no spanning-tree
```

Mode

```
Global Config
```

5.1.10 spanning-tree auto-edgeport

This command specifies that this port is an Edge Port within the common and internal spanning tree. This will allow this port to transition to Forwarding State without delay.

Format

```
spanning-tree auto-edgeport
```

Mode

```
Interface Config
```

■ no spanning-tree auto-edgeport

This command specifies that this port is not an Edge Port within the common and internal spanning tree.

Format

```
no spanning-tree auto-edgeport
```

Mode

```
Interface Config
```

5.1.11 spanning-tree bpduguard

This command sets the BPDU (Bridge Protocol Data Units) Guard on the switch to enabled.

Default

disabled

Format

spanning-tree bpduguard

Mode

Global Config

■ no spanning-tree bpduguard

This command sets the BPDU (Bridge Protocol Data Units) Guard to disabled.

Format

no spanning-tree bpduguard

Mode

Global Config

5.1.12 spanning-tree configuration name

This command sets the Configuration Identifier Name for use in identifying the configuration that this switch is currently using. The <name> is a string of at most 32 characters.

Default

The base MAC address displayed using hexadecimal notation as specified in IEEE 802 standard.

Format

```
spanning-tree configuration name <name>
```

Mode

```
Global Config
```

■ no spanning-tree configuration name

This command resets the Configuration Identifier Name to its default.

Format

```
no spanning-tree configuration name
```

Mode

```
Global Config
```

5.1.13 spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using. The Configuration Identifier Revision Level is a number in the range of 0 to 65535.

Default

0

Format

```
spanning-tree configuration revision <0-65535>
```

Mode

Global Config

■ no spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using to the default value, i.e. 0.

Format

```
no spanning-tree configuration revision
```

Mode

Global Config

5.1.14 spanning-tree edgeport

This command specifies that this port is an Edge Port within the common and internal spanning tree. This will allow this port to transition to Forwarding State without delay.

Format

```
spanning-tree edgeport
```

Mode

```
Interface Config
```

■ no spanning-tree edgeport

This command specifies that this port is not an Edge Port within the common and internal spanning tree.

Format

```
no spanning-tree edgeport
```

Mode

```
Interface Config
```


5.1.15 spanning-tree forceversion

This command sets the Force Protocol Version parameter to a new value. The Force Protocol Version can be one of the following:

- ▶ 802.1d - ST BPDUs are transmitted (802.1Q-2005 functionality supported)
- ▶ 802.1s - ST BPDUs are transmitted (802.1Q-2005 functionality supported)
- ▶ 802.1w - RST BPDUs are transmitted (802.1Q-2005 functionality supported)

Default

802.1w

Format

```
spanning-tree forceversion  
                        <802.1d | 802.1s | 802.1w>
```

Mode

Global Config

■ no spanning-tree forceversion

This command sets the Force Protocol Version parameter to the default value, i.e. 802.1w.

Format

```
no spanning-tree forceversion
```

Mode

Global Config

5.1.16 spanning-tree forward-time

This command sets the Bridge Forward Delay parameter to a new value for the common and internal spanning tree. The forward-time value is in seconds within a range of 4 to 30, with the value being greater than or equal to $(\text{Bridge Max Age} / 2) + 1$.

Default

15

Format

```
spanning-tree forward-time <4-30>
```

Mode

Global Config

■ no spanning-tree forward-time

This command sets the Bridge Forward Delay parameter for the common and internal spanning tree to the default value, i.e. 15.

Format

```
no spanning-tree forward-time
```

Mode

Global Config

5.1.17 spanning-tree guard loop

This command enables loop guard and disables root guard guard on an interface.

Default

disabled

Format

spanning-tree guard loop

Mode

Interface Config

■ no spanning-tree guard

This command disables the guard for this port.

Format

no spanning-tree guard

Mode

Interface Config

5.1.18 spanning-tree guard none

This command disables root guard and disables loop guard guard on an interface.

Default

disabled

Format

spanning-tree guard none

Mode

Interface Config

■ no spanning-tree guard

This command disables the guard for this port.

Format

no spanning-tree guard

Mode

Interface Config

5.1.19 spanning-tree guard root

This command enables root guard and disables loop guard on an interface.

Default

disabled

Format

spanning-tree guard root

Mode

Interface Config

■ no spanning-tree guard

This command disables the guard for this port.

Format

no spanning-tree guard

Mode

Interface Config

5.1.20 spanning-tree hello-time

This command sets the Hello Time parameter to a new value for the common and internal spanning tree. The hellotime <value> is in whole seconds within a range of 1 to 2 with the value being less than or equal to "(Bridge Max Age / 2) - 1".

Default

2

Format

```
spanning-tree hello-time <1-2>
```

Mode

Interface Config
Global Config

■ no spanning-tree hello-time

This command sets the Hello Time parameter for the common and internal spanning tree to the default value, i.e. 2.

Format

```
no spanning-tree hello-time
```

Mode

Interface Config
Global Config

5.1.21 spanning-tree hold-count

This command sets the bridge hold count parameter.

Default

disabled

Format

spanning-tree hold-count <1-40>

Mode

Global Config

<1-40>

Enter the bridge parameter for hold count as an integer in the range 1 - 40.

■ no spanning-tree hold-count

This command sets bridge hold count to disabled.

Format

no spanning-tree hold-count

Mode

Global Config

5.1.22 spanning-tree max-age

This command sets the Bridge Max Age parameter to a new value for the common and internal spanning tree. The max-age value is in seconds within a range of 6 to 40, with the value being less than or equal to "2 times (Bridge Forward Delay - 1)".

Default

20

Format

```
spanning-tree max-age <6-40>
```

Mode

Global Config

■ no spanning-tree max-age

This command sets the Bridge Max Age parameter for the common and internal spanning tree to the default value, i.e. 20.

Format

```
no spanning-tree max-age
```

Mode

Global Config

5.1.23 spanning-tree max-hops

This command sets the Bridge Max Hops parameter to a new value for the common and internal spanning tree. The max-hops value is an integer within a range of 1 to 127.

Format

```
spanning-tree max-hops <1-127>
```

Mode

```
Global Config
```

■ no spanning-tree max-hops

This command sets the Bridge Max Hops parameter for the common and internal spanning tree to the default value, i.e. 20.

Format

```
no spanning-tree max-age
```

Mode

```
Global Config
```

5.1.24 spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance or in the common and internal spanning tree. If the <mstid> parameter corresponds to an existing multiple spanning tree instance, then the configurations are done for that multiple spanning tree instance. If however 0 (defined as the default CIST ID) is passed as the <mstid>, then the configurations are performed for the common and internal spanning tree instance.

This command accepts the value 0 for the mstid, meaning the common and internal spanning tree.

If the 'cost' token is specified, this command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the <mstid> parameter. The pathcost can be specified as a number in the range of 1 to 200000000 or auto. If "auto" is specified, the pathcost value will be set based on Link Speed.

If the 'port-priority' token is specified, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the <mstid> parameter. The port-priority value is a number in the range of 0 to 240 in increments of 16.

Default

```
cost : auto; external-cost : auto;
port-priority : 128
```

Format

```
spanning-tree mst <mstid>
  {{cost <1-200000000> | auto } |
  {external-cost <1-200000000> | auto } |
  port-priority <0-240>}
```

Mode

```
Interface Config
```

■ no spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance or in the common and internal spanning tree to the respective default values. If the <mstid> parameter corresponds to an existing multiple spanning tree instance, then the configurations are done for that multiple spanning tree instance. If however 0 (defined as the default CIST ID) is passed as the <mstid>, then the configurations are performed for the common and internal spanning tree instance.

This command accepts the value 0 for the mstid, meaning the common and internal spanning tree.

If the 'cost' token is specified, this command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the <mstid> parameter, to the default value, i.e. a pathcost value based on the Link Speed.

If the 'port-priority' token is specified, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the <mstid> parameter, to the default value, i.e. 128.

Format

```
no spanning-tree mst <mstid> <cost | port-priority>
```

Mode

```
Interface Config
```

5.1.25 spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance. The instance <mstid> is a number that corresponds to the desired existing multiple spanning tree instance. The priority value is a number within a range of 0 to 61440 in increments of 4096.

This command accepts the value 0 for the mstid.

If 0 (defined as the default CIST ID) is passed as the <mstid>, then this command sets the Bridge Priority parameter to a new value for the common and internal spanning tree. The bridge priority value again is a number within a range of 0 to 61440. The twelve least significant bits will be masked according to the 802.1s specification. This will cause the priority to be rounded down to the next lower valid priority.

Default

32768

Format

```
spanning-tree mst priority <mstid> <0-61440>
```

Mode

Global Config

■ no spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance to the default value, i.e. 32768. The instance <mstid> is a number that corresponds to the desired existing multiple spanning tree instance.

This command accepts the value 0 for the mstid.

If 0 (defined as the default CIST ID) is passed as the <mstid>, then this command sets the Bridge Priority parameter for the common and internal spanning tree to the default value, i.e. 32768.

Format

```
spanning-tree mst priority <mstid>
```

Mode

Global Config

5.1.26 spanning-tree mst vlan

This command adds an association between a multiple spanning tree instance and a VLAN. The VLAN will no longer be associated with the common and internal spanning tree. The instance <mstid> is a number that corresponds to the desired existing multiple spanning tree instance. The <vlanid> corresponds to an existing VLAN ID (1-4042).

This command accepts the value 0 for the mstid.

Format

```
spanning-tree mst vlan <mstid> <vlanid>
```

Mode

```
Global Config
```

■ no spanning-tree mst vlan

This command removes an association between a multiple spanning tree instance and a VLAN. The VLAN will again be associated with the common and internal spanning tree. The instance <mstid> is a number that corresponds to the desired existing multiple spanning tree instance. The <vlanid> corresponds to an existing VLAN ID.

This command accepts the value 0 for the mstid.

Format

```
no spanning-tree mst vlan <mstid> <vlanid>
```

Mode

```
Global Config
```

5.1.27 spanning-tree mst instance

This command creates a MST instance.

Format

```
spanning-tree mst instance <1-4094>
```

Mode

Global Config

<1-4094>

Enter a multiple spanning tree instance identifier.

■ no spanning-tree mst instance

This command removes a MST instance.

Format

```
no spanning-tree mst instance <1-4094>
```

Mode

Global Config

<1-4094>

Enter a multiple spanning tree instance identifier.

5.1.28 spanning-tree port mode

This command sets the Administrative Switch Port State for this port to enabled.

Default

disabled

Format

```
spanning-tree port mode
```

Mode

Interface Config

■ no spanning-tree port mode

This command sets the Administrative Switch Port State for this port to disabled.

Format

```
no spanning-tree port mode
```

Mode

Interface Config

5.1.29 spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to enabled.

Default

disabled

Format

```
spanning-tree port mode all
```

Mode

Global Config

■ no spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to disabled.

Format

```
no spanning-tree port mode all
```

Mode

Global Config

5.1.30 spanning-tree stp-mrp-mode

This command sets the spanning tree mrp (Media Redundancy Protocol) mode to enabled.

Default

disabled

Format

```
spanning-tree stp-mrp-mode
```

Mode

Global Config

■ no spanning-tree stp-mrp-mode

This command sets the spanning tree mrp (Medium Redundancy Protocol) mode to disabled.

Format

```
no spanning-tree stp-mrp-mode
```

Mode

Global Config

5.1.31 spanning-tree tcnguard

This command enables tcn guard on an interface.

Default

disabled

Format

spanning-tree guard tcnguard

Mode

Interface Config

■ no spanning-tree tcnguard

This command disables tcn guard for this port.

Format

no spanning-tree tcnguard

Mode

Interface Config

5.2 MRP

The concept of the MRP-Ring enables the construction of high-availability, ring-shaped network structures.

The two ends of a backbone in a line-type configuration can be closed to form a redundant ring - the MRP-Ring - by using the RM function (Redundancy Manager) of the Switch.

It is possible to mix the devices that support this function in any combination within the MRP ring.

If a line section becomes inoperable, the ring structure of up to 50 switches typically transforms back to a line-type configuration within 150 ms (maximum 500 ms).

5.2.1 show mrp

This command displays the settings and states of the MRP-Ring. The following details are displayed on execution of the command.

Format

```
show mrp [current-domain]
```

Mode

Privileged EXEC and User EXEC

current-domain

Specify the optional keyword "current-domain" to show the current MRP domain's settings. If you omit the keyword "current-domain", the show command will display the settings of all existing MRP domains.

Note: Currently, it is only possible to configure one MRP domain, so the keyword keyword "current-domain" can be omitted (it exists for future compatibility reasons).

5.2.2 show mrp current-domain

This command displays the settings and states of the MRP-Ring's current domain. The following details are displayed on execution of the command. If you omit the optional keywords (e. g., advanced-mode), all settings will be displayed.

Format

```
show mrp current-domain [advanced-mode |  
    domain-id | info | manager-priority | mode |  
    name | recovery-delay | operation |  
    port [primary | secondary] | summary | vlan]
```

Mode

Privileged EXEC and User EXEC

advanced mode

Show the switch's advanced mode setting for the given MRP domain.

domain-id

Show the given MRP domain's ID.

info

Show status information for the given MRP domain.

Note: The information displayed depends on the switch's mode (Client or Manager) because only a subset of them are useful for each mode.

manager-priority

Show the switch's manager priority for the given MRP domain.

mode

Show the switch's mode for the given MRP domain.

name

Show the given MRP domain's name.

recovery-delay

Show the given MRP domain's recovery delay.

operation

Show the switch's administrative setting for the given MRP domain (enabled or disabled).

port

Show the ports for the given MRP domain

port primary

Show the primary port for the given MRP domain.

port secondary

Show the secondary port for the given MRP domain.

summary

Show a summary for the given MRP domain.

vlan

Show the VLAN ID for the given MRP domain.

5.2.3 mrp current-domain

Specify that you want to configure the current MRP domain's settings.

Default

none

Format

```
mrp current-domain {advanced-mode {disable|enable}  
| manager-priority <0-65535>  
| mode {client|manager} | name <domain-name>  
| recovery-delay {500ms|200ms}  
| operation {disable|enable}  
| port {primary|secondary} <slot/port>  
| vlan <0-4042>}
```

Mode

Global Config

advanced-mode

Enable or disable the switch's advanced mode for the given MRP domain.

manager-priority

Configure the given MRP domain's manager priority (0-65535).

mode

Configure the switch's MRP mode for the given domain (client or manager).

`client`: Switch is client for the given MRP domain.

`manager`: Switch is manager for the given MRP domain.

name

Set a name for the given MRP domain.

recovery-delay

Configure the MRP recovery delay for the given domain.

`500ms`: Recovery delay is 500 ms for the given MRP domain.

`200ms`: Recovery delay is 200 ms for the given MRP domain.

operation

Enable or disable the switch for the given MRP domain.

port

Specify the switch's ports for the given MRP domain (in slot/port notation).

`primary`: Specify the switch's primary port for the given MRP domain.

`secondary`: Specify the switch's secondary port for the given MRP domain.

vlan

Enter the VLAN for the given MRP domain (0 - 4042, default: 0).

5.2.4 mrp delete-domain

Delete current MRP domain.

Format

```
mrp delete-domain current-domain
```

Mode

```
Global Config
```

5.2.5 mrp new-domain

Create a new MRP domain. The configuration will consist of default parameters and its operation will be disabled.

Default

```
n/a not set
```

Format

```
mrp new-domain (<domain-id> | default-domain)
```

Mode

```
Global Config
```

domain-id

Enter a new MRP domain id. Format: 16 bytes in decimal notation, example: 1.2.3.4.5.6.7.8.9.10.11.12.13.14.15.16

The MRP domain id 0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0 is invalid.

default-domain

Create a default MRP domain (ID: 255.255.255.255.255.255.255.255.255.255.255.255.255.255.255.255).

5.3 HIPER-Ring

The concept of the HIPER-Ring enables the construction of high-availability, ring-shaped network structures. Within such a ring topology, network components supporting the HIPER-Ring are connected with each other via their ring ports. Exactly one redundancy manager assumes control of the ring. These commands are for configuring the Hirschmann High Performance Redundancy Ring.

Further information concerning this function you will find in the User Manual "Redundancy Configuration".

5.3.1 show hiper-ring

This command displays the settings and states of the HIPER-Ring. The following details are displayed on execution of the command.

Format

```
show hiper-ring
  {info | mode | port [primary | secondary] |
  redundancy-state | rm-state | recovery-delay}
```

Mode

Privileged EXEC and User EXEC

info

Display the information about the HIPER-Ring configuration (cabling).

mode

Display the HIPER-Ring mode settings.

port

Display the HIPER-Ring's primary and secondary port properties.

port primary

Display the HIPER Ring's primary port properties.

port secondary

Display the HIPER Ring's secondary port properties.

redundancy-state

Display the actual state of the HIPER-Ring redundancy.

rm-state

Display the state of the HIPER Ring redundancy manager.

recovery-delay

Display the value of the recovery delay.

5.3.2 hiper-ring

Configure the HIPER-Ring.

Press Enter for a list of valid commands and their recommended order.

Format

```
hiper-ring
```

Mode

```
Global Config
```

■ no hiper-ring

Clear the HIPER Ring configuration (delete it).

Format

```
no hiper-ring
```

Mode

```
Global Config
```

5.3.3 hiper-ring mode

This command sets the HIPER-Ring mode. Possible values are:

- ▶ `ring-manager` Set the switch's HIPER Ring mode to Ring Manager.
- ▶ `rm` Abbreviation of Ring Manager.
- ▶ `ring-switch` Set the switch's HIPER Ring mode to Ring Switch.
- ▶ `rs` Abbreviation of Ring Switch.

Default

```
none
```

Format

```
hiper-ring mode <{ring-manager|ring-switch|rm|rs}>
```

Mode

```
Global Config
```

5.3.4 hiper-ring port primary

Enter the switch's primary HIPER Ring port.

Default

n/a (not set)

Format

```
hiper-ring port primary <primary ring port>
```

Mode

Global Config

primary ring port

Enter the switch's primary HIPER Ring port (<slot/port>).

5.3.5 hiper-ring port secondary

Enter the switch's secondary HIPER Ring port.

Default

n/a not set

Format

```
hiper-ring port secondary <secondary ring port>
```

Mode

Global Config

secondary ring port

Enter the switch's secondary HIPER Ring port (<slot/port>).

5.3.6 hiper-ring recovery-delay

Defines the maximum recovery delay of ring recovery in the HIPER Ring (500 or 300 ms).

Default

n/a not set

Format

hiper-ring recovery-delay (<500/300>)

Mode

Global Config

5.4 Fast-HIPER-Ring

The concept of the Fast-HIPER-Ring enables the construction of high-availability, ring-shaped network structures. Within such a ring topology, network components supporting the Fast-HIPER-Ring are connected with each other via their ring ports. Exactly one redundancy manager assumes control of the ring.

These commands are for configuring the Hirschmann Fast High Performance Redundancy Ring.

Further information concerning this function you will find in the User Manual "Redundancy Configuration".

This command displays the settings and states of the HIPER-Ring. The following details are displayed on execution of the command.

Format

```
show fast-hiper-ring
```

Mode

Privileged EXEC and User EXEC

Ring ID

Display the Ring ID.

Mode of Switch (administrative setting)

Display the HIPER-Ring mode administrative settings.

Mode of Switch (real operating state)

Display the HIPER-Ring operation mode.

Ring Name

Display the Fast-HIPER-Ring's name.

Number of nodes in the ring

Display the number of nodes in the ring.

Port Number, Primary

Display the HIPER-Ring's primary port number and its properties.

Port Number, Secondary

Display the HIPER-Ring's secondary port number and its properties.

Operation

Display the admin state of the HIPER-Ring configuration.

General Operating States

Display general information concerning the fast-hiper-ring state.

Specify that you want to show the current Fast HIPER-Ring ID's settings.

Format

```
show fast-hiper-ring current-id  
  {id | info | mode | operation | port |  
  port [primary |secondary] | summary |  
  ring-name | nodes | vlan}
```

Mode

Privileged EXEC and User EXEC

id

Display the given Fast HIPER-Ring's ID.

info

Display status information for the given Fast HIPER-Ring ID.

mode

Display the switch's mode for the given Fast HIPER-Ring ID.

operation

Display the switch's operative setting for the given Fast HIPER-Ring ID.

Note: In case of configuration problems, this value may differ from the administrative setting (may become 'Disabled').

port

Display the ports for the given Fast HIPER-Ring ID.

port primary

Display the primary port for the given Fast HIPER-Ring ID.

port secondary

Display the secondary port for the given Fast HIPER-Ring ID.

summary

Display a summary for the given Fast HIPER-Ring ID.

ring-name

Display the ring name for the given Fast HIPER-Ring ID.

nodes

Display the number of nodes in the ring for the given Fast HIPER-Ring ID.

vlan

Display the VLAN ID for the given Fast HIPER-Ring ID.

5.4.1 fast-hiper-ring

Configure the Fast-HIPER-Ring.

Format

```
fast-hiper-ring {current-id  
  {mode {ring-manager|ring-switch|rm|rs} |  
  operation {disable|enable} |  
  port {primary|secondary} <slot/port> |  
  ring-name <ring-name> |  
  nodes <1-n> |  
  vlan <0-4042>} |  
delete-id current-id |  
new-id {<id>|default-id}}
```

Mode

Global Config

current-id

Specify that you want to configure the current Fast-HIPER-Ring ID's settings.

mode

Configure the switch's Fast HIPER-Ring mode for the given ID (ring-manager or ring-switch).

rm: Abbreviation for 'ring-manager'.

rs: Abbreviation for 'ring-switch'.

mode ring-manager

Switch is ring-manager for the given Fast HIPER-Ring ID.

mode ring-switch

Switch is ring-switch for the given Fast HIPER-Ring ID.

mode rm

Abbreviation for 'ring-manager'.

mode rs

Abbreviation for 'ring-switch'.

operation

Enable or disable the switch for the given Fast-HIPER-Ring ID.

port

Specify the switch's ports for the given Fast-HIPER-Ring ID.

ring-name

Set a ring name for the given Fast HIPER-Ring ID.

nodes

Specify the number of nodes in the ring for the given Fast HIPER-Ring ID.

vlan

Specify the VLAN for the given Fast HIPER-Ring ID.

delete-id

Delete the given Fast HIPER-Ring ID.

new-id

Create a new Fast HIPER-Ring ID. The configuration will consist of default parameters and its operation will be disabled.

<id>

Enter a new Fast HIPER-Ring ID. Format: a number in the range 1-2147483647 ($2^{31} - 1$). An ID of 0 is invalid.

default-id

Create a default Fast HIPER-Ring ID (1).

5.5 Redundant Coupling

The control intelligence built into the switch allows the redundant coupling of HiPER-Rings and network segments. Two network segments can be connected via two separate paths with one of the following switches:

- ▶ RS2-16M
- ▶ RS20/RS30/RS40
- ▶ RSR20/RSR30
- ▶ MICE (Rel. 3.0 or higher)
- ▶ MS20/MS30
- ▶ PowerMICE
- ▶ MACH1000
- ▶ MACH3000 (Rel. 3.3 or higher)
- ▶ MACH4000

The switch in the redundant line and the switch in the main line inform each other about their operating states by using control frames via the ethernet or via the control line.

Note: For redundancy security reasons, the Rapid Spanning Tree protocol and redundant network/ring coupling may not be enabled simultaneously.

Note: The network that connects the master and the slave must always be a HiPER-Ring. The coupling switch in single mode also must have a HiPER-Ring Configured.

Further information concerning this function you will find in the User Manual "Redundancy Configuration".

These commands allow you to configure the redundant coupling of network segments.

5.5.1 show ring-coupling

This command displays the settings and states of the network coupling / ring coupling.

To set up a new Ring Coupling configuration when no configuration is currently present (e. g., after a clear command), always set the local port first. Please refer to: ring-coupling port local <slot/port>.

The following details are displayed on execution of the command.

Format

```
show ring-coupling <config | info |  
net-coupling | operation | partner-ip |  
port [ all | control | local | partner] |  
redundancy-mode>
```

Mode

Privileged EXEC and User EXEC

config

Display the Ring Coupling's configuration

- single
- dual-master-inband
- dual-master-outband
- dual-slave-inband
- dual-slave-outband.

info

Display information about the Ring Coupling's states:

- configuration failure,
- Extended diagnosis,
- redundancy guaranteed.

net-coupling

Display the Ring Coupling's ring/network coupling setting (network/ring-only).

operation

Display the Ring Coupling's operation setting

- on
- off

partner IP

Display the switch's Ring Coupling partner IP address (only valid for remote configurations).

port

Display the switch's Ring Coupling ports

- all
- local
- partner (only takes effect in dual configurations)
- control (only takes effect in outband configurations).

redundancy-mode

Display the Ring Coupling's redundancy mode

- normal
- extended.

Ring/Network Coupling Mode

Display the Ring/Network Coupling mode

- ring-only if you wish to couple a HIPER-Ring.
- network if you wish to couple a line-type configuration.

5.5.2 ring-coupling

Configure the redundant coupling of HIPER-Rings / network segments. This command, if called without arguments, lists the available subcommands, their recommended order and tips how to set up a new configuration.

Format

```
ring-coupling
```

Mode

```
Global Config
```

■ no ring-coupling

Clear the ring-coupling configuration (delete it).

Format

```
no ring-coupling
```

Mode

```
Global Config
```

5.5.3 ring-coupling config

This command sets the Ring Coupling configuration.

Possible values are:

- ▶ `single` Configure the Ring Coupling's basic setting to single (both coupling ports are local to the switch, switch performs master and slave functions).
- ▶ `dual-master-inband` Configure the Ring Coupling's basic setting to dual-master-inband (2nd coupling port is on a remote switch, local switch is master, communication over network).
- ▶ `dual-master-outband` Configure the Ring Coupling's basic setting to dual-master-outband (2nd coupling port is on a remote switch, local switch is master, communication over dedicated control port).
- ▶ `dual-slave-inband` Configure the Ring Coupling's basic setting to dual-slave-inband (2nd coupling port is on a remote switch, local switch is slave, communication over network).
- ▶ `dual-slave-outband` Configure the Ring Coupling's basic setting to dual-slave-outband (2nd coupling port is on a remote switch, local switch is slave, communication over dedicated control port).
- ▶ `dmi` Abbreviation for `dual-master-inband`.
- ▶ `dmo` Abbreviation for `dual-master-outband`.
- ▶ `dsi` Abbreviation for `dual-slave-inband`.
- ▶ `dso` Abbreviation for `dual-slave-outband`.

Default

`none`

Format

```
ring-coupling config <{ single |  
dual-master-inband | dual-master-outband |  
dual-slave-inband | dual-slave-outband |  
dmi | dmo | dsi | dso }>
```

Mode

Global Config

5.5.4 ring-coupling net-coupling

Coupling mode refers to the type of coupled network.

Possible values are:

- ▶ `network` ,if you wish to couple a line-type configuration.
- ▶ `ring-only` ,if you wish to couple a HIPER-Ring.

Default

`none`

Format

`ring-coupling net-coupling <{network|ring-only}>`

Mode

Global Config

5.5.5 ring-coupling operation

Configure the Ring Coupling's operation setting. Possible values are:

- ▶ `on` Enable the current Ring Coupling configuration.
- ▶ `off` Disable the current Ring Coupling configuration.

Default

`off`

Format

`ring-coupling operation <{off|on}>`

Mode

Global Config

5.5.6 ring-coupling port

Configure the Ring Coupling's ports. Possible values are:

- ▶ `control` Enter the Ring Coupling's control coupling port in outband configurations.
- ▶ `local` Enter the Ring Coupling's local coupling port.
- ▶ `partner` Enter the Ring Coupling's partner coupling port in single mode configuration.

Default

`none`

Format

```
ring-coupling port <{control|local|partner}> <slot/  
port>
```

Mode

Global Config

5.5.7 ring-coupling redundancy-mode

Configure the Ring Coupling's redundancy mode. Possible values are:

- ▶ `extended` Slave responds to a failure in the remote ring or network.
- ▶ `normal` Slave does not respond to a failure in the remote ring or network.

Default

`extended`

Format

```
ring-coupling redundancy-mode <{extended|normal}>
```

Mode

Global Config

5.6 Port Security

With the Port Security function you can specify for each port from which terminal devices data can be received and sent to other ports. This function helps to protect the network from unauthorized access.

5.6.1 show port-sec mode

Display the MAC/IP Based Port Security global setting for all ports.

Format

```
show port-sec mode
```

Mode

Privileged EXEC and User EXEC

5.6.2 show port-sec port

Display the MAC/IP Based Port Security port-related settings (allowed MAC address, current MAC address, allowed IP address, current action and current port state).

Format

```
show port-sec port <{all|<slot/port>}>
```

Mode

Privileged EXEC and User EXEC

5.6.3 port-sec mode

Configure the global MAC/IP Based Port Security mode:

- ▶ ip-based Port security is based on a given, allowed source IP address.
- ▶ mac-based Port security is based on a given, allowed source MAC address.

Format

```
port-sec mode <{ip-based|mac-based}>
```

Mode

```
Global Config
```

5.6.4 port-sec action

Configure the action to be taken if port security is violated at this port.

- ▶ `none` No action is taken if port security is violated at this port.
- ▶ `port-disable` The port is disabled for traffic if port security is violated.
- ▶ `trap-only` A trap is sent if port security is violated at this port (this port remains open for traffic).

Configure the allowed IP source address for this port.

Configure the allowed MAC source address for this port.

Format

```
port-sec {action {none|port-disable|trap-only}
          |allowed-ip <IP1> [IP2 [IP3 [IP4 [IP5
                        [IP6 [IP7 [IP8 [IP9 [IP10]]]]]]]]
          |allowed-mac <MAC1> [MAC2 [MAC3 [MAC4
                        [MAC5 [MAC6 [MAC7 [MAC8 [MAC9
                        [MAC10]]]]]]]] } }
```

Mode

Interface Config

■ no port-sec

No action is taken if port security is violated at this port.

Format

```
no port-sec
```

Mode

Interface Config

5.6.5 port-sec allowed-ip

Enter the allowed IP source address for this port, format: nnn.nnn.nnn.nnn (nnn: decimal number 0..255) (up to 10).

Format

```
port-sec allowed-ip <IP Address 1> <IP Address 2>
... <IP Address 10>
```

Mode

Interface Config

5.6.6 port-sec allowed-ip add

Enter the allowed IP source address for this port, format: nnn.nnn.nnn.nnn (nnn: decimal number 0..255) (up to 50).

Format

```
port-sec allowed-ip add <IP Address 1>
                        <IP Address 2> ... <IP Address 50>
```

Mode

Interface Config

5.6.7 port-sec allowed-ip remove

Enter the allowed IP source address for this port, format: nnn.nnn.nnn.nnn (nnn: decimal number 0..255) (up to 50).

Format

```
port-sec allowed-ip remove <IP Address 1>  
                               <IP Address 2> ... <IP Address 50>
```

Mode

Interface Config

5.6.8 port-sec allowed-mac

Enter the allowed MAC source address for this port, format: nn:nn:nn:nn:nn:nn (n: hexadecimal digit) or format: nn:nn:nn:nn:nn:nn/m (n: hexadecimal digit) (m: decimal digit (1..48)) (up to 10).

Format

```
port-sec allowed-mac <MAC Address 1>  
                    <MAC Address 2> ... <MAC Address 10>
```

Mode

Interface Config

5.6.9 port-sec allowed-mac add

Enter the allowed MAC source address for this port,
format: nn:nn:nn:nn:nn:nn (n: hexadecimal digit) or
format: nn:nn:nn:nn:nn:nn/m
n: hexadecimal digit, m: decimal digit (1..48)
(up to 50).

Format

```
port-sec allowed-mac add <MAC Address 1>  
                        <MAC Address 2> ... <MAC Address 50>
```

Mode

Interface Config

5.6.10 port-sec allowed-mac remove

Enter the allowed MAC source address for this port,
format: nn:nn:nn:nn:nn:nn (n: hexadecimal digit) or
format: nn:nn:nn:nn:nn:nn/m
n: hexadecimal digit, m: decimal digit (1..48)
(up to 50).

Format

```
port-sec allowed-mac remove <MAC Address 1>  
                            <MAC Address 2> ... <MAC Address 50>
```

Mode

Interface Config

5.6.11 clear port-sec

Clear the MAC/IP Based Port Security by setting each port's security action (applied when port security is violated) to None. Additionally, the global mode is set to MAC Based.

Format

```
clear port-sec
```

Mode

```
User EXEC and Global Config
```

5.7 DHCP Relay Commands

These commands configure the DHCP Relay parameters. The commands are divided by functionality into these different groups:

- ▶ Configuration Commands are used to configure features and options of the switch. For every configuration command there is a show command that will display the configuration setting.
- ▶ Show commands are used to display switch settings, statistics and other information.
- ▶ Commands that start with the keyword 'no' (so-called 'no commands') are used to clear some or all of the settings to factory defaults.

5.7.1 dhcp-relay

Set different options for BOOTP/DHCP relay and option 82 inclusion.

Format

```
dhcp-relay
  {opt82
    {operation {disable|enable}}|
    man-id <Manual Remote ID>|
    remote-id-type {client-id|ip|mac|other}}|
  server-address <Server-ID (1..4)> <Server IP
                                     Address>}
```

Mode

Global Config

dhcp-relay opt82 operation {disable|enable}

Enable/Disable option 82 globally. Default: enable.

dhcp-relay opt82 man-id <Manual Remote ID>

Configure the DHCP Relay's Option 82 Manual Value for the Remote ID Type (only effective, if Remote ID is set to "other"). Default: no ID.

dhcp-relay opt82 remote-id-type {client-id|ip|mac|other}

Configure the DHCP Relay's Option 82 Remote ID Type.
Default: mac

dhcp-relay server-address <Server ID (1..4)> <Server IP Address>

Set the server IP address for one of the 4 possible server IDs.
Default: 0.0.0.0

■ **no dhcp-relay**

Clear the DHCP Relay configuration (set all server addresses to 0.0.0.0).

Format

```
no dhcp-relay
```

Mode

Global Config

5.7.2 dhcp-relay

Set different port specific options for option 82 inclusion.

Format

```
dhcp-relay {admin-state {disable|enable} |  
            operation {disable|enable} |  
            hirschmann-device {disable|enable} |  
            hirschmann-agent {disable|enable}}
```

Mode

Interface Config

dhcp-relay admin-state {disable|enable}

Enable or disable the DHCP Relay's Admin State on this port.

Default: enable.

Note: Make sure that "Active Protocol" is "Relay" for both ports involved in DHCP Relaying (the one connected to DHCP client and the one connected to DHCP server).

dhcp-relay operation {disable|enable}

Enable or disable the DHCP Relay's Option 82 on this port. Default: enable.

dhcp-relay hirschmann-device {disable|enable}

Enable this parameter if a Hirschmann DHCP client is connected to this port.

- It disables the forwarding of DHCP multicast requests that are received on this port.
- It will send its own DHCP multicast requests to be relayed by the DHCP relay; this will reduce the load in your network.

Disable this parameter if a Non-Hirschmann DHCP client is connected to this port (these devices send normal broadcast DHCP requests; this enables the relaying of DHCP broadcast requests that are received on this port).

dhcp-relay hirschmann-agent {disable|enable}

Enable or disable the forwarding of DHCP requests that are received on this port. Enable this parameter if a Hirschmann DHCP client is connected to this port. Default: disable.

Disable this parameter if a Non-Hirschmann DHCP client is connected to this port (these devices send normal broadcast DHCP requests; this enables the relaying of DHCP broadcast requests that

are received on this port)

Enable this parameter if a Hirschmann DHCP client is connected to this port (it will send its own DHCP multicast requests to be relayed by the DHCP relay; this will reduce the load in your network).

5.7.3 show dhcp-relay

Display the settings of the BOOTP/DHCP relay.

Format

```
show dhcp-relay [opt82 | port {<slot/port>|all} |  
server-address]
```

Mode

Privileged EXEC and User EXEC

opt82

Show the DHCP Relay's Option 82 settings exclusively.

port

Display the DHCP Relay's port-related settings for the specified port exclusively.

<slot/port>

Show the DHCP Relay's port-related settings for the specified port exclusively.

all

Show the DHCP Relay's port-related settings for all ports.

server-address

Display the DHCP Relay's server address settings exclusively.

Port

Display the port number in <slot/port> notation.

Admin State

Display the DHCP Relay's admin state settings.

Possible values: Disabled, Enabled

Active Protocol

Display the DHCP Relay's active protocol settings.

Possible values: Relay, Disabled, Server, Inaccessible

Option 82

Display the DHCP Relay's option 82 settings.

Possible values: Disabled, Enabled

Hirschmann Device

Display the DHCP Relay's Hirschmann device settings.

Possible values: Disabled, Enabled

6 CLI Commands: Security

This chapter provides a detailed explanation of the Security commands. The following Security CLI commands are available in the software Switching Package. Use the security commands to configure security settings for login users and port users.

The commands are divided into these different groups:

- ▶ Show commands are used to display device settings, statistics and other information.
- ▶ Configuration Commands are used to configure features and options of the switch. For every configuration command there is a show command that will display the configuration setting.

6.1 Security Commands

6.1.1 users login

This command assigns the specified authentication login list to the specified user for system login. The `<user>` must be a configured `<user>` and the `<listname>` must be a configured login list.

If the user is assigned a login list that requires remote authentication, all access to the interface from all CLI, web, and telnet sessions will be blocked until the authentication is complete.

Note: Note that the login list associated with the 'admin' user can not be changed to prevent accidental lockout from the switch.

Format

```
users login <user> <listname>
```

Mode

```
Global Config
```

user

Enter user name.

listname

Enter an alphanumeric string of not more than 15 characters.

Note: When assigning a list to the 'admin' account, include an authentication method that allows administrative access even when remote authentication is unavailable (use 'authentication login `<listname>` [method1 [method2 [method3]]]').

6.2 HTTP Commands

6.2.1 ip http secure-port

This command is used to set the sslt port where port can be 1-65535 and the default is port 443.

Default

443

Format

```
ip http secure-port <portid>
```

Mode

Privileged EXEC

■ no ip http secure-port

This command is used to reset the sslt port to the default value.

Format

```
no ip http secure-port
```

Mode

Privileged EXEC

6.2.2 ip http secure-protocol

This command is used to set protocol levels (versions). The protocol level can be set to TLS1, SSL3 or to both TLS1 and SSL3.

Default

SSL3 and TLS1

Format

```
ip http secure-protocol [SSL3] [TLS1]
```

Mode

Privileged EXEC

6.2.3 ip http server

This command enables access to the switch's graphical user interface (web-based interface) via a web browser. When access is enabled, the user can login to the switch from the web-based interface. When access is disabled, the user cannot login to the switch's web server.

Disabling the web-based interface takes effect immediately. All interfaces are effected.

Note: First enable HTTP before enabling HTTPS.
First disable the HTTPS web server before disabling HTTP.
See “ip https server” on page 364.

Default

enabled

Format

```
ip http server
```

Mode

Privileged EXEC

■ no ip http server

This command disables access to the switch's graphical user interface (web-based interface) via a web browser. When access is disabled, the user cannot login to the switch's web server.

Format

```
no ip http server
```

Mode

Privileged EXEC

6.2.4 show ip http

This command displays the http settings for the switch.

Format

```
show ip http
```

Mode

Privileged EXEC and User EXEC

Secure-Server Administrative Mode

This field indicates whether the administrative mode of secure HTTP is enabled or disabled.

Secure Protocol Level

The protocol level may have the values of SSL3, TSL1, or both SSL3 and TSL1.

Secure Port

This field specifies the port configured for SSLT.

HTTP Mode

This field indicates whether the HTTP mode is enabled or disabled.

6.2.5 ip https server

This command is used to turn on the HTTPS server 3.

This command enables access to the switch's graphical user interface (web-based interface) via a web browser. When access is enabled, the user can login to the switch from the web interface. When access is disabled, the user cannot login to the switch's web server.

Note: First enable HTTP before enabling HTTPS.
First disable the HTTPS web server before disabling HTTP.
See “ip http server” on page 362.

Default

disabled

Format

```
ip https server
```

Mode

Privileged EXEC

■ no ip https server

This command is used to turn off the HTTPS server 3.

This command disables access to the switch's graphical user interface (web-based interface) via a web browser. When access is disabled, the user cannot login to the switch's web server.

Format

```
no ip https server
```

Mode

Privileged EXEC

6.2.6 ip https port

This command is used to set the HTTPS listening port. The acceptable range is 1-65535. The default is 443

Note: After this setting, re-enable the HTTPS server. See “ip http server” on page 362.

Default

443

Format

```
ip https port <port_no>
```

Mode

Privileged EXEC

■ no ip https port

This command is used to reset the https port to the default value.

Format

```
no ip https port
```

Mode

Privileged EXEC

6.2.7 ip https certgen

Use this command to generate an X509/PEM certificate in-place.

Format

```
ip https certgen
```

Mode

Privileged EXEC

6.2.8 show ip https

This command displays the status of the HTTPS server (status of the server and port number).

Format

```
show ip https
```

Mode

Privileged EXEC and User EXEC

HTTPS Mode

Displays the status of the HTTPS server (enabled, disabled).

HTTPS Port

Displays the port number of the HTTPS server (default: 443).

7 Appendix- VLAN Example

LAN switches can segment networks into logically defined virtual workgroups. This logical segmentation is commonly referred to as a virtual LAN (VLAN). This logical segmentation of devices provides better LAN administration, security, and management of broadcast activity over the network. Virtual LANs have become an integral feature of switched LAN solutions.

The VLAN example below demonstrates a simple VLAN configuration.

If a single port is a member of VLANs 2, 3 and 4, the port expects to see traffic tagged with either VLAN 2, 3 or 4.

The PVID (Port Virtual Identification) could be something entirely different, for example '12' and things would still work fine, just so incoming traffic was tagged.

Example:

Project A = (VLAN2, ports 1,2)

Project B = (VLAN3, ports 3,4)

Project C = (VLAN4, ports 5,6)

Project P = (VLAN 9, port 7)

VLAN	Command
create VLAN 2	vlan database vlan 2 exit config interface 1/1 vlan participation include 2 exit interface 1/2 vlan participation include 2 exit

Table 10: Creating VLANs

VLAN	Command
create VLAN 3	<pre> vlan database vlan 3 exit config interface 0/3 vlan participation include 3 exit interface 0/4 vlan participation include 3 exit </pre>
create VLAN 4	<pre> vlan database vlan 4 exit config interface 0/5 vlan participation include 4 exit interface 0/6 vlan participation include 4 exit </pre>
create VLAN 9	<pre> vlan database vlan 9 exit config interface 0/1 vlan participation include 9 exit interface 0/2 vlan participation include 9 exit interface 0/3 vlan participation include 9 exit interface 0/4 vlan participation include 9 exit interface 0/5 vlan participation include 9 exit interface 0/6 vlan participation include 9 exit interface 0/7 vlan participation include 9 exit </pre>

Table 10: Creating VLANs

7.1 SOLUTION 1

All traffic entering the ports is tagged traffic. Since the traffic is tagged, the PVID configuration for each port is not a concern.

- ▶ The network card configuration for devices on Project A must be set to tag all traffic with 'VLAN 2'
- ▶ The network card configuration for devices on Project B must be set to tag all traffic with 'VLAN 3'
- ▶ The network card configuration for devices on Project C must be set to tag all traffic with 'VLAN 4'
- ▶ The network card configuration for devices on Project P must be set to tag all traffic with 'VLAN 9'

7.2 SOLUTION 2

The network card configuration for devices on Project A, B and C should be set to NOT tag traffic.

To take care of these untagged frames configure the following:

- ▶ vlan pvid 2 (in interface 0/1)
- ▶ vlan pvid 2 (in interface 0/2)
- ▶ vlan pvid 3 (in interface 0/3)
- ▶ vlan pvid 3 (in interface 0/4)
- ▶ vlan pvid 4 (in interface 0/5)
- ▶ vlan pvid 4 (in interface 0/6)

8 Glossary

Numerics

802.1D. The IEEE designator for Spanning Tree Protocol (STP). STP, a link management protocol, is part of the 802.1D standard for media access control bridges. Using the spanning tree algorithm, STP provides path redundancy while preventing endless loops in a network. An endless loop is created by multiple active paths between stations where there are alternate routes between hosts. To establish path redundancy, STP creates a logical tree that spans all of the switches in an extended network, forcing redundant paths into a standby, or blocked, state. STP allows only one active path at a time between any two network devices (this prevents the loops) but establishes the redundant links as a backup if the initial link should fail. If STP costs change, or if one network segment in the STP becomes unreachable, the spanning tree algorithm reconfigures the spanning tree topology and reestablishes the link by activating the standby path. Without spanning tree in place, it is possible that both connections may be simultaneously live, which could result in an endless loop of traffic on the LAN.

802.1P. The IEEE protocol designator for Local Area Network (LAN). This Layer 2 network standard improves support of time critical traffic, and limits the extent of high bandwidth multicast traffic within a bridged LAN. To do this, 802.1P defines a methodology for introducing traffic class priorities. The 802.1P standard allows priority to be defined in all 802 MAC protocols (Ethernet, Token Bus, Token Ring), as well as in FDDI. For protocols (such as Ethernet) that do not contain a priority field, 802.1P specifies a method for indicating frame priority based on the new fields defined in the 802.1Q (VLAN) standard.

802.1Q VLAN. The IEEE protocol designator for Virtual Local Area Network (VLAN). This standard provides VLAN identification and quality of service (QoS) levels. Four bytes are added to an Ethernet frame to allow eight priority levels (QoS) and to identify up to 4096 VLANs. See “VLAN” on page 386 for more information.

A

Address Resolution Protocol. An Internet Protocol that dynamically maps Internet addresses to physical (hardware) addresses on a LAN.

Advanced Network Device Layer/Software. Hirschmann term for the Device Driver level.

Aging. When an entry for a node is added to the lookup table of a switch, it is given a timestamp. Each time a packet is received from a node, the timestamp is updated. The switch has a user-configurable timer that erases the entry after a certain length of time with no activity from that node.

Application Programming

Interface. An API is an interface used by a programmer to interface with functions provided by an application.

AVL tree. Binary tree having the property that for any node in the tree, the difference in height between the left and right subtrees of that node is no more than 1.

B

BPDU. See “Bridge Protocol Data Unit” on page 374.

BootP. See “Bootstrap Protocol.” on page 374.

Bootstrap Protocol. An Internet protocol that enables a diskless workstation to discover its own IP address, the IP address of a BootP server on the network, and a file to be loaded into memory to boot the machine. This enables the workstation to boot without requiring a hard or floppy disk drive.

Bridge Protocol Data Unit. BPDU is the IEEE 802.1D MAC Bridge Management protocol that is the

standard implementation of STP (Spanning Tree Protocol). It uses the STP algorithm to insure that physical loops in the network topology do not result in logical looping of network traffic. Using one bridge configured as root for reference, the BPDU switches one of two bridges forming a network loop into standby mode, so that only one side of a potential loop passes traffic. By examining frequent 802.1d configuration updates, a bridge in the standby mode can switch automatically into the forward mode if the other bridge forming the loop fails.

C

Checksum. A simple error-detection scheme in which each transmitted message is identified with a numerical value based on the number of set bits in the message. The receiving station then applies a formula to the message and checks to make sure the accompanying numerical value is the same. If not, the receiver can assume that the message has been corrupted.

CLI. See “Command Line Interface” on page 374.

Command Line Interface. CLI is a line-item interface for configuring systems.

Complex Programmable Logic Device. CPLD is a programmable circuit on which a logic network can

be programmed after its construction.

CPLD. See “Complex Programmable Logic Device.” on page 374.

D

DAPI. See “Device Application Programming Interface” on page 375.

Device Application Programming Interface. DAPI is the software interface that facilitates communication of both data and control information between the Application Layer and HAPI, with support from System Support.

DHCP. See “Dynamic Host Configuration Protocol.” on page 375.

Differentiated Services. Diffserv is a protocol for specifying and controlling network traffic by class so that certain types of traffic get precedence - for example, voice traffic, which requires a relatively uninterrupted flow of data, might get precedence over other kinds of traffic. Differentiated Services is the most advanced method for managing traffic in terms of what is called Class of Service (CoS). Unlike the earlier mechanisms of 802.1P tagging and Type of Service (ToS), Differentiated Services avoids simple priority tagging and depends on more complex policy or rule

statements to determine how to forward a given network packet. An analogy is made to travel services, in which a person can choose among different modes of travel - train, bus, airplane - degree of comfort, the number of stops on the route, standby status, the time of day or period of year for the trip, and so forth. For a given set of packet travel rules, a packet is given one of 64 possible forwarding behaviors - known as per hop behaviors (PHBs). A six-bit field, known as the Differentiated Services Code Point (DSCP), in the Internet Protocol (Internet Protocol) header specifies the per hop behavior for a given flow of packets. Differentiated Services and the Class of Service approach provide a way to control traffic that is both more flexible and more scalability than the Quality of Service approach.

Diffserv. See “Differentiated Services.” on page 375..

Dynamic Host Configuration Protocol. DHCP is a protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. In some systems, the device's IP address can even change while it is still connected. DHCP also supports a mix of static and dynamic IP addresses. Dynamic addressing simplifies network administration because the software tracks IP

addresses rather than requiring an administrator to manage the task. A new computer can be added to a network without the hassle of manually assigning it a unique IP address.

E

EEPROM. See “Electronically Erasable Programmable Read Only Memory” on page 376.

Electronically Erasable Programmable Read Only Memory. EEPROM is also known as Flash memory. This is re-programmable memory.

F

Fast STP. A high-performance Spanning Tree Protocol. See “STP” on page 385 for more information.

FIFO. First In First Out.

Flash Memory. See “EEPROM” on page 376.

Flow Control. The process of adjusting the flow of data from one network device to another to ensure that the receiving device can handle all of the incoming data. This is particularly important where the sending device is capable of sending data much faster than the receiving device can receive it. There are many flow control mechanisms. One of the most common flow control protocols for

asynchronous communication is called xon-xoff. In this case, the receiving device sends a an “xoff” message to the sending device when its buffer is full. The sending device then stops sending data. When the receiving device is ready to receive more data, it sends an “xon” signal.

Forwarding. When a frame is received on an input port on a switch, the address is checked against the lookup table. If the lookup table has recorded the destination address, the frame is automatically forwarded on an output port.

Frame Check Sequence. The extra characters added to a frame for error detection and correction. FCS is used in X.25, HDLC, Frame Relay, and other data link layer protocols.

G

GARP. See “Generic Attribute Registration Protocol.” on page 377.

GARP Information Propagation.

GIP is the propagation of information between GARP participants for the same application in a bridge is carried out by a GIP component.

GARP Multicast Registration Protocol. GMRP provides a mechanism that allows Bridges and end stations to dynamically register (and subsequently, de-register)

Group membership information with the MAC Bridges attached to the same LAN segment, and for that information to be disseminated across all Bridges in the Bridged LAN that support Extended Filtering Services. The operation of GMRP relies upon the services provided by the GARP.

GARP VLAN Registration

Protocol. GVRP allows workstations to request admission to a particular VLAN for multicast purposes.

GE. See “Gigabit Ethernet” on page 377.

General Purpose Chip-select Machine. GPCM provides interfacing for simpler, lower-performance memory resources and memory mapped-devices. The GPCM does not support bursting and is used primarily for boot-loading.

Generic Attribute Registration

Protocol. GARP provides a generic attribute dissemination capability that is used by participants in GARP Applications (called GARP Participants) to register and de-register attribute values with other GARP Participants within a Bridged LAN. The definition of the attribute types, the values that they can carry, and the semantics that are associated with those values when registered are specific to the

operation of the GARP Application concerned.

Gigabit Ethernet. A high-speed Ethernet connection.

GIP. See “GARP Information Propagation” on page 376.

GMRP. See “GARP Multicast Registration Protocol” on page 376.

GPCM. See “General Purpose Chip-select Machine” on page 377.

GVD. GARP VLAN Database.

GVRP. See “GARP VLAN Registration Protocol.” on page 377.

H

.h file. Header file in C code. Contains function and coding definitions.

HAPI. See “Hardware Abstraction Programming Interface” on page 377.

Hardware Abstraction Programming Interface. HAPI is the module that contains the NP specific software that interacts with the hardware.

hop count. The number of routers that a data packet passes through on its way to its destination.

I

ICMP. See “Internet Control Message Protocol” on page 378.

IGMP. See “Internet Group Management Protocol” on page 378.

IGMP Snooping. A series of operations performed by intermediate systems to add logic to the network to optimize the flow of multicast traffic; these intermediate systems (such as Layer 2 switches) listen for IGMP messages and build mapping tables and associated forwarding filters, in addition to reducing the IGMP protocol traffic. See “Internet Group Management Protocol” on page 378 for more information.

Internet Control Message

Protocol. ICMP is an extension to the Internet Protocol (IP) that supports packets containing error, control, and informational messages. The PING command, for example, uses ICMP to test an Internet connection.

Internet Group Management

Protocol. IGMP is the standard for IP Multicasting on the Internet. IGMP is used to establish host memberships in particular multicast groups on a single network. The mechanisms of the protocol allow a host to inform its local router, using Host Membership Reports, that it wants to receive messages addressed to a specific multicast group. All hosts conforming to Level 2 of the IP Multicasting specification require IGMP.

IP. See “Internet Protocol” on page 378.

IP Multicasting. Sending out data to distributed servers on the MBone (Multicast Backbone). For large amounts of data, IP Multicast is more efficient than normal Internet transmissions because the server can broadcast a message to many recipients simultaneously. Unlike traditional Internet traffic that requires separate connections for each source-destination pair, IP Multicasting allows many recipients to share the same source. This means that just one set of packets is transmitted for all the destinations.

Internet Protocol. The method or protocol by which data is sent from one computer to another on the Internet. Each computer (known as a host) on the Internet has at least one IP address that uniquely identifies it among all other computers on the Internet. When you send or receive data (for example, an e-mail note or a Web page), the message gets divided into little chunks called packets. Each of these packets contains both the sender's Internet address and the receiver's address. Any packet is sent first to a gateway computer that understands a small part of the Internet. The gateway computer reads the destination address and forwards the packet to an adjacent gateway that in turn reads the destination address and so forth across the Internet until one

gateway recognizes the packet as belonging to a computer within its immediate neighborhood or domain. That gateway then forwards the packet directly to the computer whose address is specified.

Because a message is divided into a number of packets, each packet can, if necessary, be sent by a different route across the Internet. Packets can arrive in a different order than they were sent. The Internet Protocol just delivers them. It's up to another protocol, the Transmission Control Protocol (TCP) to put them back in the right order. IP is a connectionless protocol, which means that there is no continuing connection between the end points that are communicating. Each packet that travels through the Internet is treated as an independent unit of data without any relation to any other unit of data. (The reason the packets do get put in the right order is because of TCP, the connection-oriented protocol that keeps track of the packet sequence in a message.) In the Open Systems Interconnection (OSI) communication model, IP is in Layer 3, the Networking Layer. The most widely used version of IP today is IP version 4 (IPv4). However, IP version 6 (IPv6) is also beginning to be supported. IPv6 provides for much longer addresses and therefore for the possibility of many more Internet users. IPv6 includes the capabilities of IPv4 and any

server that can support IPv6 packets can also support IPv4 packets.

J

Joint Test Action Group. An IEEE group that specifies test framework standards for electronic logic components.

JTAG. See “Joint Test Action Group” on page 379.

L

LAN. See “Local Area Network” on page 380.

LDAP. See “Lightweight Directory Access Protocol” on page 379.

Lightweight Directory Access Protocol. A set of protocols for accessing information directories. LDAP is based on the standards contained within the X.500 standard, but is significantly simpler. Unlike X.500, LDAP supports TCP/IP, which is necessary for any type of Internet access. Although not yet widely implemented, LDAP should eventually make it possible for almost any application running on virtually any computer platform to obtain directory information, such as e-mail addresses and public keys. Because LDAP is an open protocol, applications need not worry about the type of server hosting the directory.

Learning. The bridge examines the Layer 2 source addresses of every frame on the attached networks (called listening) and then maintains a table, or cache, of which MAC addresses are attached to each of its ports.

Link-State. In routing protocols, the declared information about the available interfaces and available neighbors of a router or network. The protocol's topological database is formed from the collected link-state declarations.

LLDP. The IEEE 802.1AB standard for link layer discovery in Ethernet networks provides a method for switches, routers and access points to advertise their identification, configuration and capabilities to neighboring devices that store the data in a MIB (management information base). Link layer discovery allows a network management system to model the topology of the network by interrogating the MIB databases in the devices.

Local Area Network. A group of computers that are located in one area and are connected by less than 1,000 feet of cable. A typical LAN might interconnect computers and peripherals on a single floor or in a single building. LANs can be connected together, but if modems and telephones connect two or more LANs, the larger network constitutes

what is called a WAN or Wide Area Network.

M

MAC. (1) Medium Access Control. In LANs, the sublayer of the data link control layer that supports medium-dependent functions and uses the services of the physical layer to provide services to the logical link control (LLC) sublayer. The MAC sublayer includes the method of determining when a device has access to the transmission medium. (2) Message Authentication Code. In computer security, a value that is a part of a message or accompanies a message and is used to determine that the contents, origin, author, or other attributes of all or part of the message are as they appear to be. (*IBM Glossary of Computing Terms*)

Management Information Base.

When SNMP devices send SNMP messages to the management console (the device managing SNMP messages), it stores information in the MIB.

MBONE. See "Multicast Backbone" on page 381.

MDC. Management Data Clock.

MDI. Management Data Interface.

MDIO. Management Data Input/Output.

MDIX. Management Dependent Interface Crossover.

MIB. See “Management Information Base” on page 380.

MOSPF. See “Multicast OSPF” on page 381.

MPLS. See “Multi-Protocol Label Switching” on page 381.

Multicast Backbone. The MBONE is a virtual network. It is layered on top of portions of the physical Internet to support routing of IP multicast packets since that function has not yet been integrated into many production routers. The network is composed of islands that can directly support IP multicast, such as multicast LANs like Ethernet, linked by virtual point-to-point links called “tunnels”. The tunnel endpoints are typically workstation-class machines having operating system support for IP multicast and running the “mrouterd” multicast routing daemon.

Multicasting. To transmit a message to specific recipients across a network. A simple example of multicasting is sending an e-mail message to a mailing list. Teleconferencing and videoconferencing also use multicasting, but require more robust protocols and networks. Standards are being developed to support multicasting over a TCP/IP network such as the Internet. These standards, IP Multicast and Mbone,

will allow users to easily join multicast groups. Note that multicasting refers to sending a message to a select group whereas broadcasting refers to sending a message to everyone connected to a network. The terms multicast and narrowcast are often used interchangeably, although narrowcast usually refers to the business model whereas multicast refers to the actual technology used to transmit the data.

Multicast OSPF. With a MOSPF specification, an IP Multicast packet is routed based both on the packet's source and its multicast destination (commonly referred to as source/destination routing). As it is routed, the multicast packet follows a shortest path to each multicast destination. During packet forwarding, any commonality of paths is exploited; when multiple hosts belong to a single multicast group, a multicast packet will be replicated only when the paths to the separate hosts diverge. See “P” on page 383 for more information.

Multiplexing. A function within a layer that interleaves the information from multiple connections into one connection.

Multi-Protocol Label Switching.

An initiative that integrates Layer 2 information about network links (bandwidth, latency, utilization) into Layer 3 (IP) within a particular

autonomous system—or ISP—in order to simplify and improve IP-packet exchange. MPLS gives network operators a great deal of flexibility to divert and route traffic around link failures, congestion, and bottlenecks. From a QoS standpoint, ISPs will better be able to manage different kinds of data streams based on priority and service plan. For instance, those who subscribe to a premium service plan, or those who receive a lot of streaming media or high-bandwidth content can see minimal latency and packet loss. When packets enter into a MPLS-based network, Label Edge Routers (LERs) give them a label (identifier). These labels not only contain information based on the routing table entry (i.e., destination, bandwidth, delay, and other metrics), but also refer to the IP header field (source IP address), Layer 4 socket number information, and differentiated service. Once this classification is complete and mapped, different packets are assigned to corresponding Labeled Switch Paths (LSPs), where Label Switch Routers (LSRs) place outgoing labels on the packets. With these LSPs, network operators can divert and route traffic based on data-stream type and Internet-access customer.

MT-RJ connector. A type of fiber-optic cable jack that is similar in shape and concept to a standard telephone jack, enabling duplex

fiber-optic cables to be plugged into compatible devices as easily as plugging in a telephone cable.

MUX. See “Multiplexing” on page 381.

N

NM. Network Module.

nm. Nanometer (1×10^9) meters.

NP. Network Processor.

O

Open Systems Interconnection.

OSI is a seven (7) layer architecture model for communications systems developed by the ISO for the interconnection of data communications systems. Each layer uses and builds on the services provided by those below it.

Operating System Application Programming Interface. OSAPI is a module within the System Support software that provides a set of interfaces to OS support functions.

OS. Operating System.

OSAPI. See “Operating System Application Programming Interface” on page 382.

OSI. See “Open Systems Interconnection” on page 382.

P

PDU. See “Protocol Data Unit” on page 383.

PHY. The OSI Physical Layer: The physical layer provides for transmission of cells over a physical medium connecting two ATM devices. This physical layer is comprised of two sublayers: the Physical Medium Dependent (PMD) sublayer, and the Transmission Convergence (TC) sublayer.

PMC. Packet Mode Channel.

Port Mirroring. Also known as a roving analysis port. This is a method of monitoring network traffic that forwards a copy of each incoming and outgoing packet from one port of a network switch to another port where the packet can be studied. A network administrator uses port mirroring as a diagnostic tool or debugging feature, especially when fending off an attack. It enables the administrator to keep close track of switch performance and alter it if necessary. Port mirroring can be managed locally or remotely. An administrator configures port mirroring by assigning a port from which to copy all packets and another port where those packets will be sent. A packet bound for or heading away from the first port will be forwarded onto the second port as well. The administrator places a protocol analyzer on the port receiving the

mirrored data to monitor each segment separately. The analyzer captures and evaluates the data without affecting the client on the original port. The monitor port may be a port on the same SwitchModule with an attached RMON probe, a port on a different SwitchModule in the same hub, or the SwitchModule processor. Port mirroring can consume significant CPU resources while active. Better choices for long-term monitoring may include a passive tap like an optical probe or an Ethernet repeater.

Protocol Data Unit. PDU is a packet of data passed across a network. The term implies a specific layer of the OSI model and a specific protocol.

Q

QoS. See “Quality of Service” on page 383.

Quality of Service. QoS is a networking term that specifies a guaranteed level of throughput. Throughput is the amount of data transferred from one device to another or processed in a specified amount of time - typically, throughputs are measured in bytes per second (Bps).

R

Real-Time Operating System.

RTOS is a component of the OSAPI module that abstracts operating systems with which other systems can interface.

RFC. Request For Comment.

RMON. Short for remote monitoring, a network management protocol that allows network information to be gathered at a single workstation. Whereas SNMP gathers network data from a single type of Management Information Base (MIB), RMON 1 defines nine additional MIBs that provide a much richer set of data about network usage. For RMON to work, network devices, such as hubs and switches, must be designed to support it. The newest version of RMON, RMON 2, provides data about traffic at the network layer in addition to the physical layer. This allows administrators to analyze traffic by protocol.

RP. Rendezvous Point. Used with IP Multicast.

RPU. Remote Power Unit.

RTOS. See “Real-Time Operating System” on page 384.

S

SDL. Synchronous Data Link.

Simple Network Management Protocol. SNMP is the protocol governing network management and the monitoring of network devices and their functions. It is not necessarily limited to TCP/IP networks. The versions have the following differences:

SNMPv1 (full): Security is based on community strings.

SNMPsec (historic): Security is based on parties. Few, if any, vendors implemented this version of the protocol, which is now largely forgotten.

SNMPv2p (historic): For this version, much work was done to update the SNMPv1 protocol and the SMIv1, and not just security. The result was updated protocol operations, new protocol operations and data types, and party-based security from SNMPsec.

SNMPv2c (experimental): This version of the protocol is called community string-based SNMPv2. It is an update of the protocol operations and data types of SNMPv2p, and uses community-based security from SNMPv1.

SNMPv2u (experimental): This version of the protocol uses the protocol operations and data types of SNMPv2c and security based on users.

*SNMPv2** (experimental): This version combined the best features

of SNMPv2p and SNMPv2u. (It is also called SNMPv2star.) The documents defining this version were never published as RFCs.

SNMPv3 (proposed): This version of the protocol is a combination of user-based security and the protocol operations and data types from SNMPv2p and support for proxies. The security is based on that found in SNMPv2u and SNMPv2*, and updated after much review. The documents defining this protocol will soon be published as RFCs.

SimpleX signaling. SX is one of IEEE 802.3's designations for media. For example, 1000SX indicates 1000 gigabit Ethernet over "short haul" or "short wavelength" optical fiber.

SMC1. A model of Serial Management Controller from Motorola.

SMII. Serial Media Independent Interface.

SNMP. See "Simple Network Management Protocol" on page 384.

SODIMM. Small Outline Dual Inline Memory Module.

SRAM. Static Random Access Memory.

STP. Spanning Tree Protocol. See "802.1D" on page 373 for more information.

T

TBI. Ten Bit Interface.

Telnet. A character-based UNIX application that enables users with a Telnet server account to log on to a UNIX computer and utilize its resources.

TFTP. See "Trivial File Transfer Protocol" on page 385.

Trivial File Transfer Protocol.

TFTP is a simple form of the File Transfer Protocol (FTP). TFTP uses the User Datagram Protocol (UDP, a direct protocol used to communicate datagrams over a network with little error recovery) and provides no security features. It is often used by servers to boot diskless workstations, X-terminals, and routers.

Trunking. The process of combining a set of trunks that are traffic-engineered as a unit for the establishment of connections between switching systems in which all of the communications paths are interchangeable.

U

UPM. User Programmable Machine.

UPMA. The first of two UPMs in Motorola's MPC855T processor.

UPMB. The second of two UPMs in Motorola's MPC855T processor.

USP. An abbreviation that represents Unit, Slot, Port.

V

Virtual Local Area Network.

Operating at the Data Link Layer (Layer 2 of the OSI model), the VLAN is a means of parsing a single network into logical user groups or organizations, as if they physically resided on a dedicated LAN segment of their own. In reality, this virtually defined community may have individual members peppered across a large, extended LAN. The VLAN identifier is part of the 802.1Q tag, which is added to an Ethernet frame by an 802.1Q-compliant switch or router. Devices recognizing 802.1Q-tagged frames maintain appropriate tables to track VLANs. The first three bits of the 802.1Q tag are used by 802.1P to establish priority for the packet.

VLAN. See "Virtual Local Area Network" on page 386.

vMAN. Virtual Metropolitan Area Network.

W

WAN. See "Wide Area Network" on page 386.

Web. Also known as World-Wide Web (WWW) or W3. An Internet

client-server system to distribute information, based upon the hypertext transfer protocol (HTTP).

Wide Area Network. A WAN is a computer network that spans a relatively large geographical area. Typically, a WAN consists of two or more local-area networks (LANs).

X

X.500. A directory standard that enables applications like e-mail to access information that can either be central or distributed. The benefit of a directory is the ability to minimize the impact on the user of changes to a network. The standard is broken down under subsequent standards, as follows:

X.501 Models

X.509 Authentication framework

X.511 Abstract service definition

X.518 Procedures for distributed operation

X.519 Protocol specifications

X.520 Selected attribute types

X.521 Selected object types

XModem. One of the most popular file transfer protocols (FTPs). Xmodem is fairly effective at detecting errors. It sends blocks of data together with a checksum and then waits for acknowledgment of the block's receipt. The waiting

slows down the rate of data transmission considerably, but it ensures accurate transmission. Xmodem can be implemented either in software or in hardware. Many modems, and almost all communications software packages, support Xmodem. However, it is useful only at relatively slow data transmission speeds (less than 4,800 bps). Enhanced versions of Xmodem that work at higher transmission speeds are known as Ymodem and Zmodem.

9 Index

- A**
- address-conflict 220
 - areaid 19
 - auto-disable reason 135
 - auto-disable timer 137
 - auto-negotiate 138
 - auto-negotiate all 139
- B**
- boot skip-aca-on-boot 221, 221
 - bridge address-learning 80
 - bridge address-relearn detect operation 80
 - bridge address-relearn detect threshold 81
 - bridge aging-time 82
 - bridge duplex-mismatch-detect operation 83
 - bridge fast-link-detection 83
 - bridge framesize 46
 - bridge vlan-learning 84
 - broadcasts
 - broadcast storm recovery mode 190, 193
- C**
- cable-crossing 140
 - classofservice dot1pmapping 72
 - classofservice ip-dscp-mapping 73
 - classofservice trus 74
 - clear arp-table-switch 223
 - clear commands
 - clear arp-table-switch 223
 - clear config 223
 - clear pass 225
 - clear traplog 226, 227
 - clear vlan 227
 - clear config 223
 - clear config factory 223
 - clear counters 224
 - clear eventlog 222
 - clear hiper-ring 224
 - clear igmpsnooping 224
 - clear inlinepower 283
 - clear lldp config all 256
 - clear mac-addr-table 225
 - clear pass 225
 - clear port-sec 351
 - clear ring-coupling 227
 - clear signal-contact 226
 - clear traplog 226
 - clear vlan 227
- Competence Center 399
- config commands
- config loginsession 210
 - config port admin-mode 184, 185
 - config port linktrap 186, 187
 - config port physical-mode 189
 - config switchconfig broadcast 190, 191, 193
 - config switchconfig flowcontrol 194, 195
 - config users add 214, 215
 - config users delete 213, 214, 215
 - config users passwd 216
 - config vlan add 196
 - config vlan delete 196
 - config vlan interface acceptframe 198, 199, 204
 - config vlan name 201
 - config vlan participation 202, 203
 - config vlan ports ingressfilter 200, 205
 - config vlan ports pvid 206, 208
 - config vlan ports tagging 207, 209
 - config switchconfig flowcontrol 194, 195
 - config users delete 213, 214, 215, 216
 - config users passwd 213, 214, 215, 216
 - config vlan delete 196
 - config vlan ports acceptframe 208
 - config vlan ports ingressfilter 199, 204, 205, 206
 - configuration reset 223
 - config-watchdog 228
 - copy 228
 - copy nvram clibanner 232
 - copy nvram startup-config 233
 - copy system bootcode 234
 - copy system image 233
 - copy system running-config 234
 - copy nvram capture 230
 - copy nvram capture aca capture 230
 - copy nvram clibanner 229
 - copy nvram errorlog 230
 - copy nvram traplog 231
 - copy system running-config 231
- D**
- device configuration commands 201
 - device-status connection-error 234
 - device-status monitor 235

dhcp-relay	353, 354	lldp tlv gmpr	261
dip-switch operation	142	lldp tlv igmp	262
disconnect	210	lldp tlv link-aggregation	258
duplex settings	189	lldp tlv mac-phy-config-state	259
		lldp tlv max-frame-size	259
		lldp tlv mgmt-addr	259
E		lldp tlv pnio	260
ethernet-ip	84	lldp tlv pnio-alias	260
		lldp tlv pnio-mrp	260
F		lldp tlv port-desc	261
fast-hiper-ring	336	lldp tlv portsec	262
flow control	194, 195	lldp tlv port-vlan	261
frame acceptance mode	198, 199, 204	lldp tlv protocol	263
		lldp tlv ptp	262
G		lldp tlv sys-cap	263
Global Config Mode	35	lldp tlv sys-desc	263
		lldp tlv sys-name	264
H		lldp tlv vlan-name	264
hiper-ring	330	logging buffered	126
hiper-ring mode	330	logging buffered wrap	127
hiper-ring port primary	331	logging cli-command	128
hiper-ring port secondary	331	logging console	129
hiper-ring recovery-delay	332	logging host	130
		logging host reconfigure	131
I		logging host remove	131
IEEE 802.1Q	198, 199, 204	logging snmp-requests get operation	131
ingress filtering	200, 205	logging snmp-requests get severity	132
inlinepower (Global Config)	282	logging snmp-requests set operation	132
inlinepower (Interface Config)	283	logging snmp-requests set severity	133
Interface Config Mode	36	logging syslog	133
inventory	168, 169, 170, 171, 173, 174	logging syslog port	134
ip http secure-port	360	logical slot/port	20
ip http secure-protocol	361	logout	236
ip http server	362	logout command	236
ip https certgen	365		
ip https port	365	M	
ip https server	364	macaddr	19
		macfilter	143
L		macfilter adddest	144
Line Config Mode	36	macfilter adddest all	145
link traps		media-module	141
interface	186, 187	media-module remove	141
lldp	252	monitor session	146
LLDP - Link Layer Discovery Protocol	244	monitor session mode	148
lldp admin-state	256	monitor session source/destination	149
lldp chassis tx-interval	255	mrp current-domain	325
lldp config chassis admin-state	253	mrp delete-domain	327
lldp config chassis notification-interval	253	mrp new-domain	327
lldp config chassis re-init-delay	254		
lldp config chassis tx-delay	254	N	
lldp config chassis tx-hold-mult	255	name	265
lldp fdb-mode	257	network javascriptmode	85
lldp hm-mode	257	network mgmt_vlan	70
lldp max-neighbors	258	network mgmt-access add	86
lldp notification	258		

Index

network mgmt-access delete	86	S	
network mgmt-access modify	87	Schulungsangebot	399
network mgmt-access operation	88	selftest ramtest	163
network mgmt-access status	88	selftest reboot-on-error	165
network parms	89	selftest reboot-on-hdxerror	164
network priority	90	serial timeout	92
network protocol	89	sessions	
no dhcp-relay	353	closing	210, 236
no lldp	252	displaying	211
no snmp	271	set igmp	150, 151
no snmp anycast address	272, 273, 279	set igmp aging-time-unknown	151
no snmp client server	275	set igmp automatic-mode	152
no snmp client server primary	276, 277, 278	set igmp forward-all	153
no storm-control broadcast	190	set igmp forward-unknown	154
		set igmp groupmembershipinterval	156
P		set igmp interfacemode	157
passwords		set igmp lookup-interval-unknown	157
changing user	216	set igmp lookup-resp-time-unknown	158
resetting all	225	set igmp maxresponse	159
ping	236	set igmp querier max-response-time	160
ping command	234, 235, 236, 237	set igmp querier protocol-version	160
PoE - Power over Ethernet	281	set igmp querier status	161
ports		set igmp querier tx-interval	161
administrative mode	184, 185	set igmp query-ports-to-filter	162
frame acceptance mode	198, 199, 204	set igmp static-query-port	155
information	176	set pre-login-banner text	163
ingress filtering	200, 205	set prompt	92
link traps	186, 187	show	42
physical mode	189	show address-conflict	42
tagging	207, 209	show arp switch	43, 48
VLAN IDs	206, 208	show authentication	48
VLAN information	183	show auto-disable brief	166
port-sec action	347	show auto-disable reasons	167
port-sec allowed-ip	348	show boot skip-aca-on-boot	221, 221
port-sec allowed-ip add	348	show bridge address-learning	43
port-sec allowed-ip remove	349	show bridge address-relearn-detect	44
port-sec allowed-mac	349	show bridge aging-time	44
port-sec allowed-mac add	350	show bridge duplex-mismatch-detect	45
port-sec allowed-mac remove	350	show bridge framesize	45
port-sec mode	346	show bridge vlan-learning	45
Privileged Exec Mode	35	show classofservice dot1pmapping	75
profinetio	91	show classofservice ip-dscp-mapping	76
		show classofservice trust	77
		show commands	
R		show inventory	168, 169, 170, 171, 173, 174
reboot	240	show loginsession	211
reload	242	show port	176
reset system command	240, 242	show stats switch detailed	49, 51, 56
ring-coupling	341	show switchconfig	177, 178, 179
ring-coupling config	342	show users	212
ring-coupling net-coupling	343	show vlan detailed	180
ring-coupling operation	343	show vlan interface	183
ring-coupling port	344		
ring-coupling redundancy-mode	344		

show vlan summary	182	show selftest	178
show config-watchdog	46	show serial	96
show device-status	47	show signal-contact	62
show dhcp-relay	353, 355	show slot	64
show dip-switch	168	show snmp-access	97
show ethernet-ip	93, 96	show snmpcommunity	98
show eventlog	48	show snmptrap	99
show fast-hiper-ring	334	show snmp	266
show hiper-ring	329	show snmp anycast	268
show hiper-ring info	330	show snmp client	268
show igmpsnooping	169	show snmp operation	269
show inlinepower	281	show snmp server	270
show inlinepower port	281	show snmp status	270
show interface	49	show snmp time	271
show interface ethernet	51	show spanning-tree	287
show interface switchport	58	show spanning-tree brief	288
show interface utilization	59	show spanning-tree interface	290
show inventory	200	show spanning-tree mst detailed	291
show ip http	363	show spanning-tree mst port detailed	292
show ip https	366	show spanning-tree mst port summary	295
show lldp	244	show spanning-tree mst summary	296
show lldp chassis tx-interval	247	show spanning-tree summary	297
show lldp config	244	show spanning-tree vlan	298
show lldp config chassis	245	show storm-control	179
show lldp config chassis admin-state	245	show storm-control limiters port	179
show lldp config chassis notification-interval	245	show switchconfig	82
show lldp config chassis re-init-delay	246	show sysinfo	66, 77, 78
show lldp config chassis tx-delay	246	show telnet	100
show lldp config chassis tx-hold-mult	246	show telnetcon	101
show lldp config port	248	show temperature	68
show lldp config port tlv	249	show trapflags	102
show lldp remote-data	250	show users	212
show logging	60	show vlan	180
show loginsession	211, 217	show vlan brief	182
show mac-addr-table	61	show vlan port	183
show mac-filter-table igmpsnooping	170	shutdown	184
show mac-filter-table multicast	171	shutdown all	185
show mac-filter-table static	172	signal-contact	237
show mac-filter-table staticfiltering	173	signal-contact connection-error	237
show mac-filter-table stats	174	slot/port	20
show monitor session	175	snmp trap link-status	186
show mrp	323	snmp trap link-status all	187
show mrp current domain	324	snmp-access global	103, 104
show network	82, 93	snmp-access version v3-encryption	104
show network mgmt-access	95	snmp-server	70, 106
show port	176, 194, 195	snmp-server community	107
show port-sec mode	345	snmp-server community ipaddr	109
show port-sec port	345	snmp-server community ipmask	110
show reboot	241	snmp-server community mode	111
show reload	243	snmp-server community ro	112
show ring-coupling	339	snmp-server community rw	112
show rmon-alarm	177	snmp-server contact	108
show running-config	65	snmp-server enable traps	113
		snmp-server enable traps linkmode	116

Index

snmp-server enable traps multiusers	117	storm-control egress-limiting	190
snmp-server enable traps port-sec	118	storm-control flowcontrol	194
snmp-server enable traps stpmode	119	storm-control flowcontrol per port	195
snmp-server location	112	storm-control ingress-limit	193
snmp-server sysname	113	storm-control ingress-limiting	191
snmptrap	120	storm-control ingress-mode	191, 193
snmptrap ipaddr	121	switch	
snmptrap mode	122	information, related 201 commands	177,
snmptrap snmpversion	123	178,	179
SNTP - Simple Network Time Protocol	266	inventory	168, 169, 170, 171, 173, 174
sntp anycast address	272	resetting	240, 242
sntp anycast transmit-interval	272	statistics, related 201 commands	49, 51,
sntp anycast vlan	273	56	
sntp client accept-broadcast	273	System Information and Statistics Commands	70
sntp client disable-after-sync	274	System Utilities	220, 359
sntp client offset	274	system utilities	220–236
sntp client request-interval	275	T	
sntp client server primary	276	tagging	207, 209
sntp client server secondary	277	telnet	
sntp client threshold	278	sessions, closing	210, 236
sntp operation	279	sessions, displaying	211
sntp server disable-if-local	280	telnetcon maxsessions	124
sntp time system	280	telnetcon timeout	125
spanning-tree	299	temperature	239
spanning-tree auto-edgeport	300	traceroute	222
spanning-tree bpduguard	301	transport input telnet	79
spanning-tree bpdumigrationcheck	188	trap log	
spanning-tree configuration name	302	clearing	226, 227
spanning-tree configuration revision	303	U	
spanning-tree edgeport	304	User Account Management Commands	210
spanning-tree forceversion	305	user account management commands	
spanning-tree forward-time	306, 308	201 commands	210
spanning-tree guard loop	307	User Exec Mode	35
spanning-tree guard none	308	users	
spanning-tree guard root	309	adding	214, 215
spanning-tree hello-time	310	deleting	213, 214, 215
spanning-tree hold-count	311	displaying	212
spanning-tree max-age	312	passwords	216, 225
spanning-tree max-hops	313	users access	214
spanning-tree mst	314	users defaultlogin	213
spanning-tree mst instance	318	users login	213, 359
spanning-tree mst priority	316	users name	215
spanning-tree mst vlan	317	users passwd	216
spanning-tree port mode	319	users snmpv3 accessmode	217
spanning-tree port mode all	320	users snmpv3 authentication	218
spanning-tree stp-mrp-mode	321	users snmpv3 encryption	219
spanning-tree tcnguard	322	utilization alarm-threshold	69
speed	189	V	
speeds	189	vlan	196
statistics			
switch, related 201 commands	49, 51, 56		
storm-control broadcast	190		
storm-control broadcast (port-related)	192		
storm-control egress-limit	192		

vlan acceptframe	198, 199
vlan ingressfilter	200
VLAN Mode	35
vlan name	201
vlan participation	202
vlan participation all	203
vlan port acceptframe all	204
vlan port ingressfilter all	205
vlan port priority all	77
vlan port pvid all	206
vlan port tagging all	207
vlan priority	78
vlan pvid	208
vlan tagging	209
vlan0-transparent-mode	197
VLANs	
adding	196
changing the name of	201
deleting	196
details	180
frame acceptance mode	198, 199, 204
IDs	206, 208
ingress filtering	200, 205
participation in	202, 203
port information	183
resetting parameters	227
summary information	182
tagging	207, 209

W

Web connections, displaying	211
-----------------------------	-----

Further support

■ **Technical Questions**

For technical questions, please contact any Hirschmann dealer in your area or Hirschmann directly..

You will find the addresses of our partners on the Internet at <http://www.hirschmann.com>

Contact our support at <https://hirschmann-support.belden.eu.com>

You can contact us

in the EMEA region at:

- ▶ Tel.: +49 (0)1805 14-1538
- ▶ E-mail: hac.support@belden.com

in the America region at:

- ▶ Tel.: +1 (717) 217-2270
- ▶ E-mail: inet-support.us@belden.com

in the Asia-Pacific region at:

- ▶ Tel.: +65 6854 9860
- ▶ E-mail: inet-ap@belden.com

■ **Hirschmann Competence Center**

The Hirschmann Competence Center is ahead of its competitors:

- ▶ Consulting incorporates comprehensive technical advice, from system evaluation through network planning to project planning.
- ▶ Training offers you an introduction to the basics, product briefing and user training with certification.
The current technology and product training courses can be found at <http://www.hicomcenter.com>
- ▶ Support ranges from the first installation through the standby service to maintenance concepts.

With the Hirschmann Competence Center, you have decided against making any compromises. Our client-customized package leaves you free to choose the service components you want to use.

Internet:<http://www.hicomcenter.com>



HIRSCHMANN

A **BELDEN** BRAND